

anko

Instruction Manual



Bluetooth® Headphone Eyemask

K: 43-645-497 | T: 71-832-333

Model No: EB500694

MADE IN CHINA

Before use please read this manual carefully.
Please retain for future use.



Dangers of Injury

- Keep the product and the package away from children and animals, as they can swallow small parts.
- Supervise children using the product. It is not a toy.
- Always maintain a gap of at least 10 cm between the headphones and a pacemaker or an implantable cardioverter defibrillator (ICD) as the product generates magnetic fields.



Dangers of Fire and Explosion

- Do not expose the headphones to any high temperatures over 70°C (like hair dryer, heating, prolonged sunlight etc.) The battery inside of the headphones may overheat and explode as a result.
- Do not crush or pierce the battery! Do not expose the battery to high pressure, as this may cause an internal short-circuit and overheating.
- This product contains batteries that are non-replaceable. The headphones and the battery must not be taken apart, thrown into a fire, immersed in liquids or short circuited.
- Do not cover the product while charging the battery. Charge the product in a well-ventilated environment.
- Charge the product only with a compatible power source from reputable manufacturer e.g. power adapter or power bank. The maximum rating should not exceed 5V- 2A.
- If the headphones are not used for a prolonged period of time, recharge it regularly (roughly every 3 months).




Warning and Care Instruction: Remove batteries prior to washing

Intended Use

- The wireless musical eyemask is suitable for Bluetooth compatible device like mobile phones. Users can listen to music and conduct phone calls hands free.
- The product is for personal use only and is not intended for commercial applications.

Interface

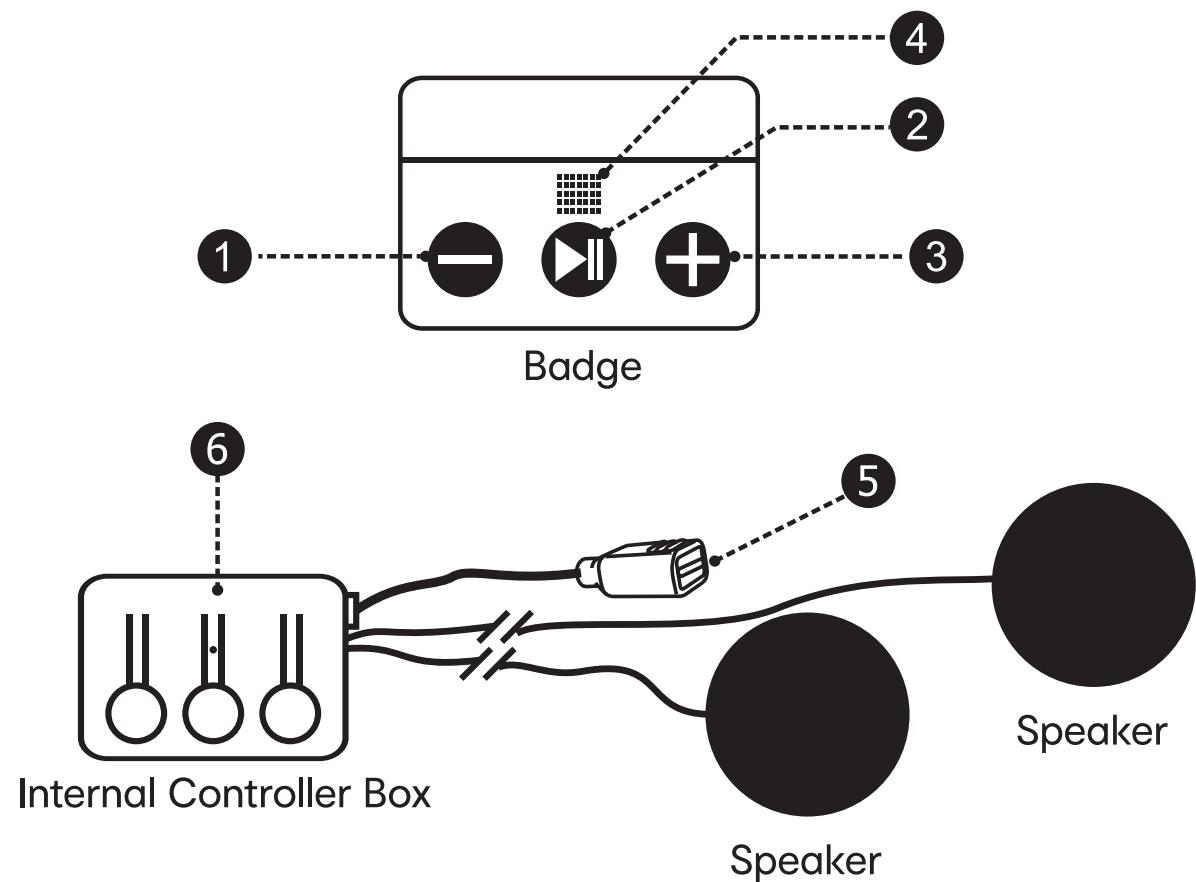

- ① Volume Down/Previous Song
- ② Play/Pause/Answer/Hang Off
- ③ Volume Up/Next Song

- ④ LED Status Light/Microphone
- ⑤ USB-C Charging Port
- ⑥ Internal Controller Box

LED Indicators

STATUS	INDICATOR
Bluetooth Pairing Mode	Red and blue light flash alternately
Bluetooth Connected	Blue light flashes slowly
White Noise Mode	Blue light flashes slowly
Charging	Solid red light
Charging Complete	Solid blue light

Specifications

Bluetooth connection: Anko43645497

Input: 5V \equiv 1A

Cable length: 45–46cm

Product weight: 111g

Battery: 3.7V 300mAh Rechargeable Li-polymer Battery

Charge Time: 2–3 Hours

Colour: Grey

Fabric: Face to front: 93% Polyester 7% Elastane

Back: 89% Nylon 11% Elastane

Package Contents

1 x Eyemask

1 x USB-A to USB-C Charging Cable

1 x Instruction Manual

1 x Pouch

How to Use Bluetooth

Pair with a Bluetooth Device

Before you can use this product through Bluetooth, it needs to be paired with your device.

1. Long Press the  button for 3 seconds until the LED Status Light  starts to flash red and blue alternately.
2. Switch on Bluetooth on your phone or other Bluetooth enabled device.
3. Search and select “Anko43645497” from the list of found devices.
4. After paired successfully, only the blue light flashes slowly.
5. When switched on next time, it will automatically search for and attempt to connect with the last paired device “Anko43645497”.

Pair with a New Bluetooth Device

Follow below steps to pair with a new Bluetooth device:

1. Make sure the product is disconnected with the previous paired device.
2. Follow “How to Pair with a Bluetooth Device” instructions from step 1.

NOTE: To save power, it will switch off automatically if there's no Bluetooth connection for 3 minutes.

Playing Music

1. Play/Pause music: Short Press the  button to play or pause music.
2. Adjust volume: Short Press the  button or  button to increase volume or decrease volume.
3. Music selection: Long Press the  button or  button to select previous songs or next songs.

Call-Handling

1. Answer a call: When a call coming, it will play a ring tone. Short Press the button to answer. During the call, you can increase or decrease the volume by Press  or  button.

2. Reject a call: When a call coming, it will play a ring tone. Long Press the button for 2 seconds to reject it.
3. End a call: During a call, Short Press the  button to end a call.
4. Re-dial: Double Press the  button in quick succession to redial the last called phone number.

How to Use White Noise

It comes with 20 soothing sounds and 4 relaxing music. These includes: Bird Noises, Babbling Brook, Ocean Waves, Wind, Thunder, Rain Drops, Summer Night, Frogs, Crickets, Bonfire, Coffee House, Fan, Train, Keyboard, Clock, Wind Chimes, White Noise, Pink Noise, Brown Noise, Piano.

1. Long Press the  button for 3 seconds until the LED Status Light  starts to flash red and blue alternately.
2. Double Press the  button in quick succession to enter White Noise mode.
3. Short Press the  button to play or pause sound/music.
4. Long Press the  button to select next sound/music. Long Press the  button to select previous sound/music.
5. Short Press the  button to increase volume up, Short Press the  button to decrease volume.

NOTE:

1. At any time, you can Double Press the  button to switch between White Noise mode and Bluetooth mode.
2. In White Noise mode, the Bluetooth will be disconnected.

How to Charge

Make sure the product is switched off, open the zipper on the eyemask and you will see the Charging Port **5**. Then:


1. Connect the standard USB-C Charging cable to the Charging Port **5**.
2. The LED Status Light **4** will turn to red whilst charging. It will turn to blue as soon as the battery is fully charged.

How to Fold the Eyemask

Step 1: Lay the eyemask flat.



Step 2: Fold one side.

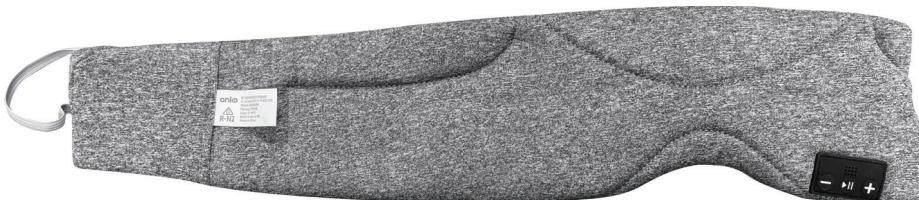

Step 3: Fold another side.



Step 4: Fold in half and tie the rope.



Remove All Electronic Components Before Washing the Eyemask

Step 1: Open the zipper.



Step 2: Find the internal controller box ⑥.



Step 3: Remove the internal controller box ⑥.



Step 4: Find the speakers position.



Step 5: Remove two speakers.



Step 6: Remove all electronic components.



Install All Electronic Components

Step 1: You can refer to below image for the position of each electronic component in the eyemask.



Step 2: The speaker can move left and right, and there is some friction inside to prevent the earphones from moving easily, so you need to move it slowly with your fingers.



Step 3: Put the internal controller box ⑥ to original position.



Step 4: Put two speakers to original position. The blue side is close to the inside of the eyemask.



Step 5: Put all electronic components to original position. Close the zipper.

Trouble Shooting

If you experience problems in connecting with your device, please try following:

1. Ensure the product is charged, switched on, paired with and connected to your device.
2. Check if the product is in the effective range (10 meters/33 feet) from your device and there's no obstructions like walls or other electronics devices between the product and the device.
3. Only one device can be connected with the product at a time, ensure there's no other Bluetooth device already connected with the product.
4. If you receive an intermittent signal, please use close to the product.

Washing Guidelines

Please remove the electronic (controller box, left speaker and right speaker) from the eyemask before washing. Handwash only.

 Wash with cold water	 DO NOT dry clean
 Hand wash ONLY	 DO NOT bleach
 DO NOT tumble dry	 DO NOT iron



WARNING: Avoid excessive volumes, particularly over extended periods or in the case of frequent use. Listening to music at maximum volume for prolonged periods can lead to hearing damage. It's best to avoid extreme volume when using this product, especially for extended periods. For your own safety, please be aware of your surroundings when using this product.

12 Month Warranty:

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.