

103 mm

100 mm

 
anko

Instruction manual

K: 43645633 | T: 71833675

Model: JLR-81141

Jellyfish Ambient Light

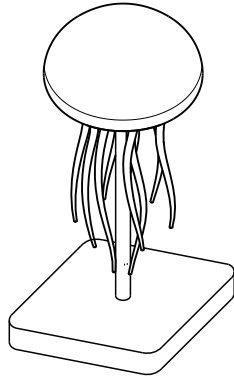

Please read this manual carefully before using the product and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all these instructions carefully before using the product, and to save them for future reference or new users.

WARNING:

1. Children must not use this product without adult supervision.
2. Do not expose the product to fire or high temperatures over 45°C.
3. Keep away from water, liquids, or wet areas.
4. Use a dry cloth to clean this product. Do not use chemicals on this product.
5. Make sure the product has plenty of ventilation during charging.

6. Do not place the product in direct sunlight, heat or the under the windshield.
7. Do not try to repair or disassemble this product.
8. When product is not in use, make sure it is correctly turned off and stored in a cool dry place.
9. When disposing of this product. Do so responsibly following local government requirements.
10. This device is designed for household use only. It is not suitable for commercial use.
11. LED's are not replaceable. When it reaches its end of life, the whole light will need to be replaced.
12. The rechargeable battery is permanently built into the product and can not be replaced.
13. Never leave unattended whilst charging.
14. If the product shows damages, do not use it any longer and have it re-paired by a qualified technician, or contact our customer service department. Do not disassemble the product, and do not try to repair it yourself.

15. Only charge the product with an approved and suitable USB charger that complies to the relevant standards.
16. When disposing of this product, please do so in accordance with the local government directives.
17. Use provided charging cable to charge the product only.
18. Using unapproved or incompatible power supplies, and or chargers may cause fire, explosion, or other hazards.
19. If the product malfunctions due to electrostatic discharge or a brief power surge, turn off or disconnect power then turn on or reconnect it.
20. Only use the supplied USB cable and a 5VDC 1A SELV power source for charging.
21. If the device is damaged, swollen, or is leaking, stop using it immediately.
22. Keep out of reach of children during charging.
23. Dispose of the product in accordance with local electronic waste regulations.

24. For indoor use only.
25. For decoration only, this is not a toy, keep away from children and pets.

Package contents:

 
- 1 × Aurora jellyfish body
- 3 × Long tentacles
- 6 × Short tentacles
- 1 × Underprop pillar
- 1 × Underprop base
- 1 x USB-C Cable (30cm, Type A to Type C)
- 1x Instruction Manual

Product Specifications:

Physical Size: 110 × 110 × 195mm
Battery type: Rechargeable Li-ion battery
Battery Capacity: 3.7V, 700mAh

Input rating: DC 5V=1A
Continuous operation time: Up to 3 hours
Charging time: Approx. 1.5 hours

Product diagram

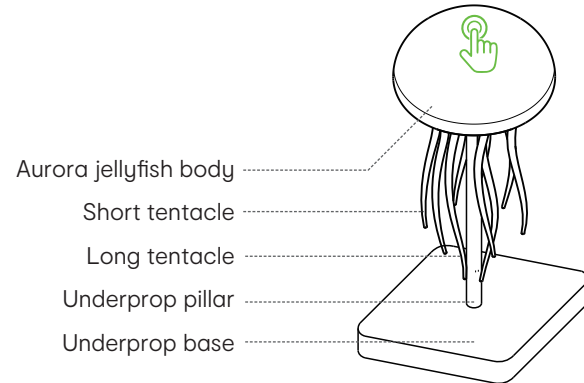


OPERATION INSTRUCTIONS

1. Assembly:

① Assemble the tentacles according to the diagram.



 Place the long tentacles in the center, surrounded by the short tentacles.

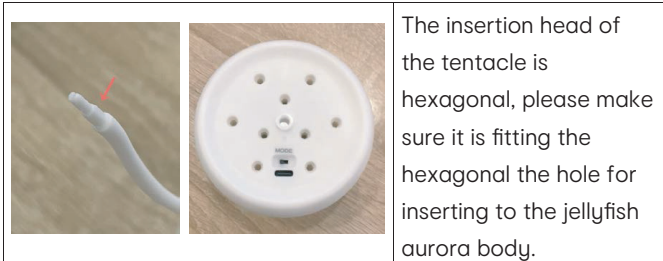


The insertion head of the tentacle is hexagonal, please make sure it is fitting the hexagonal the hole for inserting to the jellyfish aurora body.

② Assemble the underprop pillar to the aurora jellyfish body and underprop base.



 
Inserting one side of the underprop pillar to the aurora jellyfish body.

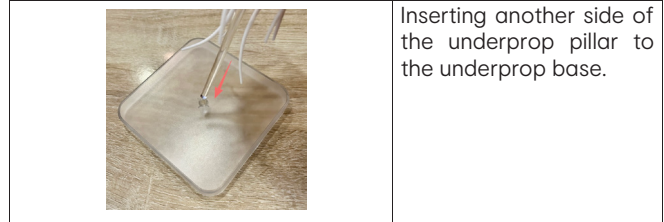

Inserting another side of the underprop pillar to the underprop base.

2. Power Mode Switch:

 - Slide LEFT→**AUTO-OFF Mode (Recommended)**: The light will automatically turn off after 30 minutes.
- Slide RIGHT→**ON Mode**: The light remains on until manually turned off.

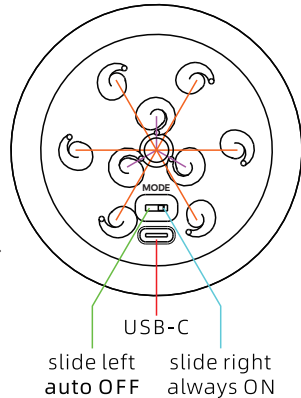


3. Touch control:

- **Turn On:** Touch and hold the top area for 3 seconds. The light will power on in **Multicolor Mode** (static multicolor display by default).
- **Mode Switching:**
- 1st press: Switch to **Color-Changing Mode**(the light automatically cycles through colors).
- 2nd press: Switch to **Color Selection Mode**. The light starts from **Red** and cycles through the following static colors with each press: Red → Orange → Yellow → Green → Light Blue → Dark Blue → Purple → Pink → White → Multicolor (static).
- **Memory Function:** After being turned off, the light will **resume the last used lighting effect** when powered on again.
- **Turn Off:** Touch and hold the top area for 3 seconds.
- 4. If the light flickers red 3 times, it indicates a low battery. Please recharge immediately.

How to charge

 - Before first use, please fully charge the product.
- Connect the provided USB-C cable to the device and a certified 5V/1A power source.
- The indicator is red and always on during charging and turn off after fully charged.
- It takes approximate 1.5 hours to fully charge the product.

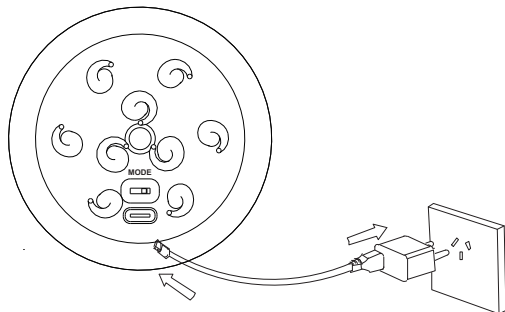

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567