

anko

WHITE NOISE SPEAKER LIGHT

Instruction manual

K: 43645664 | T: 71833705

Model: JLR-81024



Please read this manual carefully before using the product and retain it for future reference.

Package contents:

- 1× Speaker
- 1× USB-C Cable (Type A to Type C)
- 1× Instruction Manual

Product Specifications:

 

Product Dimension: 180 x 73 x 90 mm
 Input rating: 5V==1A
 Bluetooth version: 5.4
 Speaker power: 2 x 3Ω 5W
 Sensitivity: 90dB±3dB
 Frequency: 20Hz - 20KHz
 Charging time: Approx. 4 hours
 Play time: up to 20 hours (at 80% volume)
 Working distance: 10m (no obstacles)
 Battery capacity: 3.7V, 2600mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information

- This product contains a rechargeable lithium-ion battery (non-replaceable).
- Do not leave the device connected to the charger for extended periods.
- Do not allow the battery to fully discharge before recharging.
- Do not disassemble, crush, puncture, or modify the battery or device.
- Handle with care and avoid strong impacts or dropping.
- Do not charge the device unattended.

- Ensure the product is powered OFF before connecting or disconnecting the charger.
- Avoid exposure to high temperatures, direct sunlight, fire or liquids.
- If the device is damaged, swollen, or leaking, stop using it immediately.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Use a certified 5VDC 1A USB power adaptor (not included) that complies with local safety standards.

Product diagram

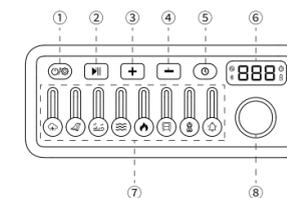

	Raining		Bonfire
	Birdsong		train
	Wave		Chirping
	Stream		Bell tone

1. Power/Mode Button

Short press: Switch between White noise mode and Bluetooth mode
 Long press: turn ON/OFF the device

2. Play/Pause Button

Short press: Play or pause the current audio (music or white noise).
 Note: White noise can only be played or paused after White Noise Mode is already running.

3. "+" Button

Short press: Increase Volume
 Long press: Next song

4. "-" Button

Short press: Decrease Volume
 Long press: Previous song

5. Timer Button

Short press: Toggle timed shutdown ON / OFF
 Long press: Enter timer setting mode (then turn the Knob to set time)

6. Screen display

Displays charging status, battery level icon, current mode (White Noise / Bluetooth), current volume level (L00-L15), timer status, and Bluetooth pairing status.

7. Natural tone button

Push upward: Gradually increase the white noise volume
 Push downward: Gradually decrease the white noise volume until muted.

8. Knob

Short press: Turn the light ON / OFF.
 Long press: Switch between night light and ambient light modes.
 Rotate clockwise: increase brightness or value.
 Rotate counterclockwise: decrease brightness or value.

Note:

- Total 16 volume levels (L00-L15), L00 = mute.
- Total 8 natural sounds: Rain, Birdsong, Wave, Stream, Bonfire, Train, Chirping, Bell tone. Sounds can be adjusted individually and combined.

Operating Instructions

Power On / Off

- Long press the Power/Mode Button for approximately 2 seconds to turn the device ON or OFF.
- When powered on, the device will start in **White Noise Mode** by default.

Mode Switching

- Short press the Power/Mode Button to switch between White Noise Mode and Bluetooth Mode.
- In White Noise Mode, the previously selected natural sounds and volume levels will resume automatically.

Bluetooth Connection

- Activate Bluetooth on your device and select "Anko43645664" from the available list.
- When successfully connected, the device emits a prompt tone.

Note:

- The speaker will remain paired unless manually unpaired.
- The speaker will automatically reconnect to the last paired device when powered on and within range.
- Only one Bluetooth device can be connected at a time.
- If the Bluetooth connection is lost for more than 5 minutes, the device will automatically power off. The lighting function will not be affected.
- Long press the **Play/Pause button** to disconnect and clear the current pairing.

White Noise Playback

- Push the Natural Tone Button upward to increase the white noise volume.
- Push downward to decrease the volume until muted.
- The device offers 8 natural white noise sounds: Rain, Birdsong, Wave, Stream, Bonfire, Train, Chirping, and Bell tone.
- Sounds can be combined and adjusted individually.
- Total of 16 adjustable volume levels (L00-L15); L00 indicates mute.

Timer function

- Short press the Timer Button to toggle the timed shutdown feature.
- Long press to enter Timer Setting Mode; Rotation the knob to adjust the timer duration—clockwise to increase and counter clockwise to Decrease.
 - The timer can be set in 5-minute increments within a range of 5-180 minutes.
 - Short press the Timer Button again to confirm.
- When the timer expires, both the light and sound will turn off automatically.
- To cancel the timer, short press the Timer Button again.

Light Operation

- Short press the knob button to turn on light.
- Long press the knob button to switch between **Night Light Mode** and **Ambient Light Mode** (Default is **Night Light mode**).

- In **Night Light Mode**, rotate the knob to adjust brightness—clockwise to increase, counter clockwise to decrease.
 - There are 30 brightness levels (F01-F30) available.
- In the **Ambient Light Mode**, rotate the knob to switch between lighting effects: Flowing Colors (A1) → Breathing Gradient (A2) → Rainbow Gradient (A3) → Vibrant Orange (A4) → Blue (A5) → Purple (A6) → Red (A7) → Yellow (A8) → Yellowish Green (A9) → Green (A10) → Greenish Blue (A11).
- The current lighting effect code (eg., "A1") will be displayed on the screen.

Charging the device

- Before first use, fully charge the speaker.
- Use a certified 5VDC 1A USB power adaptor (not included). Only use the supplied charging cable.
- Regularly charge the device (at least once a month) to maintain battery life. Prolonged storage at low charge may reduce battery performance.
- The battery symbol [] remains on during charging and turn off when fully charged.
- When the battery level is low, the battery symbol [] blinks on the screen.
- It takes approximately 4 hours to fully charge the device.
- Do not operate the device while charging.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.



MADE IN CHINA

CUSTOMER SERVICE:
 KMART AU: 1800 124 125
 KMART NZ: 0800 945 995
 TARGET AU: 1300 753 567

