

115 mm

81 mm

anko
HYBRID ANC HEADPHONES
Instruction manual
K: 43645671 | T: 71833712
Model: JLR-81282



Please read this manual carefully before using this product and retain it for future reference.

Package contents:

- 1× Headset
- 1x 3.5mm AUX in cable
- 1× USB-C Cable (Type A to Type C)
- 1x User Manual

Product Specifications:


Bluetooth version: 6.0
Bluetooth Operating Range: Up to 10m (no obstacles)
Driver: 40mm
Impedance: 32Ohm±15%
Sensitivity: 110dB±3dB
Frequency: 20Hz – 20kHz
Battery capacity: 3.7V, 500mAh rechargeable lithium-ion battery (non-replaceable)
Charging time: Approx. 2 hours
Play time: Approx. 25 hours (at 80% volume)
Input rating: 5V = 1A

Important Safety Information

- Avoid exposing the device to high temperatures or direct sunlight for prolonged periods.
- Replacement of a battery with an incorrect type that can lead to the degradation of inbuilt safety measures.

- Disposal of a battery in fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion.
- Leaving a battery in an extremely high temperature environment can result in an explosion or the leakage of flammable liquid or gas; and a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- This product contains a rechargeable lithium-ion battery which is non-replaceable.
- Do not leave the device connected to the charger for extended periods of time.
- Do not allow the battery to fully discharge before recharging.
- Do not disassemble, crush, puncture, or modify the battery or device.
- Handle with care and avoid any strong impact or dropping.
- Do not charge the device unattended.
- Use a certified 5VDC 1A USB power adaptor (not included) that complies with local safety standards.

Product diagram

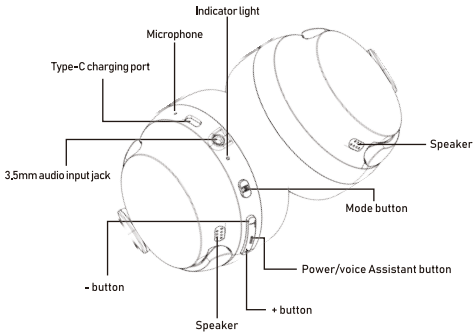

Operating Instructions

Power on/off

Long press the Power button for 3 seconds to turn on the headphones.
Long press the Power button for 5 seconds to turn off the headphones

Notes: The headphones will power off automatically if no connection is detected for 5 minutes.

Bluetooth connection

Initial Pairing

Activate Bluetooth on your device. Search and select

"Anko43645671" from the list of available Bluetooth devices. Once connected, you will hear a prompt tone and the indicator light will stop flashing.

Automatic Reconnection

After powering on, the headphones will automatically reconnect to the last paired device when within range.

Dual-Device Connection

After connecting Device A successfully, disconnect Device A, then pair Device B.
Once Device B is connected, reconnect Device A to enable simultaneous dual-device connection.

Clear Pairing Records

While not in a call, long press the + and – buttons simultaneously for 5 seconds to clear all pairing information.

Voice assistant

- Power on the headphones and connect Bluetooth.
- Double-press the Power / Voice Assistant button to activate your device's voice assistant.
For iOS: Enable Siri first, then say "Hey Siri, open [app name]."
For Android: Enable voice wake-up, then say "Hey [assistant name], open [app name]."

Playback and Call Controls

Play/Pause: Short press the power button.
Previous song: Long press – button.
Next song: Long press + button.
Decrease the volume: Short press – button.
Increase the volume: Short press + button.
Answer a call: Short press the power button.
End a call: Short press the power button during the call.
Reject a call: Long press the power button for 2 seconds.

Three-Way Calling

- Short press the Power button to hang up the current call and answer the incoming call.
- Long press the Power button to reject the incoming call.
- Double-press the Power button to place the current call on hold and answer a new call.
- During a three-way call, double-press the Power button to switch between calls.
- Short press the Power button again to hang up the current call and switch to the remaining one.

ANC and Transparency Modes

- Short press the **Mode button** to **activate Transparency Mode**.
- Short press the **Mode button** again to switch to **ANC Mode**.
- Short press once more to **turn off ANC Mode**.

Note: The indicator light turns teal when Transparency or ANC Mode is active.

Wired mode

- Connect one end of the 3.5 mm audio cable to the AUX input jack on the headphones and the other end to your device.
- In wired mode, Bluetooth and all headphone controls are disabled.
- The headphones will automatically power off when the 3.5 mm cable is inserted.

Charging the Product

- Before first use, fully charge the headphones.
- Use a certified 5VDC 1A USB power adaptor (not included). Only use the supplied charging cable.
- Regularly charge the device (at least once a month) to maintain battery life. Prolonged storage at low charge may reduce battery performance.
- The indicator light remains red while charging and turns off when fully charged.
- It takes approximate 2 hours to fully charge the product.

Low battery alert

When the battery is low, the indicator will flash red once every 5 seconds. Please recharge promptly.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc.. and any use of such marks by KMART AUSTRALIA is under licence.



MADE IN CHINA

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

