


8+
YEARS

NITRO BLITZ




BATTERY INSTALLATION:

- 1 - Open the battery compartment.
- 2 - Insert batteries into the correct + and - polarities.
- 3 - Close the cover.

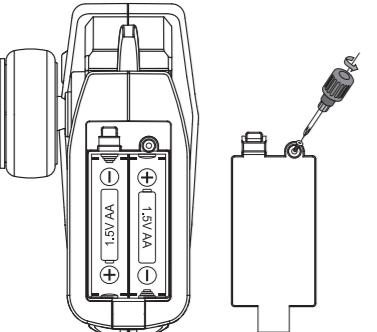


REQUIRES 2 X 1.5V AA BATTERIES
(NOT INCLUDED).

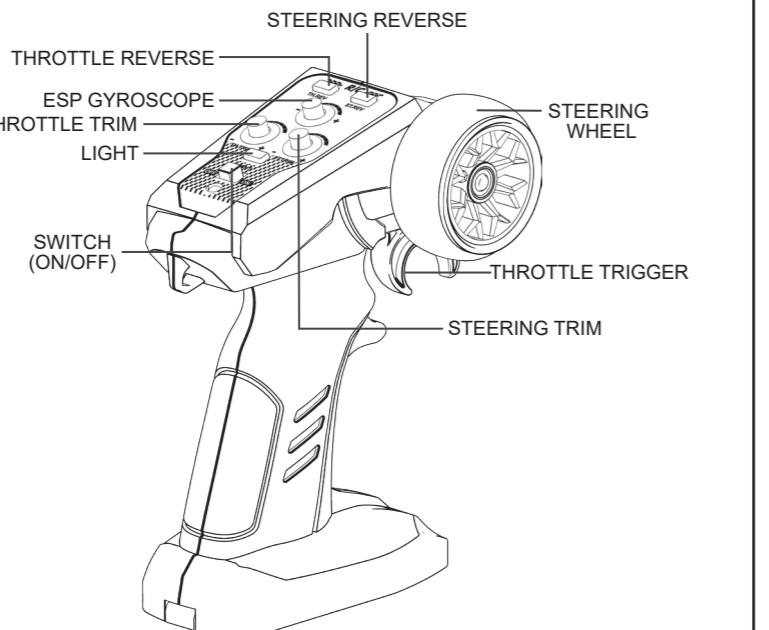


INSTALLING THE VEHICLE BATTERY:

- 1 - Loosen the screw to open the battery cover.
- 2 - Remove the battery cover, connect the rechargeable battery pack with connector and close the battery cover.

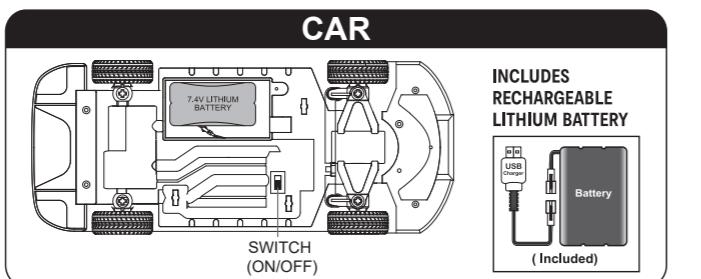

HOW TO CHARGE:

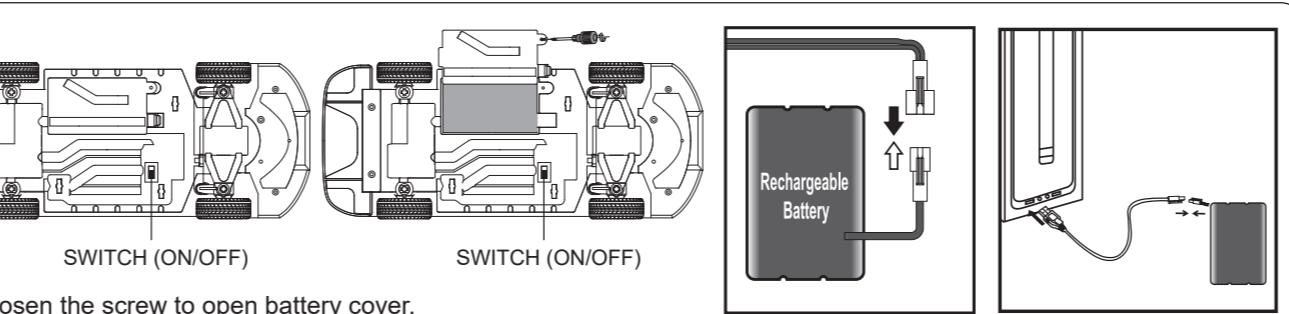









- A. Loosen the screw to open battery cover.
- B. Separate the rechargeable battery pack from connector.
- C. Connect the USB charging cable with rechargeable battery first. (The battery connector will only fit in one way, do not force the connectors together), then plug the large end of USB cable into a 5Vd.c. 2A charger (not supplied) or USB port only. The red LED light on the USB charging cable will light up and will be solid when charging.
- D. The green LED light will light up and will be solid after it has finished charging. Disconnect the USB charging cable from the USB port and then disconnect the rechargeable battery with USB charging cable.

Attention: Do not charge battery immediately after each play. Let the battery cool down for a while.

HOW TO USE:

1. Turn on the vehicle first and then turn on the transmitter.
2. Pull the trigger of the transmitter to match the vehicle.
3. When the vehicle is functioning, that means they are matched.
4. If you have more than two vehicles, please pair one by one. When the second vehicle is pairing, please always keep the first vehicle and transmitter on.
5. Please turn off both the vehicle and transmitter and re-start all pairing processes if you are changing to play with another 2.4GHz transmitter.
6. How to move forwards or backwards:
Pull the throttle trigger, the vehicle will move forwards.
Push the throttle trigger, the vehicle will move backwards.
7. Turn left or right:
Turn steering wheel clockwise, the vehicle will turn right.
Turn steering wheel anticlockwise, the vehicle will turn left.
8. How to use the THROTTLE REVERSE and STEERING REVERSE functions:
Press the throttle reverse button: Pull the throttle trigger of the transmitter to move the vehicle backward; push the throttle trigger of the transmitter to move the vehicle forward.
Press the steering reverse button: Turn the steering wheel clockwise to make the vehicle turn left; turn the steering wheel anticlockwise to make the vehicle turn right.
9. How to use the THROTTLE TRIM and STEERING TRIM functions:
Rotate the throttle trim knob left and right to adjust the vehicle speed.
Rotate the steering trim knob left and right to adjust the steering sensitivity.
10. Light: Briefly press the light button to switch the headlight modes; press and hold the light button for 2 seconds until you hear a beep from the transmitter to switch underglow lights modes.
11. ESP Gyroscope: Assists in making the vehicle's drifting more controllable and smoother.

By removing the racing tyres and installing the drifting tyres, drifting can be achieved.

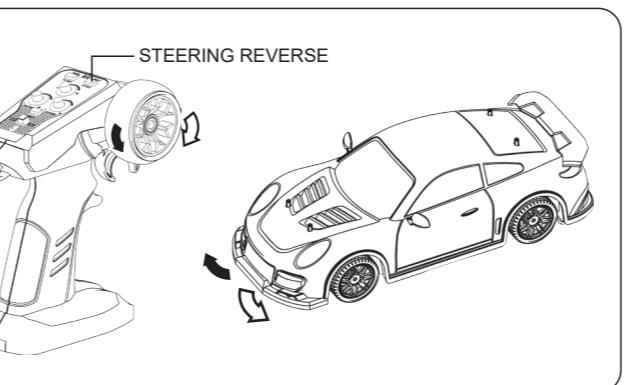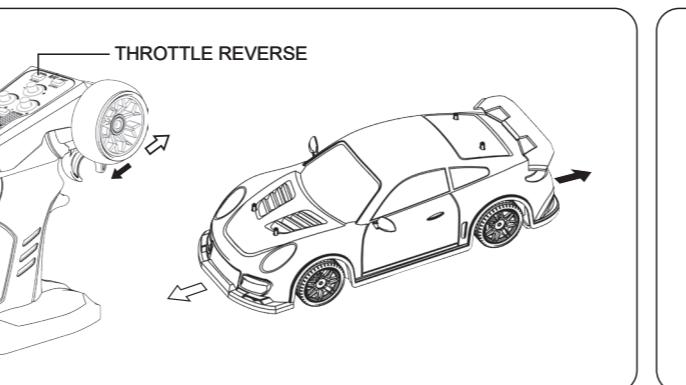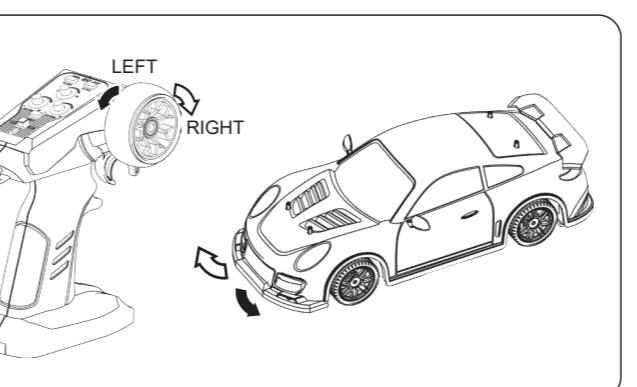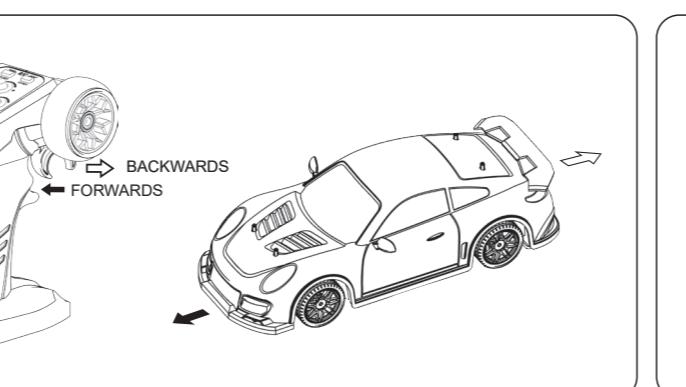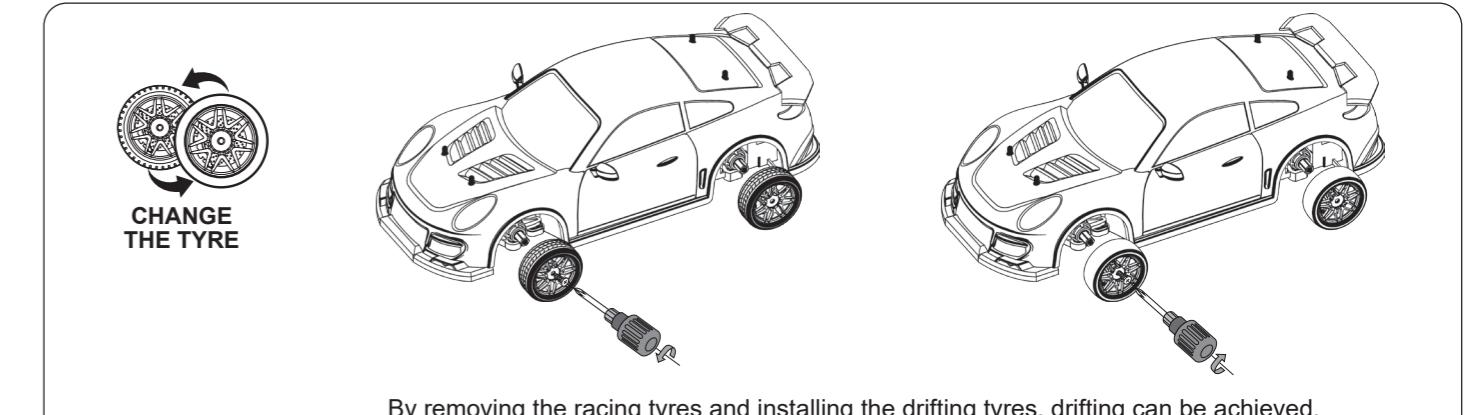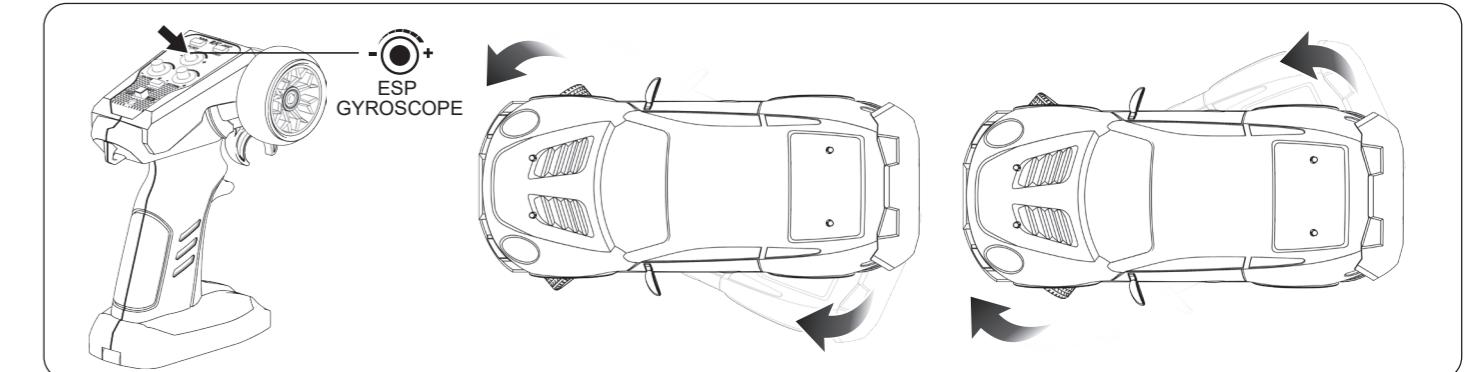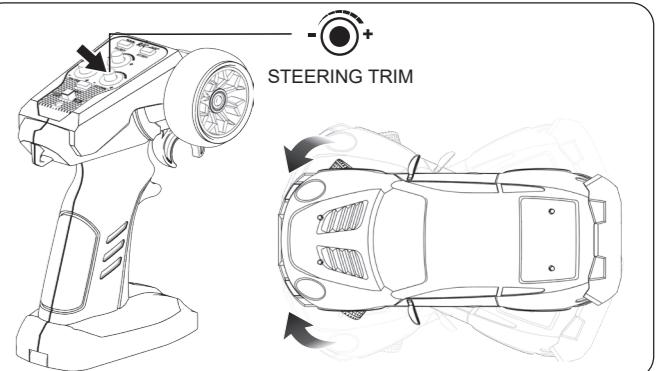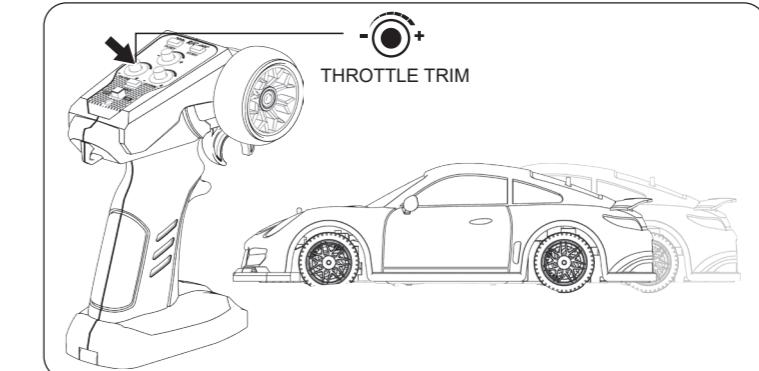

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: THE BATTERY CHARGER USED WITH THE ELECTRIC TOY SHALL BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, PLUG, ENCLOSURE OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS, AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

CAUTION: THE PRODUCT HAS A RECHARGEABLE LITHIUM-ION BATTERY, ONLY CHARGE THE PRODUCT BY PLUGGING THE USB CHARGER INTO A 5V.D.C. 2A CHARGER (NOT SUPPLIED) OR USB PORT ONLY. ONLY CHARGE THE PRODUCT USING SUPPLIED CHARGING CABLE.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: THE TOY IS ONLY TO BE CONNECTED TO CLASS II EQUIPMENT BEARING THE SYMBOL.

PRODUCT MAY VARY SLIGHTLY FROM THE IMAGE SHOWN.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.

READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.

PERFORMANCE TIPS: DO NOT DRIVE THE VEHICLE THROUGH WATER.
DO NOT DRIVE THE VEHICLE INTO ANY HARD OBJECT.



K: 43-647-071
T: 71-878-638