

Decorate Your Own Unicorn



Includes:



1 x Unicorn plush



1 x Airbrush



4 x Colour markers



2 x Sticker sheets

Design Techniques:



ANIMAL



PATTERN



TIE-DYE



GRAPHICS

 
Prepare your work space by putting down some newsprint or cardboard to protect your table or counter.

Plastic gloves are included to protect your hands while using your airbrush or handling the plush before the colours are dry. Practice using your airbrush on paper before starting to decorate your plush pet.

How To Use:



Unscrew the screw to open the battery cover. Insert 2 x 1.5V AA batteries, then close the cover and ensure the screw is wound back on tightly.



6+
years



Aim the nozzle where you want to apply the colour. Hold it about 0.5 inches (1.2cm) away from the plush pet. You can use the stick-on stencil to create different patterns or mixed colours for unique effects. After using the marker, put the cap back on. Tip: If you want to use a different colour, clean the nozzle. Before spraying ink onto the plush pet, spray it on the paper for a few seconds as ink residue from the previous colour may mix with the new colour.



Apply the reusable stick-on stencils to create designs or patterns. See below for design ideas.



As you use your airbrush, the marker tips may become dry from the airflow. Turn off the airbrush and remove the marker. Dip the tip of the marker into a small amount of clean water to moisten it. Gently dab the marker tip onto a paper towel to catch any excess water drips. Then insert the marker back into the airbrush.



The stick-on stencils are reusable. After your colours are dry you can remove the stick-on stencils and return them to the sheet. Keep your gloves on while removing in case any are still wet.



Let the colour dry thoroughly. To avoid smearing colour or transferring colour to skin or surfaces, do not touch the plush pet until it is fully dry. The dry time may vary depending on how much colour was applied and the humidity conditions. This may take up to 24 hours. Check dryness by touching a small area first.

Using Stick-on Stencils:

There are 2 types of stick-on stencils for creating coloured shapes and white shapes!



Colored Stencil Shape!

Remove the stick-on stencil from the sheet. Stick onto the plush pet. Aim the airbrush tip around the edges of the shape. Keep the airbrush tip about 0.5 inch (1.2cm) away from the surface while spraying.



White Masking Shape!

Remove the stick-on stencil from the sheet. Stick onto the plush pet. Aim the airbrush tip around the edges of the shape. Keep the airbrush tip about 0.5 inch (1.2cm) away from the surface while spraying.

Important Tips:

- After using, remove the airbrush marker from the gun. Replace the marker cap. For best results store the airbrush markers flat or with the cap side pointing down.
- If the airbrush marker tip seems dry, put a small drop of water on the felt tip and place the tip downward for a few minutes.
- If the airbrush nozzle becomes clogged or drippy, clean the nozzle with a paper towel.
- Always switch off the airbrush when not in use. Remove the batteries if you do not plan to use it for an extended period of time.
- Never aim the nozzle or spray towards eyes, mouth or body. The airbrush markers are not to be used on skin.
- If colours accidentally transfer onto your hands or skin wash normally with soap and water right away.

Stain Advisement:

Airbrush colours may stain certain surfaces. Do not use the airbrush near carpeting, furniture, wood, or surfaces that are not washable or may easily stain. Avoid touching the colours while wet. Be careful to not rub or transfer colours onto other surfaces while wet. Wait until the colours are fully dry before handling.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NEVER RECHARGE BATTERIES THAT ARE NOT RECHARGEABLE. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY ADULT. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERY FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

CAUTION: RINSE EYES IMMEDIATELY IF THE POWDER COMES INTO CONTACT WITH THEM. IF IRRITATION PERSISTS, SEEK MEDICAL ATTENTION.

WARNING: CHOKING HAZARD. SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION REQUIRED. PRODUCT MAY VARY FROM IMAGE SHOWN. PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.



WARNING: THE DECORATED UNICORN PLUSH MAY CAUSE STAINS. DO NOT CONTACT WITH CLOTHING OR BEDDING LONG TIME.