

295*210mm 双面黑白 2025-12-1

anko

Instruction manual

K: 43-648-399 | T: 71-844-718

Model No.: 200485

GARDEN SENSOR LIGHT

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

Warning:

1. The light is designed for use OUTDOORS ONLY.
2. Remove all packaging before use.
3. This product is not a toy, keep out of reach of children and pets.
4. This product has small parts, which may pose a choking hazard if detached.
5. Keep away from fire and sources of heat.
6. Do not allow water to come into contact with the batteries or wiring.
7. Some condensate may form inside the unit or solar panel in cold conditions. This is normal and can be ignored.

Battery Replacement

The battery is non-replaceable. DO NOT attempt to replace it.

Light Changing

The light is constructed with non-replaceable LED. DO NOT attempt to replace any of the LED in the light.

Siting instructions

1. This light is designed for use OUTDOORS in an open (unshaded) location.
2. Do not position or place near barbecues, heaters or any other direct sources of heat.
3. The solar panel should be located where sunlight can fall directly on the panel. Shadows from buildings, trees, walls/hedges and similar objects should be avoided if possible as these will reduce performance.

4. Try to avoid locations where light from other sources (e.g. streetlights, floodlights etc.) may affect the PIR sensor. The light is designed only to illuminate in dark conditions and may not come on if light reflects on the panel.
5. The light can be left outside in rain but should not be exposed to water jets or immersion. For optimum life, the solar panel should be stored indoors during extreme weather conditions (prolonged snow and frost).
6. The solar light consists of a solar panel, a rechargeable battery and LED lights. All these are pre-assembled. During the daytime, light from the sun charges up the batteries. At night, the energy stored in the batteries is used to power the light. No other power or connections are required. The length of time the light stays on is dependent on how much sunlight has been received during the day.

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

WARNING: FOR DECORATION ONLY. THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN AND PETS.

Production Specification

Solar Panel: 5V 225mA
Recharge battery: 3.7V 6200mAh (non-replaceable)
Light: Non-replaceable warm white LED

Accessories Quantities:

Light x 1, Spike x 5, Screw pack (with plug) x 2


Battery charge instruction

- Turn off the switch when the product is no longer use.
- Charge battery for at least 8 hours before first use.
- The solar light panel MUST be placed in a well-lit location for maximum sunlight.
- The solar light requires dark conditions to operate.
- This solar powered light set is for outdoor use. Direct sunlight is required to charge the battery.
- For decoration only. This is not a toy.

Operating manual

WARNING: ENSURE SECURE ATTACHMENT TO WALL. CONSULT A DIY EXPERT IF REQUIRED.

Option 1: Mount the light by screw. Find a desired location, suggest 1.5-2 meter height, then line up the mounting plate with wall. Mark the holes by a pencil. Drilling holes by using a drill bit of mounting on drywall, use the plastic anchors included. Before screw the mounting in, use a hammer to tap the plastic anchors into marked holes.

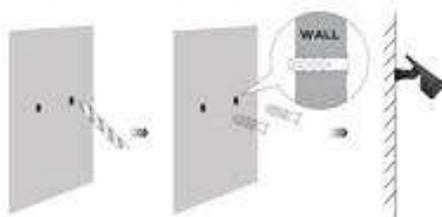

Option 2: Install the light by in-ground spike. Firmly push the spike into the solar light connector until it is fully seated and secure. Finally, insert the assembled garden light firmly into the ground in your desired location, suggest the minimum height insert to the ground should be 1-3 cm.



1. Peel off the plastic film from the solar panel before use.
2. Press the button on the back to change the light mode: MODE 1/MODE 2/OFF

MODE 1: 100% brightness when detecting motion. Dimmers after 23-28 seconds.
MODE 2: 100% brightness when detecting motion. Turns off after 23-28 seconds.

Notes: When in sensor mode, please do not walk in a straight line toward the sensor light, it may affect the sensor detection. Light will be on in dark environment.

Troubleshooting

Problems	Possible Reasons	Solution
No electricity, No working	Solar light run out of battery. Do not put into dark environment to light on.	Before you use it, please place the solar lights in a sunny area for 2-3 days to charge, and make sure the solar panel is facing the sun to work properly. The solar need to work in dark environment to use.
Battery charge problem	The solar panels are blocking.	Solar panel need to facing the sun without any cover anything.
Little operation time	Charging time not enough.	Need to sun power at least 8 hours to full charge.
Sensor problem	The sensor button is blocked. The environment temperature is too high.	There should be no cover in front of the sensor light. Suggest to use the sensor light with the environment temperature under 30°C.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions when provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below. For the entity you purchased this product from, for any difficulties with your product, warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonable foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

