



Instruction manual

K: 43-648-405 | T: 71-844-701

Model No.: 201193

RECHARGEABLE CYLINDRICAL SENSOR DOWN LIGHT IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

WARNING: THIS PRODUCT CONTAINS SMALL MAGNETS. SWALLOWED MAGNETS CAN STICK TOGETHER ACROSS INTESTINES CAUSING SERIOUS INJURIES. SEEK IMMEDIATE MEDICAL ATTENTION IF MAGNETS ARE SWALLOWED.

WARNING: FOR DECORATION ONLY. THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN AND PETS.

WARNING: ENSURE SECURE ATTACHMENT TO WALL. CONSULT A DIY EXPERT IF REQUIRED.

1. Read this user manual thoroughly before first use and retain for future use.
2. LEDs are not replaceable. When it reaches its end of life, the whole light shall be replaced.
3. For indoor use only.
4. Never expose rechargeable batteries to excessive heat (e.g. under sunlight, close to fire), and never throw them into fire. The rechargeable batteries could explode.
5. The rechargeable battery is permanently built into the product and cannot be replaced.
6. Never damage the rechargeable battery. Damaging the casing of the rechargeable battery might cause an explosion or a fire!
7. Never short-circuit the contacts of the rechargeable battery. Do not throw the rechargeable battery or the product into fire. There is a danger of fire and explosion!
8. Never charge the rechargeable battery of the product unattended.
9. The product is intended to be used in moderate climates only. Do not use in tropical or very humid climates.
10. Do not move the product from cold into warm environments and vice versa.
11. The use of accessories and parts not specifically recommended by the manufacturer may cause injuries or damages and will result in forfeiture of the warranty.
12. The product may not function properly or not react to the operation of any control due to electrostatic discharge. Switch off and disconnect the product; reconnect/switch on after a few seconds.
13. If the product shows damages, do not use it any longer and have it re-paired by a qualified technician, or contact our customer service department. Do not disassemble the product, and do not try to repair it yourself.
14. When disposing the product, please consult an electrician or your retailer to remove and dispose the built in batteries in an environmentally friendly manner.
15. Remove the batteries from the product before disposal.
16. Only charge the product with provided USB cable.
17. The product, USB cable are not water-proof, must be kept indoor all the times.
18. Do not attempt to open the LED module to avoid damage.
19. The battery in the product can be recharged but cannot be replaced.

20. Children must not use this product without adult supervision.
21. Do not expose the product to fire or high temperatures over 45°C.
22. Keep away from water, liquids, or wet areas.
23. Use a dry cloth to clean this product. Do not use chemicals on this product.
24. Make sure the product has plenty of ventilation during charging.
25. Do not place the product in direct sunlight, heat or under the windshield.
26. When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place.
27. When disposing of this product. Do so responsibly following local government requirements.
28. The light source of this luminaire is not replaceable; when the light source reaches its end of life, the whole luminaire shall be replaced.
29. Do not stare at the operating light source.



WARNING: READ AND FOLLOW ALL ABOVE INSTRUCTIONS CAREFULLY. DO NOT DROP OR APPLY EXCESSIVE FORCE TO THIS PRODUCT. DO NOT EXPOSE TO HIGH TEMPERATURES. IMPROPER USE OR HANDLING OF THIS PRODUCT MAY RESULT IN FIRE OR EXPLOSION CAUSING SERIOUS INJURY OR PROPERTY DAMAGE.

Accessories Quantities:

Light x 1, Metal plate x 1, USB-Type C cable x 1

Production Specification

USB Input: 5V DC 1A

Recharge battery: 3.7V 1200 mAh (non-replaceable)

Battery Charge Instruction

1. Only charge the product with an approved and suitable USB charger that complies with the requirements of the relevant standards.
2. Ensure charging adapter used is compatible with a 5V DC SELV 1A, 5W rating.
3. Connect USB charging cable plug with light charging port.
4. Connect the cable into USB power port.

Note: The built-in charging red indicator light on the controller box will light up when charging and the indicator light turn to green after it has fully charged.

Warning:

Use provided charging cable to charge the product only.
Do not charge the product for long time. Plug off the charging cable after fully charged.
Please charge the battery in time when it runs out or it will affect the battery life.
Turn off the switch when the product is no longer use.
Please charge the battery every month, otherwise the battery life will be impacted.
Noted: The battery will not be fully charged if you keep the light on while charging.

Operating Instruction

1. Wall mounted. Find the desired location and ensure the area is completely clean and dry. Peel off the protective paper from double-sided adhesive which is attached on metal plate.
Pressure the metal plate firmly on the prepared surface by double-side adhesive. Attach the lamp by magnetic of lamp on the metal plate.

2. Use provided charging cable to fully charge the unit before use.

3. For sensor mode, short press the button on the top to change the light mode: MODE 1/MODE 2/MODE 3/OFF

MODE 1: Warm white light and automatically turns off after approximate 20 s of no motion.

MODE 2: Cool white light and automatically turns off after approximate 20 s of no motion.

MODE 3: Neutral white light and automatically turns off after approximate 20 s of no motion.

4. When the light is on, long press the switch to adjust the brightness of the light (stepless dimming).

5. Select a light mode you want, short press the button twice to enter steady on mode (the light will flash twice). Short press once back to sensor mode.

Noted: For sensor mode, light will be on in dark environment.
If walk in a straight line toward the light sensor, it may not work.
The sensor may not operate while the light is charging.

MADE IN CHINA
CUSTOMER SERVICE:
Kmart AU: 1800 93 05
Kmart NZ: 0800 945 996
Target AU: 1300 753 567

