

3+
YEARS


Disney Stitch

©Disney

STITCH RC

INSTALLING BATTERIES INTO THE REMOTE CONTROL

- 1 - Unscrew the screw to open the battery cover.
- 2 - Insert 2 x 1.5V AA batteries.
- 3 - Close the cover, ensuring screw is wound back on tightly.

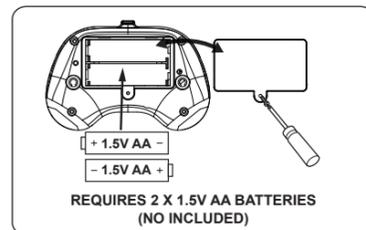

INSTALLING THE VEHICLE BATTERY:

- 1 - Loosen the screw to open the battery cover.
- 2 - As shown in Figure 1, remove the battery cover, connect the rechargeable battery with connector and close the battery cover, ensuring screw is wound back on tightly.

Fig 1:


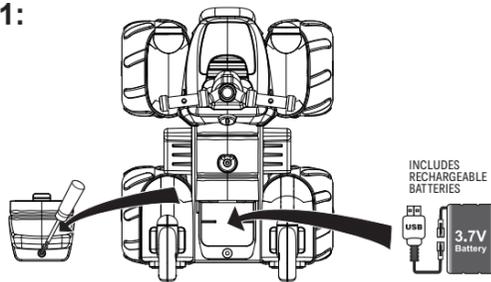



Fig 2:

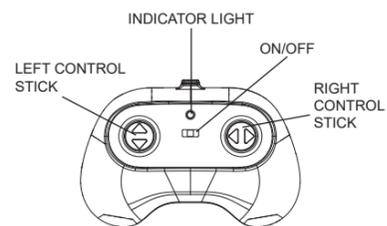

HOW TO CHARGE THE LITHIUM BATTERY:

Attention: Do not charge battery immediately after each play, let the battery cool down for a while.

- 1 - Loosen the screw to open the battery cover.
- 2 - Separate the rechargeable battery from connector.
- 3 - Connect the USB charging cable with rechargeable battery first. (The battery connector will only fit in one way, do not force the connectors together), then plug the large end of USB cable into a 5Vd.c.2A charger (not supplied) or USB port only. The LED light on the USB charging cable will light up when charging.
- 4 - The LED light extinguishes after it has finished charging. Disconnect the USB charging cable from the USB port and then disconnect the rechargeable battery with USB charging cable.





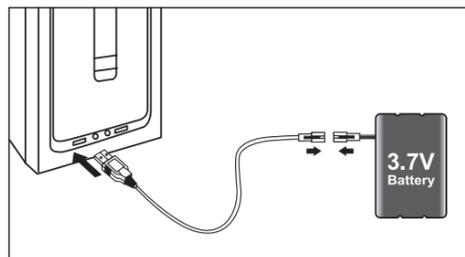


HOW TO USE VEHICLE AND REMOTE CONTROL

- 1 - Turn on the vehicle first and then turn on the remote control.
- 2 - Press the control stick of the remote control to connect to the vehicle.
- 3 - When the vehicle starts functioning, that means they are connected.
- 4 - If you have more than one vehicle, please pair one by one.

When the second vehicle is pairing, please always keep the first vehicle and transmitter on.

- 5 - Please turn off both the vehicle and transmitter and re-start all pairing processes if you are changing to play with another 2.4GHz transmitter.

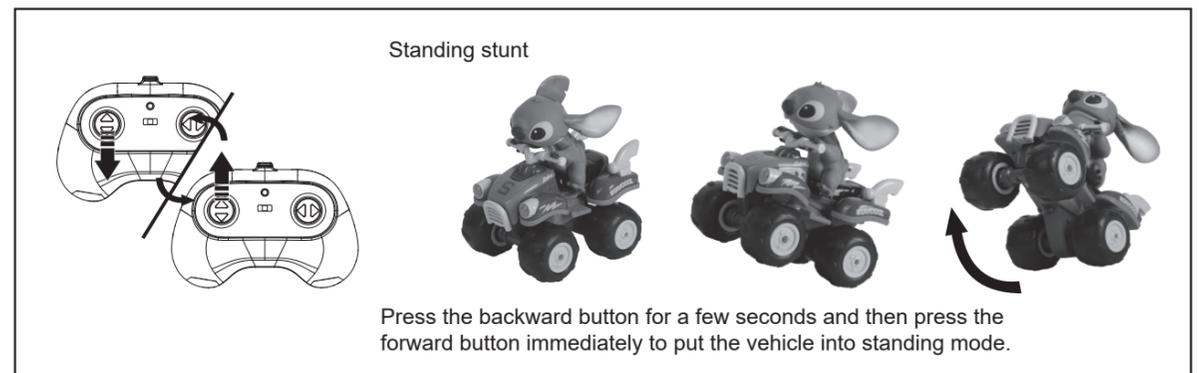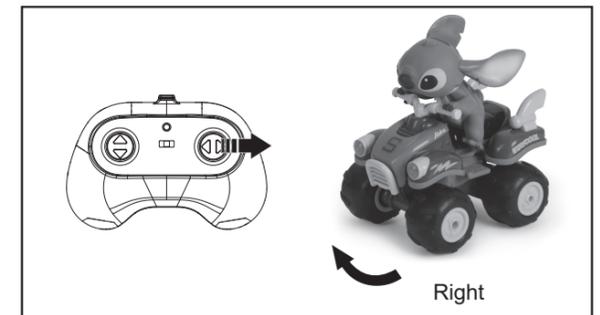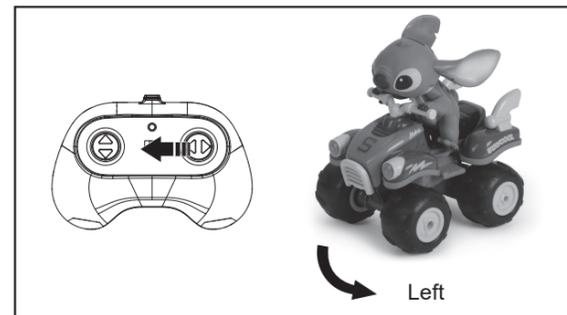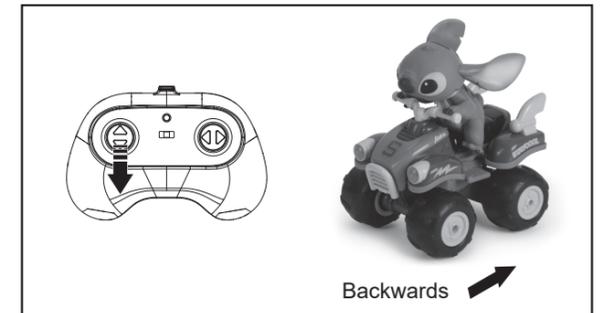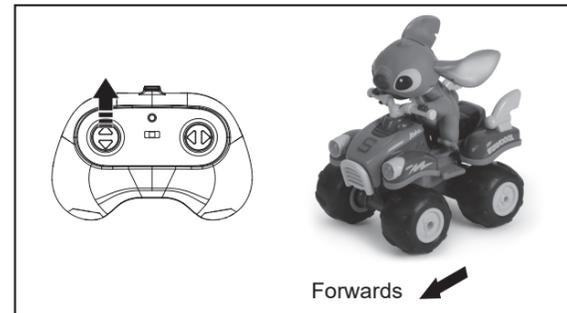

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN.

WARNING: THE TOY IS ONLY TO BE CONNECTED TO CLASS II EQUIPMENT BEARING THE SYMBOL.

WARNING: CHOKING HAZARD SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

CAUTION: THIS PRODUCT HAS A RECHARGEABLE LITHIUMION BATTERY, ONLY CHARGE THE PRODUCT BY PLUGGING THE LARGE END OF THE USB CABLE INTO A 5VD.C. 2A CHARGER (NOT SUPPLIED) OR USB PORT ONLY. ONLY CHARGE THE PRODUCT USING SUPPLIED CHARGING CABLE.

WARNING: THE BATTERY CHARGER USED WITH THE ELECTRIC TOY SHALL BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, PLUG, ENCLOSURE OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.

CAUTION: BATTERY INSTALLATION BY ADULT REQUIRED. ADULT SUPERVISION REQUIRED. PRODUCT MAY VARY FROM IMAGE SHOWN. PLEASE KEEP THE PACKING FOR FUTURE REFERENCE.

PERFORMANCE TIPS: DO NOT DRIVE THE VEHICLE THROUGH WATER. DO NOT DRIVE THE VEHICLE INTO ANY HARD OBJECT.



43-648-511