



# Desktop Sunrise Alarm Clock Bluetooth® Speaker



Operating instructions

**Please read this user manual carefully before use and retain for future use.**

Includes:

- › desktop sunrise alarm clock speaker
- › charging cable
- › user manual




**K: 43-649-495 | T: 71-846-545**  
Model: SPKF26-09

## Safety instructions

1. Do not disassemble this product.
2. The speaker must not be exposed to dripping or splashing and objects filled with liquids.
3. Do not expose speaker to water. It may result in permanent damage to the speaker or power source.
4. Keep the speaker away from direct sunlight, fire, flames or other heat sources and high voltage equipment.
5. Disposal of this speaker, and the battery should be in accordance with local government requirements.
6. Replacement of a battery with an incorrect type can result in an explosion or leakage of flammable liquid or gas.
7. Do not mix old and new batteries, or different types of batteries.
8. Do not recharge non-rechargeable batteries.
9. Keep batteries away from small children. Do not swallow or put batteries in your mouth.
10. Do not use the unit if the battery cover cannot be secured properly.
11. Remove batteries when not in use for a prolonged period of time.
12. The light source of this product is not replaceable; when the light source reaches it's end of life the whole product shall be replaced.
13. The included charging cable is for use with this product only, not designed for other electrical devices. Charging the device by using the USB charging cable supplied, other than the one could cause electrical hazards such as overheating, short-circuiting, or even damage to your device.

## FUNCTION OVERVIEW

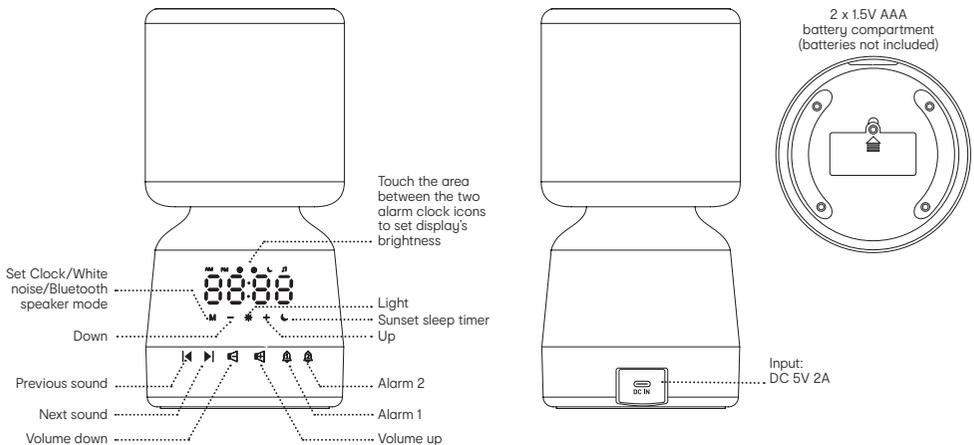

## CLOCK

The clock must be set when the appliance is first plugged in or after a power outage.

Function	Action
Set 12/24 Hour time	When plugged in, <b>12H</b> or <b>24H</b> indication starts to flash. 1. Use <b>+</b> or <b>-</b> button to set clock format. 2. Press <b>M</b> button to confirm and continue.
Set clock time	The hour/minute indication starts to flash. 3. Use <b>+</b> or <b>-</b> button to set the clock time. 4. Press <b>M</b> button to complete.
Set display contrast	Touch the area between the two alarm clock icons to set the display brightness. <b>L-00(OFF) → L-01 → L-02 → L-03 → L-04 → L-05 → L-06.</b>
Resume clock time setting	In <b>OFF</b> mode (not in White noise or BT speaker mode), press and hold <b>M</b> button until <b>12H</b> or <b>24H</b> flash, then repeat the setting as above.

**Note:** If the display is flashing, the settings will not be saved.

When the appliance is paired with phone via Bluetooth, the clock time will be updated automatically (iOS only).

## LIGHT

Function	Action
Turn on light/Select light mode	Press <b>*</b> button. No display is white light mode. <b>C-01</b> is AUTO colour changing mode. <b>C-02</b> to <b>C-08</b> are 7 scene colour lights.
Turn off light	Press and hold <b>*</b> button.
Set light's brightness	Use <b>+</b> or <b>-</b> button to set brightness from <b>L-00</b> to <b>L-30</b> .

## DUAL ALARM

Function	Action
Set alarm time	1. Press and hold <b>⏰</b> or <b>⏰</b> button until the hour/minute indication starts to flash. 2. Use <b>+</b> or <b>-</b> button to set the alarm time. 3. Press <b>⏰</b> or <b>⏰</b> button to confirm and continue.
Set alarm sound	4. Use <b>+</b> or <b>-</b> button to set alarm sound from <b>R-00</b> (no alarm sound) to <b>R-10</b> . 5. Press <b>⏰</b> or <b>⏰</b> button to confirm and continue.
Set wake up light ON/OFF	6. Use <b>+</b> or <b>-</b> button to select the wake up light to <b>ON</b> or <b>OFF</b> . If no wake up light is selected, the wake up light duration setting will not be shown
Set wake up light duration time	7. Use <b>+</b> or <b>-</b> button to select the duration time from <b>01</b> to <b>60</b> minutes. 8. Press <b>⏰</b> or <b>⏰</b> button to complete.
Activate or deactivate alarm	Touch <b>⏰</b> or <b>⏰</b> button, the alarm icon and time will flash a few seconds, alarm clock is activated when alarm icon appears. Touch <b>⏰</b> or <b>⏰</b> button again, alarm icon disappears/deactivated.
Simulate sunrise	The wake up light will turn on before the alarm time and gradually increase in brightness.
Stop alarm sound and wake up light	The alarm sound and/or light will turn OFF automatically after 10 minutes of inactivity. Press or touch any button to stop the alarm sound and/or light.

- Note:**
1. If the display is flashing, the settings will not be saved.
  2. The alarm cannot be set with both the sound and wake up light turned off. At least one must be active.

## SUNSET SLEEP TIMER

Function	Action
Set sleep timer	1. Press and hold <b>☾</b> button until display flashes. 2. Use <b>+</b> or <b>-</b> button to set the timer minutes from <b>01</b> to <b>60</b> minutes. 3. Press <b>☾</b> button to confirm and continue.
Set sleep sound	4. Use <b>+</b> or <b>-</b> button to select sound from <b>S-00</b> (no sleep sound) to <b>S-10</b> . 5. Press <b>☾</b> button to confirm and continue.
Set sunset light ON/OFF	6. Use <b>+</b> or <b>-</b> button to set sunset light <b>ON</b> or <b>OFF</b> (no sunset light). 7. Press <b>☾</b> button to complete.
Activate or deactivate sleep timer	8. Press <b>☾</b> button, <b>☾</b> appears on the display when sunset sleep timer is activated. Press <b>☾</b> button again to deactivate the sunset sleep timer, <b>☾</b> disappears from the display. The sound, display and/or light will turn off when the sunset sleep timer is ended. Touch the area between the two alarm clock icons to resume the display and set the display brightness as desired.

- Note:**
1. If the display is flashing, the settings will not be saved.
  2. The alarm cannot be set with both the sound and wake-up light turned off. At least one must be active.
  3. In sleep timer mode, the volume can be adjusted by touching the **🔊** or **🔊** button. Once the preferred volume is selected, press **☾** to confirm/return to sleep mode.

## MODE SELECTION

There are 2 modes: **White noise** and **Bluetooth speaker**

Function	Action
Set mode	1. Press <b>M</b> button to set mode in loop: <b>OFF → White noise → BT speaker → OFF.</b> 2. In <b>White noise</b> mode: green  appears on display. 3. In <b>BT speaker</b> mode: white  appears on display.
Set volume	4. Touch  or  button to set volume. <b>White noise</b> from level <b>U-00</b> (no sound) to <b>U-30</b> / <b>BT speaker</b> from level <b>U-00</b> (no sound) to <b>U-31</b>
Set sound	5. In <b>White noise</b> : Touch  or  button to select sound from <b>5-01</b> to <b>5-10</b> . 6. In <b>BT speaker</b> mode: Touch  or  button to select music.
Play/Pause	7. In <b>White noise</b> or <b>BT speaker</b> mode, press and hold <b>M</b> button to play/pause the sound.
BT speaker pairing	8. In <b>BT speaker</b> mode: Select <b>anko43649495</b> on your device to pair.

## FIRST USE

1. Install 2 x 1.5V AAA batteries (not included).
2. Connect the USB-C cable to 5V=2A adaptor and then plug into the mains socket.

### Note:

1. This appliance can't be operated if there is no connection with 5V=2A adaptor.
2. 2 x 1.5V AAA batteries are required for time memory function.

## Specifications

**Model no.:** SPKF26-09

**Speaker output:** 5W

**Bluetooth version:** 5.4

**Working distance:** 10m in open area

**Charging by USB-C cable** (cable included)

**Indoor Use Only**

## 12 Month Warranty

Your new product is warranted to be free from defects in materials and workmanship for the period stated above. From the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license.

**MADE IN CHINA**

**CUSTOMER SERVICE:**

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567

