

210.0 mm


**anko**

Instruction manual

K: 43649938| T: 71848679


Model: JLR-81513

120 inch Projector Screen

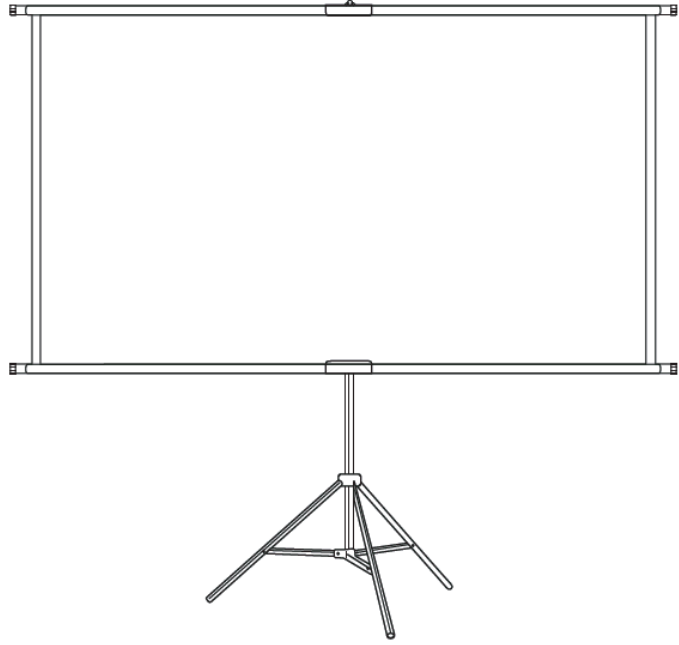

Please read this manual carefully before using the product and retain it for future reference.

#### Package contents:

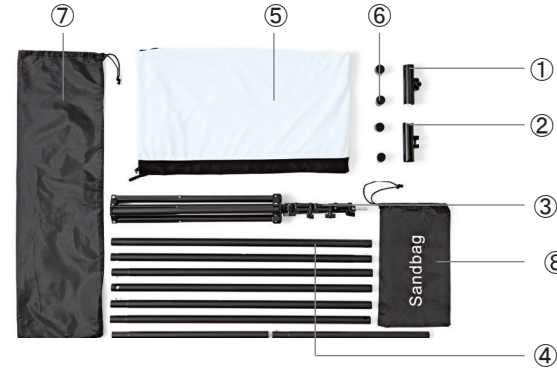

- ① 1 x Upper fixator
- ② 1 x Lower fixator
- ③ 1 x Tripod bracket
- ④ 8 x Crossbars of holder
- ⑤ 1 x Projector screen
- ⑥ 4 x Rubber stopper
- ⑦ 1 x Storage bag
- ⑧ 1 x Sandbag

#### Product Specifications:

Screen Size: 120 inch  
Aspect Ratio: 16:9  
Tripod Height Range(with screen assembled): Up to 230 cm

#### Important Safety Information

- Place the screen on a stable, level, and non-slippery surface to prevent tipping.
- Do not use the product near heat sources, open flames, or in windy conditions.
- Keep children and pets away from the screen during setup and use, as the tripod may pose a tripping hazard.
- Always secure the tripod with the provided sandbag when using outdoors.
- Do not touch the screen surface with sharp or abrasive objects.
- Clean only with a soft, dry cloth. Do not use chemicals, solvents, or immerse the screen in water.
- Retract and fold the screen slowly to avoid finger pinching.
- Do not exceed the maximum height marking on the telescopic pole.


#### Installation Instructions

##### Step 1: Set up the Tripod

- Loosen the tripod leg knob and unfold all three legs to their maximum angle.
- Ensure that all leg locks are fully engaged and the base is stable.



**Warning:** Always open the tripod legs to the maximum angle. Failure to do so may cause the stand to tip over.

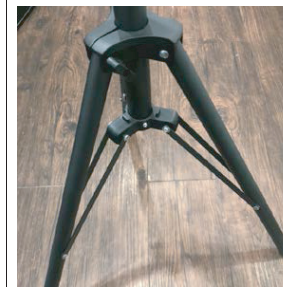


##### Step 2: Assemble the Frame Rods


- Identify the eight rods (six long and two short), marked ①, ②, ③, and ④.
- To assemble one side frame:
  - Connect the snap mechanism end of rod ① to the hole at the end of rod ② until you hear a click.
  - Connect the snap mechanism end of rod ② to the hole at the end of rod ③ until you hear a click.
  - Connect the snap mechanism end of rod ③ to the hole at the end of rod ④ until you hear a click.

- Assemble two identical side frames using four rods each (three long rods and one short rod).

##### Bracket Upper Rod

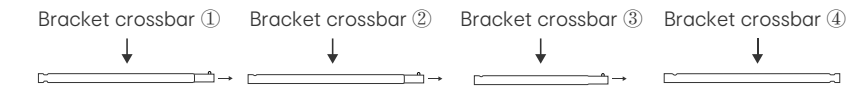

##### Bracket Lower Rod

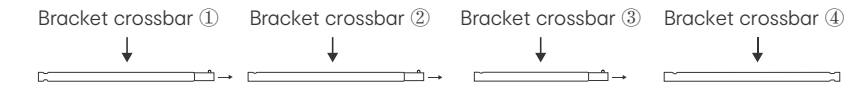

##### Step 3: Attach the Frame to the Screen

- Slide the assembled upper frame rod through the top sleeve of the projector screen.
- Slide the assembled lower frame rod through the bottom sleeve of the projector screen.



##### Step 4: Secure the Frame with fixator

- Locate the "Upper fixator" and "Lower fixator" from the sand bag.
- Slide the upper fixator from both ends of the upper rod toward the center.
- Slide the lower fixator from both ends of the lower rod toward the center.




- Use the two white labels sewn in the middle of the screen sleeves to align the fixators with the center position.



##### Step 5: Secure the Corners

- Each corner of the projector screen is fitted with a velcro strap.
- Thread each strap through the hole at the end of the frame rod.
- Fold the strap back onto itself and press firmly to secure.
- Confirm that all four corners are tightly fastened so that the screen surface is flat and taut.

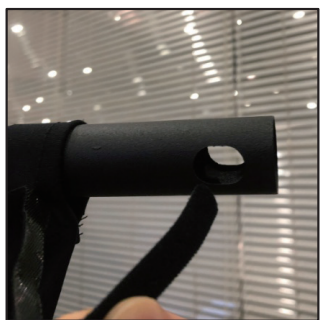



**Warning:** Do not pull the corners too tight, as this may cause the screen to curve.

- Cover each corner connector with the provided rubber stoppers.



##### Step 6: Mount the Screen to the Tripod

- Loosen the screw at the top of the tripod pole.

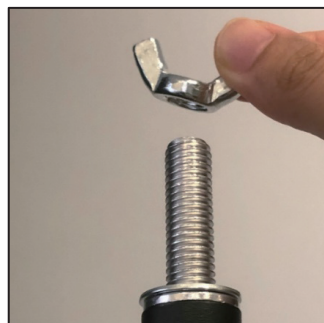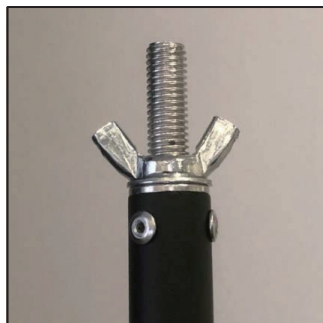


- Lift the assembled screen and hook the upper mounting bracket onto the top of the tripod pole. (The label is on the back of the projector screen)




- Tighten the mounting screw securely to hold the screen in place.



- Attach the lower fixture of the screen to the tripod holder, and ensure it is fully inserted into the holder.

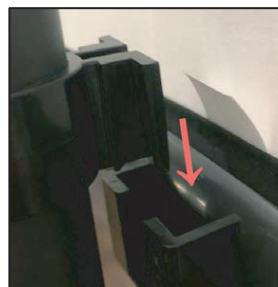

- Straighten the screen and check that all screws and fixtures are tight.

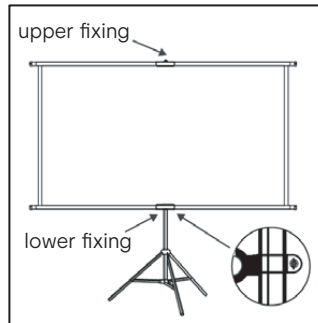

##### Step 7: Adjust the Height

- Loosen the telescopic screw on the tripod pole to raise or lower the screen to the desired height.
- Tighten the screw securely once adjusted.

**Warning:** Do not extend the tripod pole beyond the maximum height marking.



#### 12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

#### MADE IN CHINA

#### CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567