


80 mm

anko

Construction Block Bluetooth® Speaker Instruction Manual

K: 43650682 | T: 71871998 Model: JLR-81509

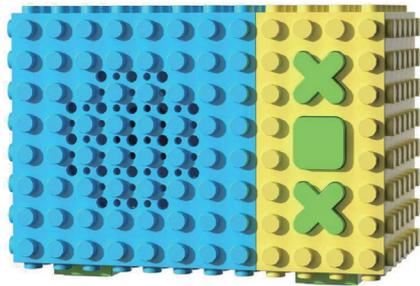

Please read this manual carefully before using the product and retain it for future reference.

Package contents:

- 1x Speaker
- 1x Instruction Manual
- 1x USB-C Cable (Type A to Type C)

Product Specifications:

- Bluetooth version: 5.3
- Speaker power: 4Ω 5W
- Sensitivity: 90dB ± 3dB
- Frequency: 100Hz - 20KHz
- Input rating: 5V = 1A
- Play time up to 4 hours (at 80% volume)
- Charging time: Approx. 1.5 hours
- Working distance: 10M (no obstacles)
- Battery capacity: 3.7V, 500mAh rechargeable lithium-ion battery (non-replaceable)
- Compatible with LEGO blocks


Note: This product is compatible with major building block brands. Construction Block Bluetooth® Speaker is not sponsored, authorized, or endorsed by the LEGO Group.

Important Safety Information

- This product is not a toy. Not for use by children under 3 years old. Small parts may present a choking hazard. Children should be supervised by an adult during use.
- This product contains a rechargeable lithium-ion battery (non-replaceable).
- Do not leave the device connected to the charger for extended periods.
- Avoid exposing the device to high temperatures or direct sunlight for prolonged periods.
- Do not allow the battery to fully discharge before recharging.
- Do not disassemble, crush, puncture, or modify the battery or device.
- Handle with care and avoid strong impacts or dropping.
- Do not charge the device unattended.
- Dispose of the product and battery responsibly. Do not dispose of in fire or with household waste.
- Ensure the product is powered OFF before connecting or disconnecting the charger.
- Use a certified 5V/1A USB power adapter (not included) that complies with local safety standards.

115 mm

Product diagram

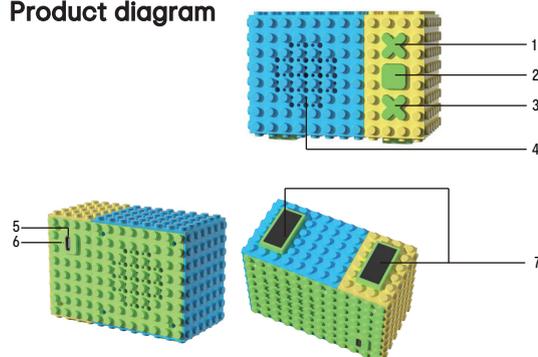

1. Previous song / Volume+

- Short press to Volume+ for music and calls
- Long press Previous song

2. Power

- Short press to pause/ play music
- Short press to answer/ hang up calls
- Long press to switch on / off device
- Long press to decline calls

3. Next song / Volume-

- Short press to Volume- for music and calls
- Long press Next song

4. Speaker

5. USB-C Charging Port

6. Indicator

7. Removable blocks

- The two small blocks are removable and can be affixed to other positions on the block.

Operating Instructions

How to connect

- Turn on the speaker by long-pressing the Power button. The indicator light will blink blue.
- Enable Bluetooth on your smartphone, or other audio devices.
- Select "anko43650682" from the list of available Bluetooth devices.
- When pairing is successful, the device will emit a prompt tone.

Note:

- The speaker will remain paired unless manually unpaired.
- It will automatically reconnect to the last paired device when both are powered on and in range.
- Only one Bluetooth device can be connected at a time.
- If connection fails, please repeat the pairing steps.
- Please make sure your device has built-in Bluetooth functionality.
- The blue light will flash once every several seconds during playing music.

Charge the Product

- Before first use, please fully charge the speaker.
- Use a certified 5V/1A USB power adaptor (not included). Only use the supplied charging cable.
- Regularly charge the device (at least once a month) to maintain battery life. Prolonged storage at low charge may reduce battery performance.
- The indicator is red and always on during charging and turn off after fully charged.
- It takes approximate 1.5 hours to fully charge the product.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer

Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.



MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567