
READ AND SAVE IMPORTANT SAFETY INSTRUCTIONS

LED Candle Aroma Diffuser

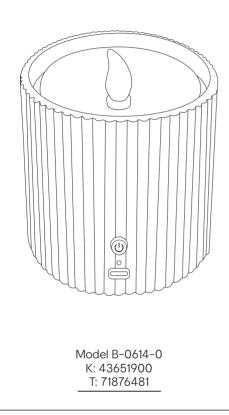

IMPORTANT!

Care should be taken with the use of diffusers around animals. Both the choice of essential oils and where animals are should be taken into consideration when in use.

The appliance must only be supplied by AS/NZS 61558.2.16 certified SELV power supply with output 5V = 1A

- DO NOT block the air inlet at the bottom of the diffuser.
- DO NOT use the diffuser on flammable surfaces or near flammable materials, heat sources or open flames.
- 3. **DO NOT** use if the USB cable or diffuser is damaged. If the diffuser malfunctions, is damaged or is immersed in water, stop using the diffuser.
- 4. Use provided USB cable to operate the product only.
- 5. Indoor dry location use only.
- 6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 7. Children should be supervised to ensure that they do not play with the appliance.
- 8. **DO NOT** immerse the diffuser in water or any other liquid.
- 9. **DO NOT** leave the diffuser unattended during use.
- 10. Only use with essential oil or water-based fragrance. Acidic oil can damage the diffuser. Check the instructions of the oil or fragrance.
- The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or create a fire risk.
- 12. Always unplug the diffuser from the electrical supply when filling and cleaning.

GETTING STARTED OPERATING INSTRUCTIONS

- Place the diffuser on a stable and level surface, and remove the candle lid
- 2. Take out 1pc refill pad and fill the pad with 5-8 drops essential oil, and then place the refill pad into the pad slot.

CAUTION


Do not overfill the essential oil, always 5-8 drops per day.

Do not fill the essential oil into the slot. Replace the refill pad if you use different essential oil.

- 3. Replace the refill pad regularly.

 The refill pad will turn to yellow for long time use.
- 4. Connect the diffuser via the USB cable to a wall charger or alternative power source (not included). Put back the candle lid securely.

- 1. Candle lid
- 2. Refill pad
- 3. Pad slot
- 4. LED light
- 5. Power botton
- 6. Indicate light
- o. maicate light
- 7. USB Type-C socket
- 8. USB cable

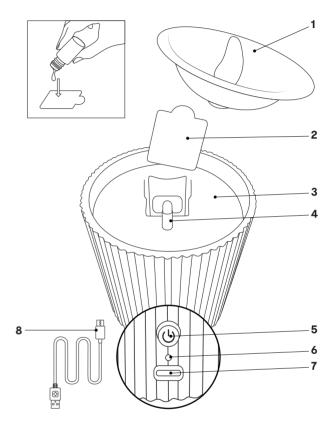

DIFFUSER SETTINGS

- 1. Place the diffuser on a stable and level surface.
- 2. Connect the diffuser via the USB cable to a wall charger or alternative power source, the indicate light will be green when the power is on.
- 3. Press power button (5) to turn the diffuser on
 - Press once to turn the LED light and diffuser on, the indicate light will turn white.
 - Press 2 times to turn the LED light off, but diffuser function still on, the indicate light stay white.
 - Press 3 times to turn off the LED light and diffuser, the indicate light turn green.

WARNING

- DO NOT place the product in direct sunlight, heat or the under the windshield.
- 2. **DO NOT** try to repair or disassemble this product.
- 3. When product is not in use, make sure it is correctly turned off and stored in a cool dry place
- 4. When disposing of this product. Do so responsibly following local government requirements.
- 5. This device is designed for household use only. It is not suitable for commercial use.
- 6. If the product shows damages, do not use it any longer and have it re-paired by a qualified technician, or contact our customer service department. Do not disassemble the product, and do not try to repair it yourself.

MOVING AND STORAGE INSTRUCTIONS

- 1. **DO NOT** move the diffuser while in use.
- 2. Empty the slot and clean the diffuser before storing.

CARE AND MAINTENANCE

- Always turn OFF and unplug the diffuser for care and maintenance.
- 2. Clean the slot before using a different essential oil.
- 3. Replace the refill pad before using a different essential oil or when the pad turns uellow.
- 4. Clean the slot with a soft, dry cloth.
- 5. Clean the slot regularlu.
- DO NOT use vinegar or other corrosive cleaning agents.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred

in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125 KMART NZ: 0800 945 995 TARGET AU: 1300 753 567

Troubleshooting

Problem	Possible Reasons	Solution
Unit does not work	The power source out of power	Use provided Type-C cable re-connect the power source