

210 mm

anko

Portable Door Lock

Instruction Manual

K: 43652426 | T: 71882222 (Model: JLR-81465)



Please follow the steps below to install the portable door lock correctly.

⚠ WARNING – KEEP OUT OF REACH OF CHILDREN

This product is **NOT a toy**. Keep out of reach of children.
Do **NOT** allow children to install or operate this lock.
Do **NOT** allow children to lock a door using this product—risk of entrapment.

⚠ WARNING – READ BEFORE USE

This lock must only be installed from the **INSIDE** of an **inward-opening door**.

Do **NOT** use on outward-opening doors.
Do **NOT** attempt to install from outside the room.
Failure to follow these instructions may result in being unable to open the door.

Step 1 – Check the door gap

Make sure there is enough clearance between the door and the frame for the metal plate to fit in.
Do not force the door closed if there is no space.

Step 2 – Insert the claws

Insert the metal claws of the portable lock into the door strike plate (the

hole where the latch normally goes).
There are two sizes of holes on the plate:

- The smaller hole (0.78 in) fits most standard doors.
- The larger hole (1.2 in) fits doors with larger latch bolts.

Test which hole fits your door best.

Step 3 – Close the door

After inserting the claws properly into the strike plate, gently close the door so the plate stays in position.

Step 4 – Secure the red handle

Insert the red handle into the heart-shaped slot on the metal plate.
Slide the red handle downward until it locks securely against the door.
You should feel firm resistance when properly installed.

Step 5 – Check installation

Pull the door gently to confirm that the lock is firmly in place.
Your portable door lock is now ready for use.

Notes

1. This product is not suitable for the following types of doors:
 - Double doors
 - Slat doors
 - Sliding doors
 - Doors with latch tongue over 1.1 inches (28 mm)
 - Outward-opening doors
2. Do not use on glass or frameless doors.
3. Always remove the lock before closing the door from the outside.

Illustration: Not suitable for double, slat, or thick-tongue, sliding, outward-opening doors.



Maintenance

- Wipe with a dry cloth only.
- Do not use water, detergents, or solvents.
- Store in a dry place when not in use.

297 mm