

# Bottle Warmer Instruction Manual



The illustrations shown in this manual are for reference only. Actual product may vary slightly.  
The manufacturer reserves the right to change any specification or feature without prior notice.

148.0 mm

105.0 mm

**WARNING:**



1. Read all instructions before use.
2. Do not touch hot surfaces.
3. Keep out of reach of children.
4. Unplug from outlet after use.
5. Do not immerse the warmer into water or wash it with water. Clean the warmer using a soft wet cloth.
6. Use only containers that have been approved for boiling.
7. Disconnect the warmer from the power supply before adding water.
8. Be careful of the deterioration time of the milk or food.
9. Shake the bottle and check the temperature of the milk bottle food contents before giving it to your baby.
10. Do not immerse the appliance, plug, or cord in water or any liquid.
11. Do not use the appliance outdoors. For indoor domestic use only.
12. Unplug from outlet when not in use and before cleaning. Do not use abrasive cleaners or metal brushes.
13. Do not let supply cord hang over edge of tables or counters, or touch hot surfaces.
14. Do not place the appliance on or near heat sources such as a gas or electric burner or in a heated oven.
15. This appliance is intended to be used in households.
16. Read the instruction manual before use.
17. Check the power cord regularly for visible damage. If it is damaged, it must be replaced by a qualified electrical person

only, to avoid any safety hazards. Do not pick up or operate an appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. In case of damage, DO NOT use.

**Caution:**

1. Always shake bottle or stir the contents well to ensure even heat distribution.
  - a) Test milk by placing drops onto the inside of your wrist.
  - b) Test food temperature by placing a metal spoon to the bottom of the container, wait 5 seconds, withdraw the spoon, and rest the spoon against your lip.
3. Always turn the appliance off after each use and unplug to clean.

**Product components:**

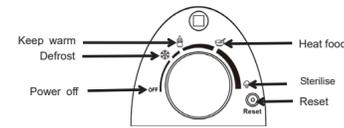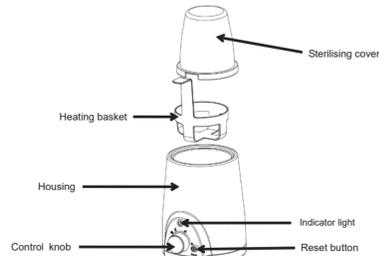

**Explanation of settings:**

Control	Water temp. in bottle warmer	Function
OFF		Switch off the warmer.
	25°C -35°C	Defrost frozen milk (approx. 1-2 hours)
	40°C -50°C	Heat or keep milk warm.
	70°C -85°C	Heat or keep baby food warm.
	100°C	Sterilise milk bottle. Automatically powers off when there is no water or insufficient water.
Reset		Press to reset the unit after sterilisation or water dry-out.

**Note:** The indicator light is on while heating. It switches off automatically as soon as the water in the warmer has reached the selected temperature. Food within this manual refers to pureed fruits and vegetables.

**Product specifications:**


Product Name	Bottle Warmer
Input	AC 220-240V, 50-60Hz

**Instructions for use:**

1. Unpack all the packing materials and dispose of properly.
2. Before using the bottle warmer, it is recommended to clean all parts thoroughly. Refer to the "Cleaning and Maintenance" section for instructions.
3. Before connecting the power supply, ensure the supply voltage is the same as the required voltage for the bottle warmer.
4. Before plugging in the appliance, ensure the bottle warmer has been filled with the appropriate amount of distilled water to avoid damage.
5. Unplug the appliance when not in use to prevent it from being inadvertently switched on.

**Using the bottle warmer with the Defrost/Keep Warm settings:**

1. Insert the plug into a mains socket.
2. Place the milk bottle in the bottle warmer.
3. Fill the warming chamber with distilled water up to the level of the milk in the bottle (Fig.1) on page 6. In case of large amounts of milk, the maximum level of water is approximately 1.5cm below the top of the bottle warmer (Fig.2) on page 6.

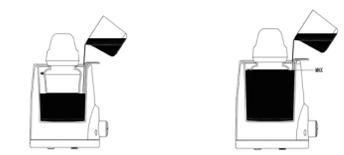

4. Use the control knob to select the desired setting . The indicator light is on during heating cycles.

**Note:** The indicator light turns on and off: indicates that the unit is turning on and off to maintain a steady temperature.

5. Remove the milk bottle after warming the contents to the required temperature. Allow it to cool before handling.
6. Switch off the appliance by turning the control knob to "OFF" position.
7. Wait 10 minutes before heating a second bottle to avoid overheating.
8. Refill the warming chamber with fresh distilled water before operating for the second time.
9. After use, allow the appliance to cool down, then empty the bottle warmer.

**Important Notes:**

1. For hygiene reasons, the contents should not be kept warm for more than 20 minutes after the temperature has reached the selected setting.
2. Do not warm milk for too long, otherwise the milk will be overheated.
3. Always shake the bottle's contents well to ensure even heat distribution and test temperature of contents before giving bottle to child.
4. For suggested warming time, please refer to the table below.

**Note: Suggested heating time.**

Bottle	Setting	Initial milk temp. (approx.)	Final milk temp. (approx.)	Heating time (approx.)		
				150ml	200ml	240ml
Glass	Defrost	4°C	20°C	7min	10min	12min
	Keep warm	20°C	40°C	18min	26min	29min
Plastic (PP/PPSU)	Defrost	4°C	20°C	11min	13min	16min
	Keep warm	20°C	40°C	22min	27min	30min

**Using the bottle warmer with the Heat Food setting:**

1. Insert the plug to the mains power socket outlet.
2. Place baby food into a heat-resistant container, like glass bottle, and then place it into the bottle warmer.
3. Fill the warming chamber with distilled water up to the level of food in the container (Fig.1) on page 6. For larger containers, the maximum level of water is approximately 1.5cm below the top of the bottle warmer (Fig.2) on page 6.
4. Select Heat food setting . The indicator light will turn on.

**Note:** Do not seal the bottle or jar during heating. Excessive pressure may build up and present a risk of explosion or material damage.

5. The indicator light turns on and off: indicates that the unit is turning on and off to maintain a steady temperature.
6. Remove the food container after warming the contents to the required temperature. Allow it to cool before handling.
7. Switch off the appliance by turning the control knob to "OFF" position.
8. Wait 10 minutes before heating a second bottle or container to avoid overheating.
9. Refill the warming chamber with fresh distilled water before operating for the second time.
10. After use, allow the appliance to cool down, then empty the bottle warmer.

**Important Notes:**

1. Always remember to stir the food well to ensure even heat distribution.
2. It is strongly recommended that you continuously stir the contents for the optimal result.

**Using the bottle warmer with the Sterilise setting:**

1. Insert the plug to the mains power socket outlet.
2. Place the empty milk bottle upside down, with teat and lid as shown, into the bottle warmer (Fig.3).
3. Pour 20ml of distilled water into the bottle warmer, then place the bottle warmer lid into position as per diagram (Fig.4).



(Fig.3)



(Fig.4)

4. Turn the control knob to Sterilise setting . The indicator light will light up.
5. Sterilising cycle will be completed when the water dries out (10-12mins approx.). The indicator light will turn off automatically.
6. Turn the knob to the "OFF" position.
7. Allow the appliance to cool down, then carefully open the lid and remove the items from the warmer.
8. **Warning of scalding!** Do not move the appliance while it contains hot water or steam is escaping.

**Important Notes:**

1. Always allow the teat to cool before feeding baby.
2. Press the reset button to reset the product in preparation for its next use.

**Cleaning and Maintenance:**

1. Do not use solvents, petrol, alcohol, kerosene, washing powder, cleanser, alkaline detergent acid, chemical cloths, etc. as these products may damage the plastics and components.
2. Do not touch the heating plate with sharp objects or metal tools as it may cause an electric shock.
3. To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Clean using a soft damp cloth and mild detergent.
4. Switch off and unplug the bottle warmer after each use. Allow it to cool down to room temperature before handling.
5. Remove the water from the bottle warmer.
6. Pull out the bottle stand from the warming chamber.

7. Wipe the surface of the bottle warmer with a damp cloth. Do not immerse the appliance in water or other liquid.
8. Rinse the top cover and heating basket with tap water.
9. Dry with a soft cloth.

**Descaling:**

To maintain performance, descale every 4 weeks.

1. Mix 10g of citric acid with 200mL of water and pour into the warming chamber.
2. Turn the control knob to Sterilise (100°C) and run for 10 minutes.
3. After heating, unplug and allow to cool.
4. Empty and rinse thoroughly with clean water.

THIS PAGE HAS BEEN PURPOSELY LEFT BLANK.

**12 Months Warranty**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below for the entity you purchased this product from for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Model: JLR-81557

KEYCODE: K: 43-653-645 | T: 71-889-221

MADE IN CHINA

CUSTOMER SERVICE:  
KMART AU: 1800 124 125  
KMART NZ: 0800 945 995  
TARGET AU: 1300 753 567