

anko

Vibrating Roller Massager

SM-409B

User Manual



PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

DANGER!

To reduce the risk of electric shock:

Always unplug this product from the electrical outlet immediately after use and before cleaning.

WARNING !

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. The product should never be left unattended when connected to mains power. Unplug from the mains power outlet when it is not in use and before putting on or taking off parts.
2. Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
3. Do not carry this product by its supply cord or use cord as a handle.
4. Never operate the product with the air openings blocked. Keep the air openings free of lint, hair, and the like.
5. Do not drop or insert any object into any opening.
6. Do not use it outdoors.
7. To disconnect, switch off all controls and remove plug from mains power outlet.
8. Close supervision is necessary when this appliance is used by, or near children, or disabled persons to ensure that they do not misuse the product.
9. Keep the cord away from heated surfaces. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. This appliance contains rechargeable batteries that are non-replaceable.
12. Do not use the appliance if it, or the USB power cord shows signs of damage, if it is not in perfect working order, or if it has been dropped or become damp.
13. This appliance must only be supplied by AS/NZS 61558.1 & AS/NZS 61558.2.16 certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
14. For cleaning, please refer to CLEANING AND STORAGE section.

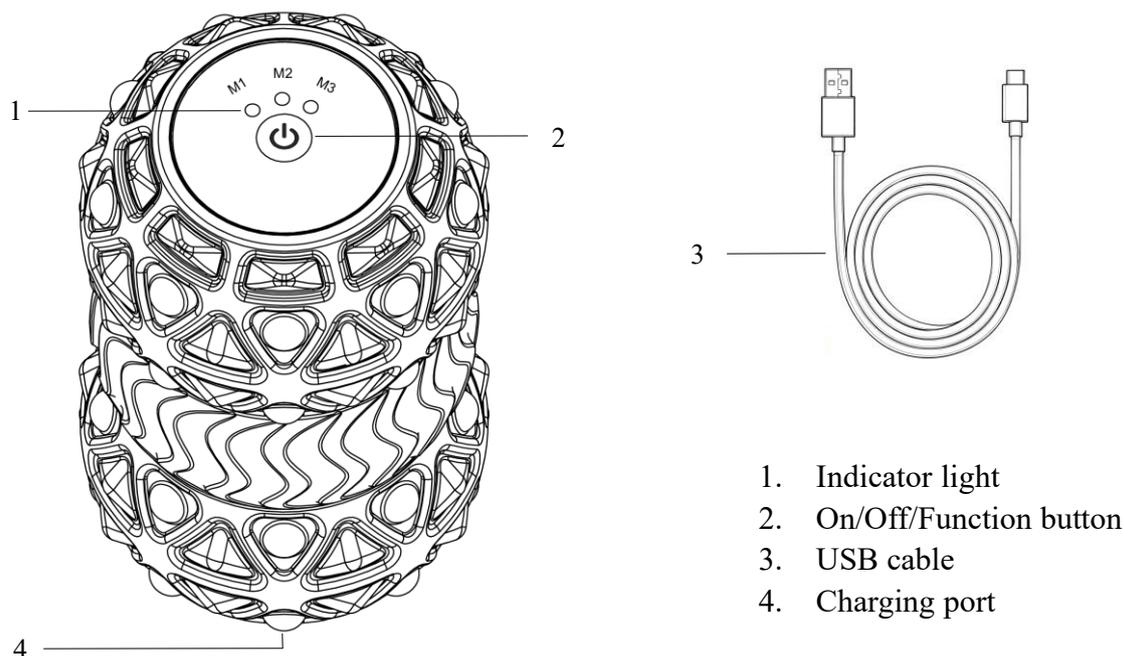
CAUTION!

15. The product has built-in lithium-ion batteries. Pay attention to the following:
 - a) Only use and store the product in an environment where the temperature is between -5°C and $+35^{\circ}\text{C}$.
 - b) If not used for a long time, re-charge every three months to prevent battery damage.
 - c) Charging time may be longer when the room temperature is below 10°C .
 - d) Charge the battery when the battery power goes low, avoid allowing the battery to go flat.
16. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 60°C .
17. Do not expose the product to high temperatures (above $+35^{\circ}\text{C}$), strong magnetic fields, near flammable and explosive gases (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.

	<ul style="list-style-type: none">• The device is not to be used for commercial use or medical purposes.• If you have health concerns, consult your doctor before using the Vibrating roller massager.
	<ul style="list-style-type: none">• Only use indoors!
	<ul style="list-style-type: none">• Do not use the device in damp rooms (e.g. When bathing or showering).
	<ul style="list-style-type: none">• DO NOT wash!

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR VIBRATING ROLLER MASSAGER



IMPORTANT!

- Please make sure that your appliance is received with the right components shown above. Check everything carefully before using it. If any parts are missing or damaged, return the product to the place of purchase for replacement.
- When using the appliance for the first time, carefully remove all packaging and dispose of them responsibly.

BEFORE FIRST USE

Charge the battery

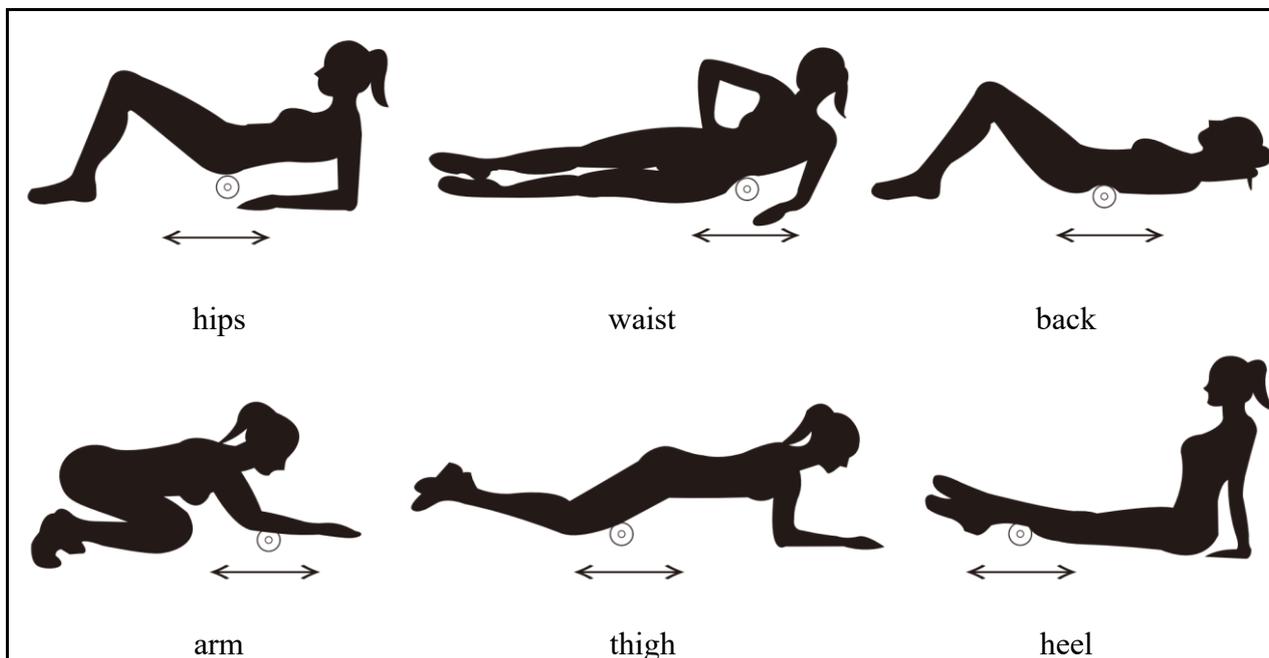
- Fully charge the appliance before first use.
- **The supplied USB charging cable should be inserted into the standard USB power source rated at 5Vd.c. 1A specification.**

WARNING! Use only the supplied USB charging cable to charge the appliance.

- The indicator light flashes when charging:
 - One indicator light will flash when 0-30% charged.
 - Two indicator lights will flash when 30-70% charged.
 - Three indicator lights will flash when 70-99% charged
 - Three indicator lights will light up when fully charged.
- The full charging time is around 2.5 hours.
- After the battery is fully charged, the product can be used for approximately 1.5 hours.




USE YOUR VIBRATING ROLLER MASSAGER

Body areas to use



Operation

   - Press the  button to turn on and off the appliance and set the vibrating level.

 <p>M1 M2 M3 ● ○ ○</p>	M1: low speed vibration
 <p>M1 M2 M3 ○ ● ○</p>	M2: medium speed vibration
 <p>M1 M2 M3 ○ ○ ●</p>	M3: high speed vibration
 <p>M1 M2 M3 ● ● ●</p>	Auto mode
 <p>M1 M2 M3 ○ ○ ○</p>	OFF

- The appliance will auto-off after 15 minutes operation.

CLEANING AND STORAGE

- Turn off the appliance and make sure the USB cable is disconnected from the appliance and power supply before cleaning.
- Clean the appliance with a soft dry cloth.

WARNING!

Do not immerse the appliance or USB cable in water or any other liquid to clean.

Do not use benzene or thinner or any other aggressive detergents to clean the product. It may cause damage to the product.

- Ensure the product is clean and dry before storage.
- This product contains a Li-ion battery. It should be stored in a clean, dry, ventilated room with an ambient temperature range of -5°C to $+35^{\circ}\text{C}$ and a relative humidity of 25% to 75%.

TECHNICAL SPECIFICATION

Input: 5Vd.c. 1A

Battery: Li-ion 3.7V 1800mAh

12 Month Warranty

Thank you for your purchase.

Your new product is guaranteed to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us