 


Collapsible Walker Instruction Manual

6+
months

11
kg

MAXIMUM
WEIGHT
OF CHILD

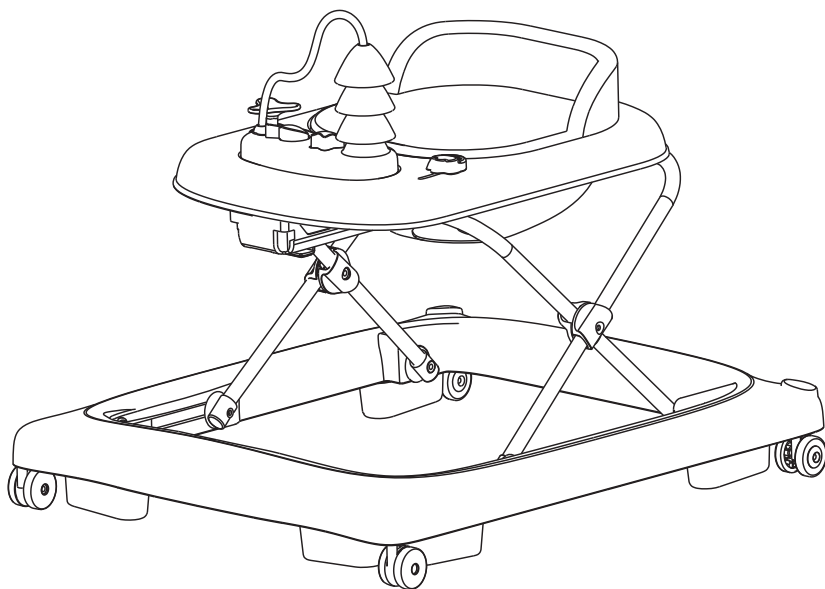

The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

**IMPORTANT: KEEP FOR FUTURE REFERENCE.
READ CAREFULLY.**



WARNING:



READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THE WALKER.
FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD
RESULT IN DEATH OR SERIOUS INJURY.

ADULT ASSEMBLY IS REQUIRED.

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.



WARNING - STAIR HAZARD



AVOID SERIOUS INJURY OR DEATH: BLOCK STAIRS/STEPS SECURELY
BEFORE USING WALKER.



WARNING



- Never leave a child unattended.
- Always keep child in view while in walker.
- Only use on flat surfaces free of objects that could cause the walker to tip over.
- To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters and fireplaces etc.
- Do not use the walker if it is damaged or broken.
- Do not use until baby can sit up by itself.
- To avoid serious injury or death, block stairs/steps securely before using walker.
- Clean friction components regularly to maintain stopping performance.
- Remove packaging from walker vicinity after it's assembly.
- Use only accessories as recommended by the supplier.
- ALWAYS use the safety locks once the walker height is correctly adjusted.
- Check that all safety locks are engaged before placing child in the walker.
- This walker should not be used by a child who can walk unaided.
- This walker should not be used by a child weighing less than 7kgs and less than 65cm in height.
- A child should discontinue using this walker when weighing more than 11kgs and is taller than 80cm in height.
- The walker is not suitable for babies under 6 months of age.
- Electrical cords, heaters, fireplaces and other hot objects, or any other objects or substances that may be dangerous, should be guarded or put out of reach of a child using the walker.
- Promptly replace any broken parts.
- The walker should not be used (whether indoors or outdoors) on surfaces that have any obstructions that could cause the walker to tip over.
- The walker should not be carried with a child in it.
- Adjust the height of the walker so that both feet of a child in the walker should be able to touch the ground.
- Care must be taken while folding and unfolding the walker to prevent fingers being caught.

WARNING

- Keep medication, strings, elastics and small toys out of reach from any position of the walker.
- ALWAYS attach the toys tightly to the walker according to the instructions. Check frequently.
- This walker should be used only for short periods of time eg: 20 minutes.

BATTERY SAFETY INFORMATION

 
In exceptional circumstances, batteries leak fluids that can cause a chemical burn injury or ruin your product. To avoid leakage:

- DO NOT mix old and new batteries or batteries of different types: alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use.
- ALWAYS remove exhausted batteries from the product.
- Dispose of batteries safely.
- DO NOT dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same equivalent type, as recommended.
- DO NOT charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.

Read these instructions carefully before use and keep for future reference.
The child may be hurt if you do not follow these instructions.

- Dispose of all packaging material immediately after the walker is assembled.
- Identify all parts and components.

Supplied loose in box

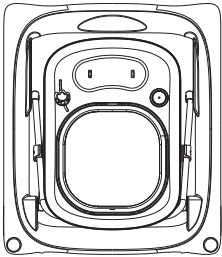


A
Walker
x 1



B
Tray Toy 1
x 1



 
C
Seat
x 1



D
PLAY UNIT
x 1



 E
Tray Toy 2
x 1

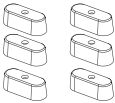

F
Rubber Stoppers
x 6



G
Front Wheels
x 2



H
Rear Wheels
x 2

 


I
Screws
x 6

Required (Not Supplied)




J
AA Batteries
x 2




K
Phillips Head Screwdriver
x 1

To assemble Walker

 - 1 Turn Walker over. Insert Front and Rear Wheels into wheel housing. Assemble Rubber Stoppers using 6 x Screws and a Phillips Head Screwdriver (not supplied)

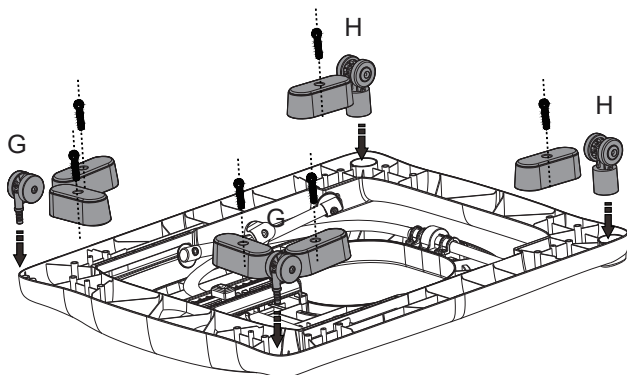


 - 2 Lift Top Tray up until frame "clicks" and locks into place.

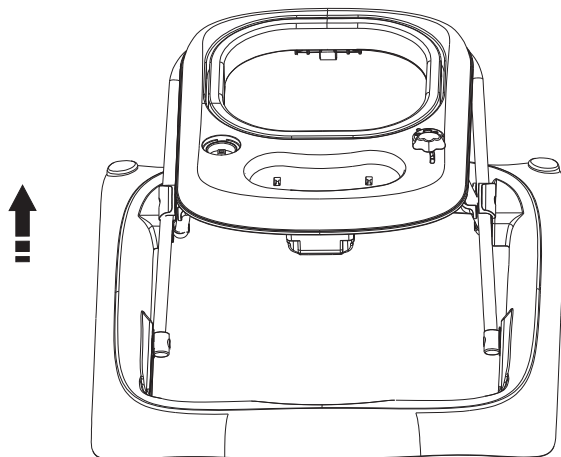


To assemble Walker

 - 3 Place Seat into Walker. Feed tabs through slots in Top Tray. Pull down from underside to secure. Ensure the tabs are locked as per image below.

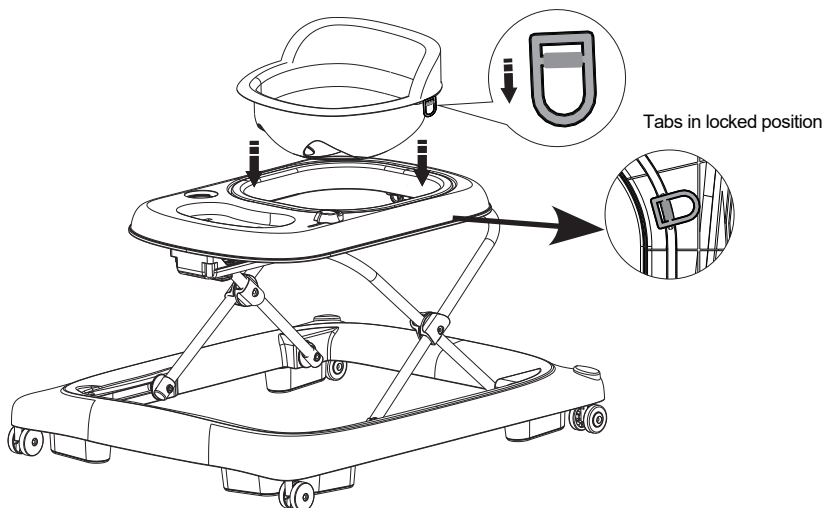


 - 4 Using a Phillips Head Screwdriver (not supplied), remove battery compartment cover on underside of Play Unit. Insert 2 x 1.5V AA batteries (Not supplied) by following proper polarity direction as shown inside the battery compartment. Close and screw the battery cover shut. Assemble Play Unit and all Tray Toys to the Play Unit and tray.

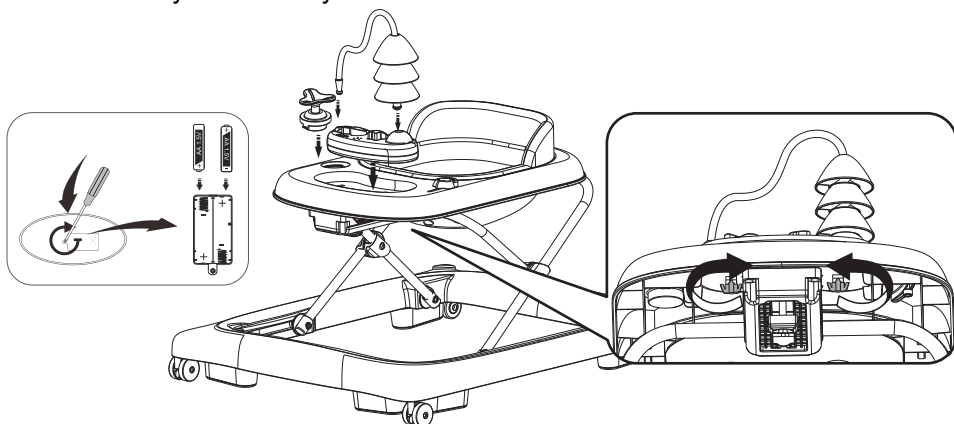


To assemble Walker

 - 5 To adjust Walker height, turn adjustment button, push in and hold while adjusting walker to desired height. Note: There are 3 seat height positions.

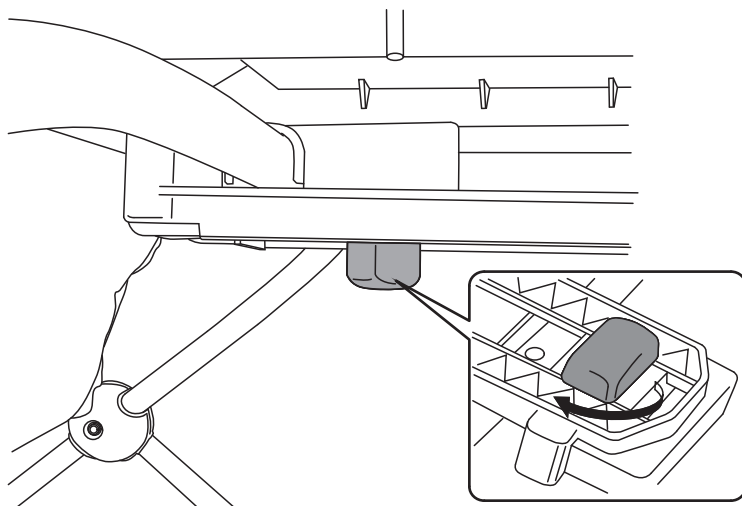

 - 6 To fold Walker for storage, adjust Walker height all the way down, in order to lay flat.

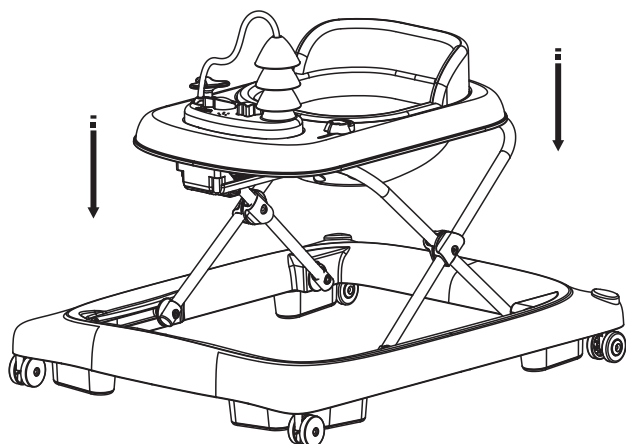

CARE INSTRUCTIONS:

SEAT PAD:

REMOVE FROM FRAME.

COLD HAND WASH ONLY USING A MILD SOAP OR DETERGENT.

DO NOT SOAK.

DO NOT BLEACH.

DO NOT TUMBLE DRY.

DO NOT IRON.

DO NOT DRY CLEAN .

DRY THOROUGHLY BEFORE REUSE OR STORAGE.

NOT INTENDED FOR REPEATED WASHING.

FRAME:

WIPE CLEAN WITH A DAMP CLOTH AND DRY IMMEDIATELY WITH A SOFT CLEAN CLOTH.

DO NOT USE ABRASIVE PADS, BLEACH OR STRONG HOUSEHOLD CLEANERS. DAMAGE MAY RESULT.

PLAY UNIT:

SURFACE CLEAN ONLY.

WIPE CLEAN WITH A SLIGHTLY DAMP CLOTH.

DO NOT IMMERSE IN WATER.

- Check the Walker regularly to ensure that locking devices and components are secure and working properly.
- Always check parts regularly for tightness of screws, nuts and fasteners. Tighten or replace if required.
- To maintain the safety of the Walker, seek prompt repairs for bent, torn, worn or broken parts.
- Use only those parts and accessories approved by the manufacturer.
- Do not use abrasive cleaners.
- Allow to dry completely before storage.

NOTES:

THIS PAGE HAS BEEN PURPOSELY LEFT BLANK.

KEYCODE: K: 43-655-106 | T: 71-899-824

MADE IN CHINA

RETAILER INFORMATION IF SOLD BY:

KMART AU: L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA.

KMART NZ: REGIONAL OFFICE C/O KMART PAPATOETOE STORE, HUNTERS PLAZA, GREAT SOUTH ROAD, PAPATOETOE, AUCKLAND, NEW ZEALAND.

TARGET AU: L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA.

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ 0800 945 995

TARGET AU: 1300 753 567