

anko

Flat Fold Highchair

Instruction Manual

 
6-36
months

BPA
FREE

FEEDING
TRAY

15
kg

MAXIMUM
WEIGHT
OF CHILD

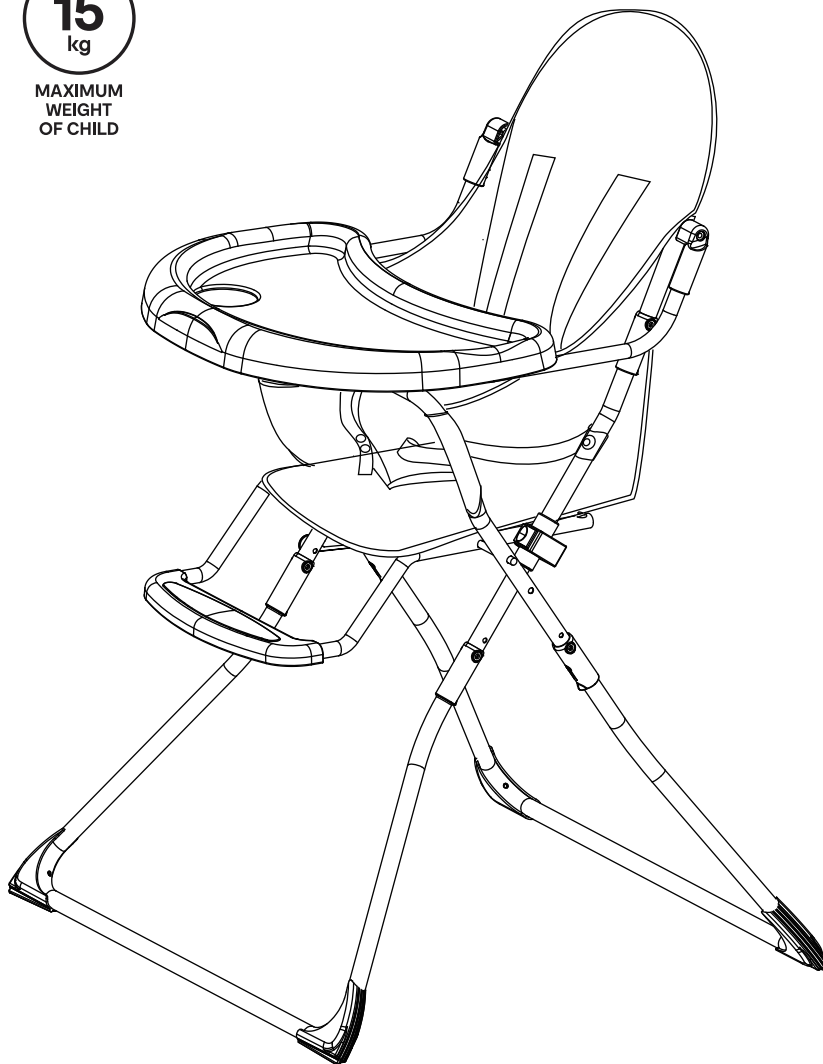

**IMPORTANT! READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE**

⚠️ WARNING

Read all instructions BEFORE assembly and USE of product.

IMAGES/DRAWINGS IN THE MANUAL ARE FOR VISUAL PURPOSES ONLY.

 
ACTUAL PRODUCT MAY VARY SLIGHTLY. THE MANUFACTURER RESERVES THE RIGHT TO CHANGE ANY SPECIFICATION OR FEATURES WITHOUT PRIOR NOTICE.

WARNING


- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED — MOST INJURIES FROM HIGHCHAIRS ARE CAUSED BY FALLS.
- POSITION THE HIGHCHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.
- ALWAYS USE THE RESTRAINT SYSTEM.
- FALLING HAZARD: PREVENT YOUR CHILD FROM CLIMBING ON THE PRODUCT.
- DO NOT USE THE PRODUCT UNLESS ALL COMPONENTS ARE CORRECTLY FITTED AND ADJUSTED.
- BE AWARE OF THE RISK OF OPEN FIRES AND OTHER SOURCES OF STRONG HEAT IN THE VICINITY OF THE PRODUCT.
- BE AWARE OF THE RISK OF TILTING WHEN YOUR CHILD CAN PUSH THEIR FEET AGAINST A TABLE OR ANY OTHER STRUCTURE.
- Adult assembly required.
- Take care when unpacking and during assembly.
- Dispose of all packing materials carefully after assembly.
- Use only on a flat, even and horizontal floor. Do not elevate the highchair on any structure or table.
- To reduce the risk of injury, position the highchair away from furniture, walls, hot surfaces and liquids, window covering cords and electrical cords. Position the highchair away from furniture when the highchair is not being used at a table with the tray removed.
- Do not use the highchair until the child can sit up unaided.
- This highchair should be used in an upright position only by children capable of reliably and consistently sitting upright.
- This highchair is intended for children able to sit up unaided and up to 3 years/ 36 months or a maximum weight of 15kg
- Do not use this highchair for more than one child at a time . Do not leave other children playing unattended near the highchair.
- Keep children away when unfolding and folding the product to avoid injury.
- If the highchair is not working correctly, do not use and seek repair.
- Regularly inspect your highchair. Discontinue use if any part is broken, torn or missing.
- Any additional or replacement parts should only be obtained from the manufacturer or distributor.
- Never substitute parts.
- Ensure all users are familiar with the product's operation.

PARTS LIST:


Please retain all packaging until you are certain that no parts are missing.

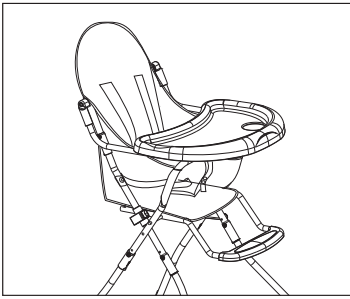

 
Seat frame pre-assembled
with footrest x1

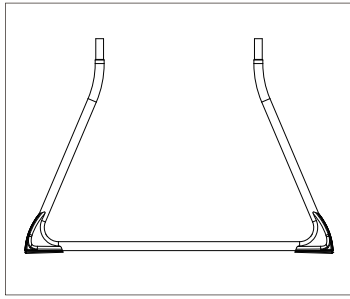

Front leg frame
(narrower at top)

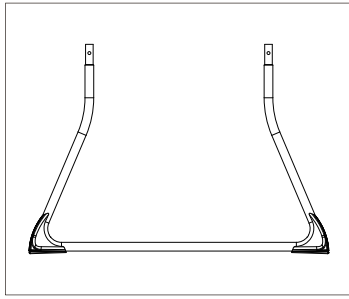 


Rear leg frame
(wider at top)

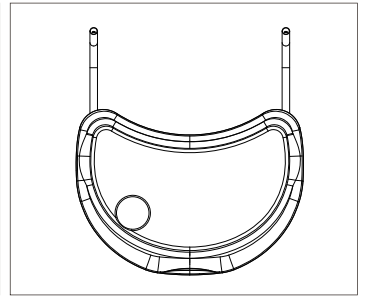 


Feeding Tray x1

ASSEMBLY:


 
1. Unfold the highchair.

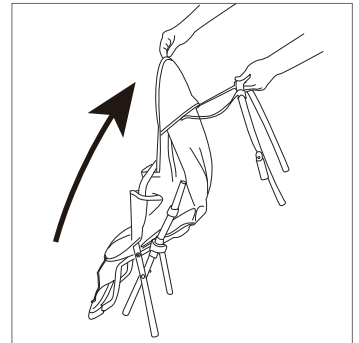

 
2. Insert the back frame tube into the seat cover.

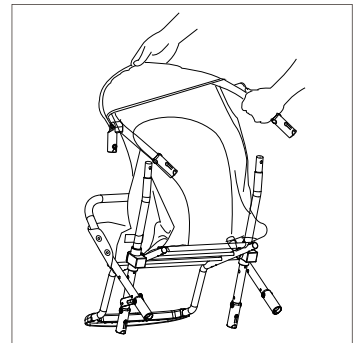

 
 
3. Press the buttons on the seat frame to connect the back frame tube at both sides. Ensure the buttons snap into place with a 'click' sound.

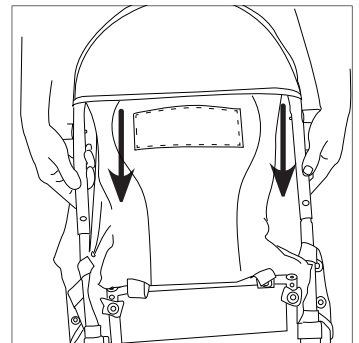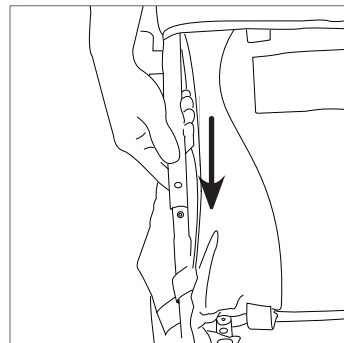


 
4. Your highchair should now be assembled as shown.

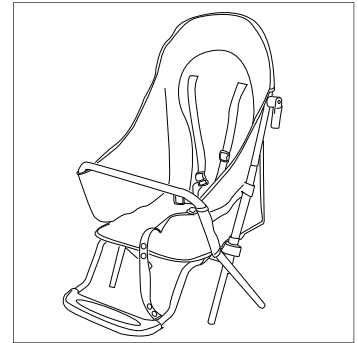

 
 
5. Press the buttons on rear leg frame to connect the rear side frame at both sides. Ensure the buttons snap into place with a 'click' sound.

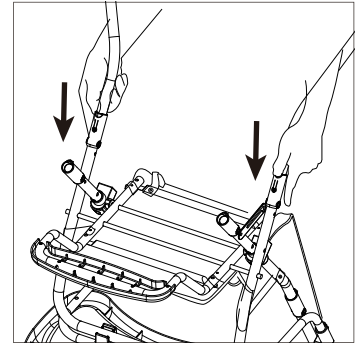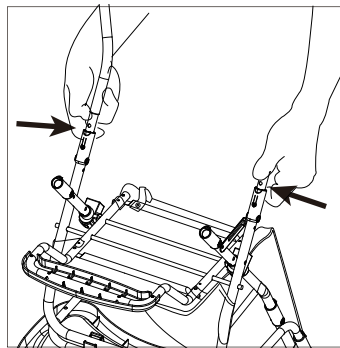

  6. Repeat the above for connecting front leg frame to front side frame. Ensure the buttons snap into place with a "click" sound.

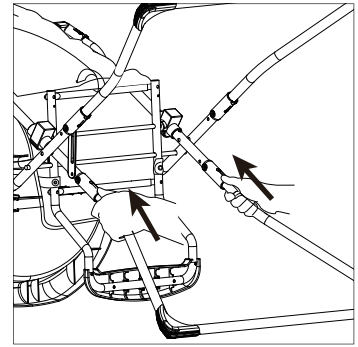
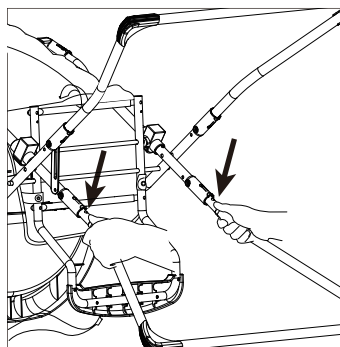


  7. Connect the crotch strap to the top bar by fastening the press studs.

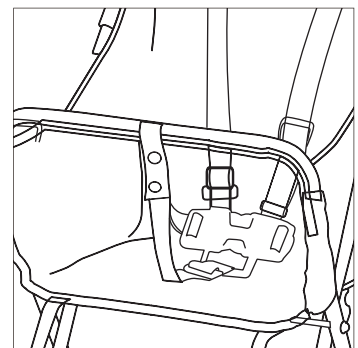
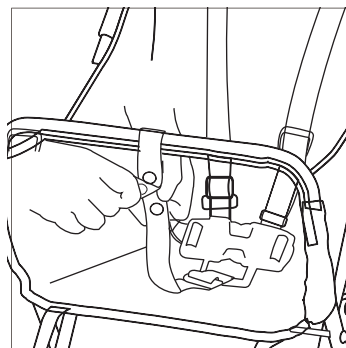


FEEDING TRAY ASSEMBLY:

  
1. Insert the end tubes of tray to the slots of the seat frame at both sides. Press the buttons at both sides of tray for connection. Ensure the buttons snap into place with a 'click' sound.

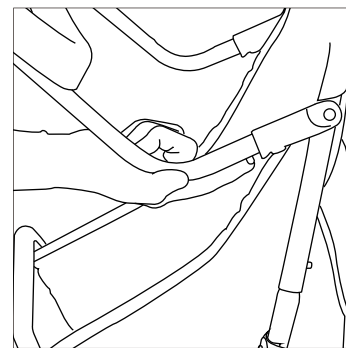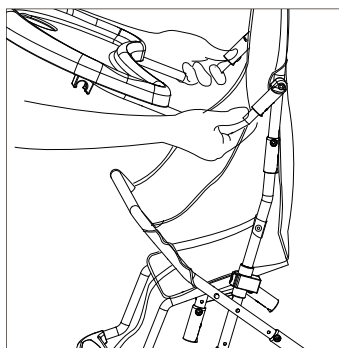

  2. Push the tray down firmly to fasten the clips to the underneath of the top bar .

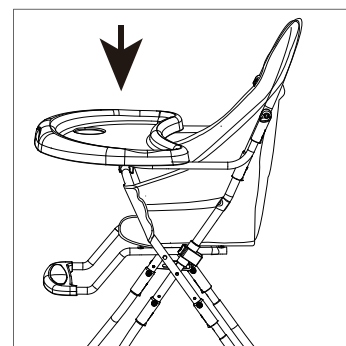
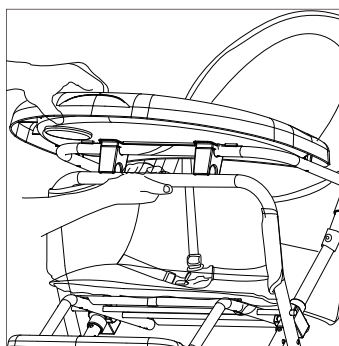


 3. The highchair is now ready to use.

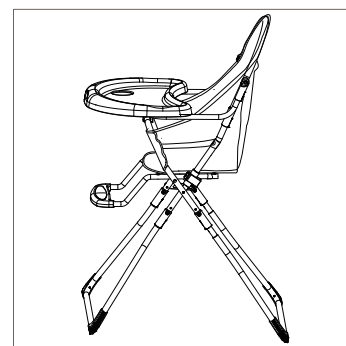



FEEDING TRAY STORAGE:

  1. Lift the tray firmly to release the clips from top bar and raise over the top of the highchair as per image shown.

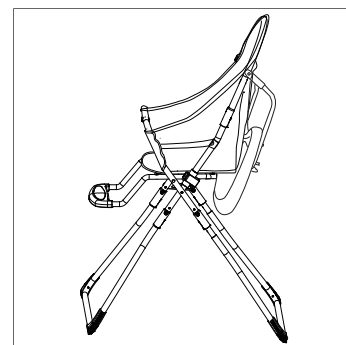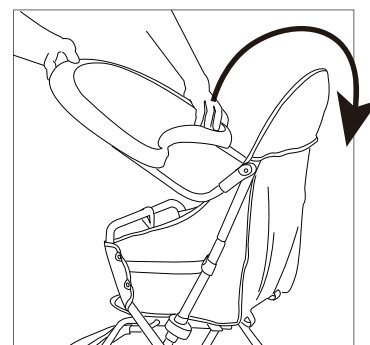

HARNES OPERATION:

  1. To secure your child in the harness, push the shoulder strap buckle prong (A) into the waist band buckle prong (B).
2. Push the assembled prongs into the buckle housing (C) until they snap into position.
3. Repeat for the other side.
4. Adjust the sliders (D) to ensure the harness snugly fits your child.
5. To release, press the centre button of the buckle housing (C).

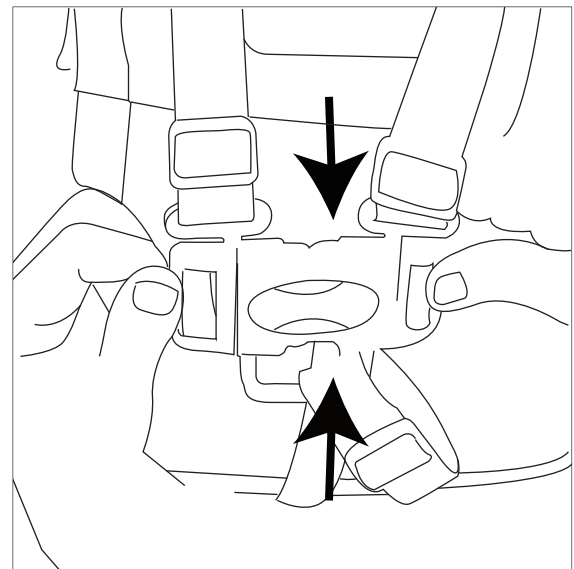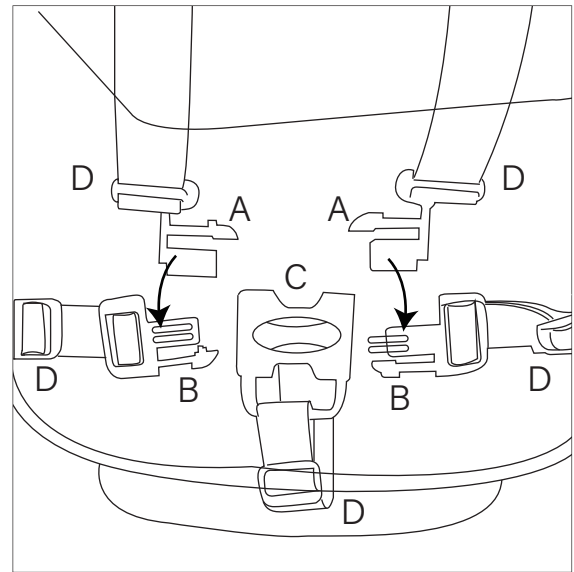


⚠ WARNING
USE THIS HARNESS AT ALL TIMES.

The highchair has 3 shoulder height positions.


In order to adjust the shoulder height, undo the harness and remove the harness straps from the webbing slots.

 Redo the harness in the desired position.

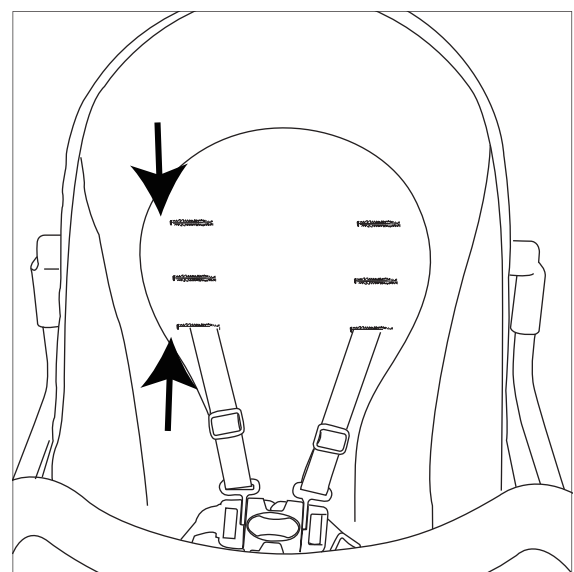


TO FOLD THE HIGHCHAIR:

 1. Ensure the feeding tray is in the storage position.

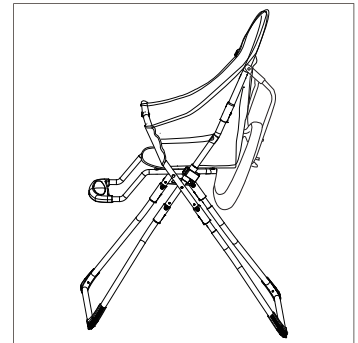

 
2. Disassemble the crotch strap by unfastening the press studs.

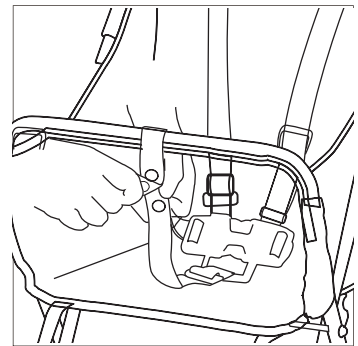



WARNING

ENSURE CROTCH STRAP IS RE-ASSEMBLED BEFORE EACH USE (see assembly instructions on page 4 - point 7)

 3. Press the buttons located at both sides of the highchair simultaneously and fold the legs together.

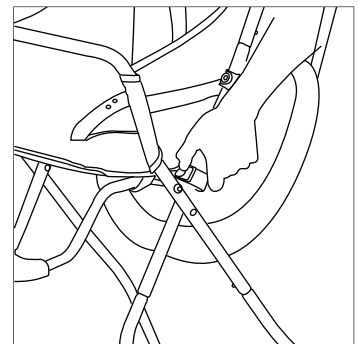

  4. Keep pulling until it folds completely.

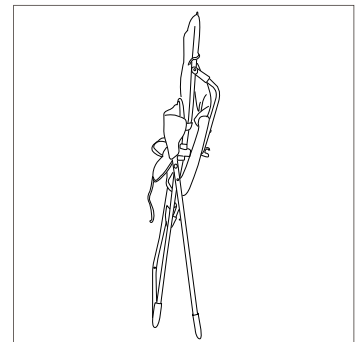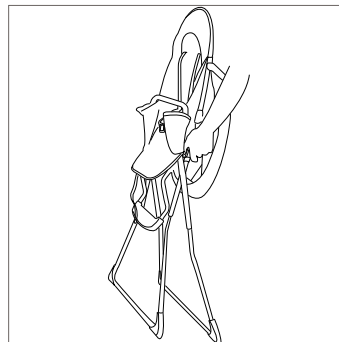

CARE AND MAINTENANCE

- › All assembly fittings are to be tightened properly. Inspect regularly and retighten as necessary.
- › Plastic and metal parts: Wipe with a damp cloth.
- › Fabric: Wipe clean with a damp cloth. Do not bleach. Do not iron. Do not dryclean ☒.
- › Do not use abrasive pads, bleach or strong household cleaners.
- › Avoid direct heat and sunlight.
- › Dry thoroughly before storing.
- › Always store in a clean and dry area.

KEYCODE: K: 43-656-141 | T: 71-905-457

MADE IN CHINA

RETAILER INFORMATION IF SOLD BY:

KMART AU: L2/ 1 MIDDLE ROAD,
CHADSTONE VIC 3148 AUSTRALIA.

KMART NZ: REGIONAL OFFICE
C/O KMART PAPATOETOE STORE,
HUNTERS PLAZA, GREAT SOUTH
ROAD, PAPATOETOE, AUCKLAND,
NEW ZEALAND.

TARGET AU: L2/ 1 MIDDLE ROAD,
CHADSTONE VIC 3148 AUSTRALIA.

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567