

70.7 mm

100.0 mm

anko

MP3 PLAYER

Instruction manual

K: 43667840 | T: 72355145

K: 43667857 | T: 72355114

K: 43667864 | T: 72355138

Model: JLR-80852



Please read this manual carefully before using the product and retain it for future reference.

Package contents:

- 1x MP3 player
- 1x Earphones (wired)
- 1x User Manual
- 1x USB-C Cable (Type A to Type C)
- 1x 8GB microSD Memory Card (Pre-installed)


Product Specifications:

Product dimension: 90.5x39.5x10mm
 Display: 1.77-inch LCD screen
 Input rating: 5V=1A
 Bluetooth version: 5.0
 Speaker: 1x 8Ω 0.8W
 Audio formats:
 APE (Fast/Normal compression; 800–1000 Kbps; 8–48 kHz sampling rate)
 FLAC (1000–1200 Kbps; 8–48 kHz sampling rate)
 MP3 (8–320 Kbps; 8–48 kHz sampling rate)
 WMA (5–384 Kbps; 8–48 kHz sampling rate)
 WAV (32–1536 Kbps; 8–48 kHz sampling rate)
 AAC-LC (8–320 Kbps; 8–48 kHz sampling rate)
 Video format: AVI (128 × 160 resolution; conversion required)
 Recording format: WAV
 Photo formats: JPG, JPEG, BMP (file size up to 1 MB)
 E-book format: TXT (Unicode UTF-8)
 Charging time: Approx. 2 hours
 Play time: up to 10 hours (at 80% volume)
 Expandable microSD card slot up to 64GB (8GB microSD memory card included)
 Battery capacity: 3.7V, 210mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information

- This product contains a rechargeable lithium-ion battery (non-replaceable).
- Do not leave the device connected to the charger for extended periods.
- Do not allow the battery to fully discharge before recharging.
- Do not disassemble, crush, puncture, or modify the battery or device.
- Handle with care and avoid strong impacts or dropping.
- Do not charge the device unattended.
- Ensure the product is powered OFF before connecting or disconnecting the charging cable.
- Avoid exposure to high temperatures, direct sunlight, fire or liquids.
- If the device is damaged, swollen, or leaking, stop using it immediately.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Use a certified 5VDC 1A USB power adaptor (not included) that complies with local safety standards.

Product diagram

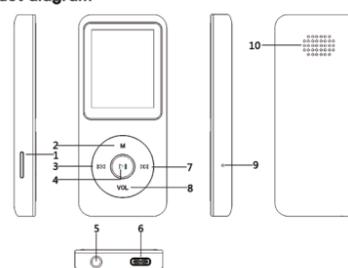

- 1. microSD Card Slot
- 2. M Button (Menu)
- 3. Previous Button
- 4. Play/Pause Button
- 5. 3.5mm Earphone Jack
- 6. USB-C Charging Port
- 7. Next Button
- 8. VOL button (Volume / Back)

Short press: return to previous menu
 Long press: Adjust volume
9. Reset button:
 Insert a pin to reset the device if unresponsive
10. Speaker

OPERATING INSTRUCTIONS

- 1. Power On / Off**
 - Insert a memory card before using the MP3 player.
 - Power on: Long press Play/Pause button for about 3 seconds.

- Power off: Long Press Play/Pause button for about 2 seconds.
 - The player will automatically power off after 5 minutes of inactivity.
- Note:** Auto power-off does not operate when the player is charging or connected to a computer.

2. Charging the product

- Charge fully before first use.
- Use a certified 5VDC 1A USB power adaptor (not included). Only use the supplied charging cable.
- Regularly charge the device (at least once a month) to maintain battery life. Prolonged storage at low charge may reduce battery performance.
- It takes approximate 2 hours to fully charge the product.
- When the battery is low, the battery icon turns red. The player will shut down automatically a few seconds later. Please recharge promptly.

3. Music

Select Music from the main menu to access the music library.

Music Categories

- All Songs: List all songs on the device.
- Last played/Playing now: Shows the currently playing track.
- Artists: View songs grouped by artist.
- Albums: View songs grouped by album.
- Favorites: Plays only songs added to the Favorites list.
- Update playlist: Refresh the music list after adding new files to the microSD card.

Playback

Press Play/Pause to enter the All songs list.

- 1) Play/Pause: Short Press to play or pause.
- 2) Next / Previous:
 - Short press to skip tracks.
 - Long press to fast-forward or rewind (in 5-seconds steps).
- 3) A-B Repeat:
 - Long press M to set point A (icon turns blue).

- Long press again to set point B (icon turns green).
 - Long press again to exit A-B repeat.
- 4) Volume Adjustment:
 - Long press the VOL button to open the volume adjustment bar.
 - Press the Previous button to increase the volume.
 - Press the Next button to decrease the volume.
 - 5) Background Play: Background play is supported.

(Not available while using Video, Recorder, FM Radio or Pictures.)

Music Menu

Short press M during playback.

- 1) Back to the Main page
- 2) Variable Speed Playback: Adjust playback speed (-9 to +9 levels, default 0).
- 3) Play Mode: Loop All / Shuffle / Loop single / Sequential play.
- 4) Bookmarks: Save up to 5 bookmarks within a track.
- 5) Add to playlist: Add or remove a song from the favorites list.
 - Heart icon turns red when added
 - Heart icon turns white when removed
- 6) Equalizer: Normal, Pop, Rock, Jazz, Classic, Dance, Country (default Normal).

4. Video

Select Video from the main menu to view the file list. Chose a video and press Play/Pause to start playback.

Note: Video files must be converted to AVI, 128x160 format using a conversion tool.

5. Recorder

Select Recorder from the main menu to access recording functions.

- 1) Start Voice Recording
 - Select Start Voice Recording, then press Play/Pause to begin.
 - Press Play/Pause again to pause.
 - Press VOL to save the recording.

Recordings are saved automatically in the Record folder. If the battery becomes low or storage is full, the system will stop and save the recording.

- 2) Recordings Library
View and play saved recordings.
- 3) Recording Quality

- High Quality: WAV high-quality recording.
- Normal Quality: WAV standard recording.
- VAD: Voice-activated recording.

6. FM

Select FM from the main menu.

Important:

Please insert the wired earphones before using FM Radio.

The earphones act as the FM antenna and are required for proper reception.

FM Menu Options (Short press M)

- 1) Radio Bands: (Device may vary by region)
 Normal: 87.0–108.0 MHz
 Japan: 76.0–96.0 MHz
 Europe: 87.0–108.0 MHz
- 2) Preset FM Stations: Save up to 30 stations.
 - Displays all saved stations (up to 30 presets).
 - To delete a preset: Select the station and press M to remove it.
- 3) Auto Search FM: The player will automatically scan for available stations and save them to the preset list. After the search is completed, press the Play/Pause button to switch between the saved stations.
- 4) Clear all Preset FM: Deletes all saved stations at once.

7. E-book

Select E book from the main menu to view supported text files.

Controls

Next Page / Previous Page: Short press Next or Previous.

E-book Menu (press M while reading)

- 1) Set the auto page turn time:
Set the interval between 3 to 30 seconds.
To start auto page turn: While viewing an e-book page, short press the Play/Pause button.
- 2) Background Color: Black / White / Yellow.
- 3) Select Page: Allows manual page jumping. Enter a page number to move directly to that page.
- 4) Bookmarks: Press M to set or delete bookmarks (up to 5).

Notes:

E-book files must be TXT format encoded in Unicode (UTF-8).

8. Pictures

Select Photo from the main menu to open the image list. Press Play/Pause to view the selected picture. Press VOL to return to the list. Supports JPG/JPEG/BMP (file size up to 1MB).

9. Bluetooth

Select Bluetooth from the main menu.

- 1) Bluetooth On/Off: Press Play/Pause.
- 2) Device Name: Shows the current Bluetooth name
(Black: Anko43667840; Pink: Anko43667857; Silver: Anko43667864).
- 3) Paired Devices: View or remove paired devices.
- 4) Available Devices: Scan for available Bluetooth devices.

Note: Bluetooth is not supported in Video or FM mode.

10. Settings

Function	More
Alarm	Turn the alarm on or off. Setting alarm time: HH/MM alarm cycle: Once / Daily / Working day Note: Idle shutdown is disabled when the alarm is turned on.
Language	Default: English. Total is 9 Languages.
Date & Time	Allows you to set the system date and time. Date format: YY/MM/DD Time format: HH/MM/SS
Brightness	Default: 60 Range: 10–100
Backlight Timer	Backlight Settings: Turn the backlight always-on mode on or off. Default: 60 seconds Range: 10–100 seconds. Adjusted in steps of 10. Screen Saver settings: Turn the screen saver on or off. Default: 20 seconds Range: 10–100 seconds. Adjusted in steps of 10.
Idle Shutdown	Enables the device to power off automatically after a period of inactivity. Default 5 Minutes Range: 1–60minutes. Set as you need. Note: Idle shutdown is disabled when the alarm is turned on.
Information	Displays software information Version: yp3_2.0.46 The date will update if software is updated.
Storage Status	shows total and remaining capacity. If the device is working abnormally due to incorrect settings, use this feature to restore the device to its default settings.
Factory settings	
Update playlist	To refresh the media library (new videos, photos, music or e-books). If this step is not performed, the new files may not appear or may not play correctly.

11. Folder

Browse all files on the microSD card. Selecting a file will automatically open it with the appropriate application.
 Delete File: Select the file and short press M to delete. (Folders cannot be deleted.)

12. Connect to Computer

Use the provided USB-C cable to connect the MP3 player to your computer.

The player will display selectable modes:

- Charge & Transfer: Charge the device and transfer files by accessing the player as a removable disk.
- Charger & Play: Charge the device while using the player. (Data transfer is disabled in this mode.)

Notes:

1. Always eject the removable disk safely to avoid data loss.
2. If the computer does not recognize the device, reconnect or try another USB port/cable.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear

the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.



MADE IN CHINA
CUSTOMER SERVICE:

KMART AU: 1800 124 125
 KMART NZ: 0800 945 995
 TARGET AU: 1300 753 567