

80 mm

anko MP4 PLAYER Instruction manual K: 43667871 | T: 72355121 Model: JLR-81530




Please read this manual carefully before using the product and retain it for future reference.

Package contents: 1x MP4 player, 1x Earphones(wired), 1x User Manual, 1x USB-C Cable (Type A to Type C), 1x 32GB microSD Memory Card (Pre-installed)

Product Specifications: Product dimensions: 80 x 57 x 11mm, Display: 2.8-inch LCD screen, Input rating: 5V ~ 1A, Bluetooth version: 5.3, Speaker: 6Ω 1W, Video format: Supports RMVB, AVI, MKV, VOB, MOV, FLV, F4V, M4V, MP4, 3GP, MPG, MPEG formats for 720P video playback, Video display mode: Supports full-screen display, original size, and aspect-ratio modes, Audio formats: APE (Fast/Normal compression: 800-1000 Kbps; 8-48 kHz sampling rate), MP3 (8-320 Kbps; 8-48 kHz sampling rate), WAV (32-1536 Kbps; 8-48 kHz sampling rate), WMA (5-384 Kbps; 8-48 kHz sampling rate), AAC-LC (8-320 Kbps; 8-48 kHz sampling rate), FLAC (< 1000 Kbps; 8-48 kHz sampling rate), Recording format: WAV, MP3, Photo formats: JPG, JPEG, BMP, GIF, PNG, TIF (file size up to 2 MB), E-book format: TXT (Unicode UTF-8), Charging time: Approx. 2 hours, Play time: Up to 5 hours (at 80% volume), Expandable storage: microSD card up to 128GB (32GB microSD memory card included), Battery capacity: 3.7V, 600mAh rechargeable Lithium-ion battery (non replaceable)

Important Safety Information: This product contains a rechargeable lithium-ion battery (non-replaceable). Do not leave the device connected to the charger for extended periods. Do not allow the battery to fully discharge before recharging. Do not disassemble, crush, puncture, or modify the battery or device. Handle with care and avoid strong impacts or dropping. Do not charge the device unattended. Ensure the product is powered OFF before connecting or disconnecting the charging cable. Avoid exposure to high temperatures, direct sunlight, fire or liquids. If the device is damaged, swollen, or leaking, stop using it immediately. Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types). Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas and a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas. Use a certified 5VDC 1A USB power adaptor (not included) that complies with local safety standards.


Product diagram

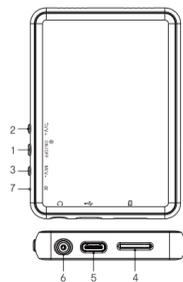

- 1. Power Button
2. Return / Volume + Button
3. Menu / Volume - Button
4. MicroSD Card Slot
5. USB-C Charging Port
6. 3.5mm Earphone Jack
7. Reset button

OPERATING INSTRUCTIONS

1. Install the memory card. Insert the microSD card into the card slot until it clicks into place.

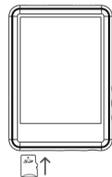

Note: 1) The MP4 player requires a microSD card to operate. A 32GB card is included and pre-installed. 2) Do not remove the microSD card while the device is powered ON. This may cause data loss or damage to the card. 3) For stable performance, use a Class 10 or higher microSD card.

2. Touch Operation

- 1) Main Interface: On the main screen, touch any app icon to open the selected function.
2) List Interface:
- Swipe up or down to scroll through items.
- Touch the Previous (<) or Next (>) icons to browse the list.
3) Return: Touch the Back (-) icon to return to the previous screen.

3. Power On/off

- Power on: Long press the Power button for about 2 seconds.
Power off: Long Press the Power button for about 2 seconds.

- Screen sleep/wake: Short press the Power button to turn the screen off or wake it up.
Auto Power-off: The player will automatically power off after 3 minutes of inactivity.

4. Charging the product

- Charge fully before first use.
Use a certified 5VDC 1A USB power adaptor (not included). Only use the supplied charging cable.
Regularly charge the device (at least once a month) to maintain battery life. Prolonged storage at low charge may reduce battery performance.
It takes approximately 2 hours to fully charge the product.
When the battery is low, the battery icon will flash. Please recharge promptly.

5. Music

Supports Music from the main menu to enter the music library.

Music Categories

- Now Playing - Shows the currently playing track
All Music - Lists all songs on the device (Internal Memory or Card directory)
My Music List - User-created playlists (1-5)
Dir List - Browse Internal Memory or microSD Card
Record List - Access recorded audio files
Tag List - Shows saved bookmarks
Swipe up/down or touch the < or > icons to browse the list.

Playback

- 1. Play / Pause: Touch the Play/Pause icon to start or stop playback.
2. Next / Previous: Touch the Next or Previous icon to skip tracks.
3. Fast Forward / Rewind

- Touch and hold Next / Previous to fast-forward or rewind (in 2-second steps)
Or slide left/right on the progress bar to seek
4. Return: Touch the Back (-) icon or press the Return button.
5. Volume Adjustment: Long press Volume+ to increase volume, Long press Volume- to decrease volume, Or touch the volume icon (located at the top-left corner of the screen) and adjust using + / -

Music Menu

- (Short press M or touch the ... (Menu) icon during playback)
1. Select EQ(Equalizer): Normal / Pop / Classic / Soft / Jazz / Rock / DBB / User EQ
2. Play Mode: Sequence / Repeat One / Repeat All / Shuffle / Shuffle + Repeat
3. Screen Display: Spectrum / Lyric
4. Add to My Playlist (1-5)
5. Add a Bookmark: save current playback position to the Tag list
6. A-B Repeat: Use the A-B Repeat function to loop a selected section of the track.
- Touch the A-B icon once: A point is set (A turns yellow)
- Touch the A-B icon again: B point is set (B turns yellow)
- Touch the A-B icon the third time: The A-B section begins repeating (A-B turns yellow)
- Touch the A-B icon the fourth time or touch Play/Pause: A-B Repeat is canceled (A-B turns white)
7. Variable Speed playback: -4 to +4
8. Delete: Delete the current File
Warning: Deleted files cannot be recovered.
9. AB Repeat Mode Settings: Replay times (1-10), replay intervals (1-7 seconds), scan speed (X2 to X32)

10. EQ Settings: Adjustable frequencies (80 Hz, 200 Hz, 1 kHz, 4 kHz, 8 kHz)
11. Information: Displays file details

6. Videos

Select Videos from the main menu to view the video file list. Swipe up/down to browse. Touch a video from card directory to start playback.

Note: Only video files up to 720p can be played directly.

Playback

- 1. Play / Pause: Touch the Play/Pause icon.
2. Next Video: Touch the Next (▶) icon to skip to the next file.
3. Fast Forward / Rewind: Slide left/right on the progress bar to seek.
4. Return: Touch Back (-) or short press the Return button.
5. Screen Lock: Touch the Lock icon
- Locked -> touch disabled
- Unlock -> touch enabled

Video Menu

- (Short press M or touch the ... (Menu) icon)
- Playback Mode: Repeat One / Repeat All
- Screen Size: Full Screen / Original Size / Scale
- Delete File: Delete the current video file
Warning: Deleted files cannot be recovered.
- Track: Select available tracks
- Subtitle: Off / Plug-in Subtitles
- Information: Displays file details

7. Recorder

Select Recorder from the main menu.

Start Recording

Touch the Record icon to begin recording. Touch again to stop and save. Recordings are saved to the selected storage location.

Pause / Resume

Touch Pause / Resume to pause or resume the recording.

Recorder Menu

- (Short press M or touch ... (Menu) icon)
- Recording Format: WAV / MP3
- Recording Quality: Low / Medium / High
- Recording Gain: Level 1-5, adjust to control recording sensitivity
- Save Path: Internal Memory / Card Memory

Recorded Files

Select Music -> Record List to play saved recordings.

Recording Information

File Naming: RECyyyymmddhhmmss.wav/mp3 (e.g. REC20251127162007.wav, yyyy: Year, mm: Month, dd: Day, hh: Hour, mm: Minute, ss: Second)
Duration Display: hh:mm:ss
Remaining Time: Based on available memory (not battery)

8. Pictures

Select Pictures from the main menu to view image files. Swipe up/down or touch < / > to browse. Touch an image to enter preview mode. Touch the screen to display controls.

Picture Controls

- Menu (Short press M or touch ... (Menu) icon)
- Rotate: 90° / 180° / 270°
- Zoom: Zoom in/out
- Screen Size: Full Screen / Original / Scale
- Slide Interval: 1-10 seconds
- Set as Desktop: Set as desktop wallpaper / restore default background
- Delete File: Delete the current picture
Warning: Deleted pictures cannot be recovered
- Information: Displays file details

Previous / Next Image

Swipe left or right to switch images. Slideshow Playback: The device supports automatic photo playback. During picture preview, touch the play/pause icon (located at the bottom-left corner of the screen) to start automatic playback. The playback interval follows the setting in Slide Interval (1-10 seconds). To stop slideshow playback, touch the Back (-) icon or play/pause icon.

9. EBook

From the main menu, select EBook to enter the e-book file list. Swipe up/down or touch the < / > icons to browse. Touch any file to open it. In the E-Book Reading Interface: 1) Page Navigation: Swipe left/right on the screen to turn pages. 2) Return: Short press the + Return key or touch the - icon to exit and go back to the previous screen.

Reading Interface

- 1. Page Turning: Swipe left or right on the screen to turn pages.

2. Return

Short press the Return button or touch the (-) (Back) icon.

Menu

- (Short press M or touch ... (Menu) icon)
1. Page Skipping: Enter a specific page number to jump directly to that page.
2. Skip To: Jump to a percentage position in the document (0%-100%), adjusted in steps of 5.
3. Auto Reading Speed: Set the automatic page-turn interval: OFF, or 5-30 seconds, adjusted in steps of 5.
4. Add a Bookmark: Save the current page to the bookmarks list.
5. Playback Speed (Text-to-Speech): Choose the speech playback speed: Medium or Fast.
6. Font Size: Adjust text size: Small, Medium, or Large.
7. Voice Play / TTS (Text-to-Speech Language): Choose the text reading language: Off, Chinese, or English.
8. Font Color: Switch text and background color combinations:
- Default: Black background / white text
- Color 1: White background / black text
- Color 2: Black background / blue text
- Color 3: Black background / light blue text
- Color 4: White background / red text
9. Background: Choose background style: Default, Background 1: White, Background 2: Light Yellow, Background 3: Light Blue
10. Delete File: Delete the current e-book file.
Warning: Deleted pictures cannot be recovered.

10. FM Radio

From the main menu, select FM Radio. Please insert the wired earphones before using FM Radio. The earphones act as the FM antenna and are required for proper reception.

Menu

- (Short press M or touch ... (Menu) icon)
1. Channel List: View saved channels (CH01-CH40).
2. Auto Search: Automatically scan for available FM stations and save them to the channel list.
3. Manual Search: Manually tune and save FM stations.
4. Delete Channel: Delete the current saved channel.
5. FM Record: Start or stop recording from the current FM channel.
6. Save Path: Choose the recording storage: Internal Memory or Card Memory.
7. FM Sensitivity: Select reception sensitivity: Low / Medium / High.
8. Tuner Region: Choose the frequency range for your region:
- China: 87.0-108.0 MHz
- Japan: 76.0-90.0 MHz
- Europe: 87.0-108.0 MHz
- USA: 87.0-108.0 MHz
9. Mute: Press the Mute button once to mute audio (the radio remains tuned). Press again to unmute.

11. Tool

- From the main menu, select Tool to access the following utilities:
1) Calculator: Supports basic arithmetic (+, -, x, ÷). Touch (-) (Back) or short press the Return button to exit.
2) Stopwatch:
- Touch Start to begin or pause
- Touch Reset to clear
- Supports up to 6 records
- Touch (-) (Back) or short press Return button to exit.
3) Calendar: View the calendar. Touch (-) (Back) or press Return button to exit.
4) Bluetooth: Turn Bluetooth ON/OFF, pair with devices, or disconnect.

Note:

Bluetooth only supports connections to Bluetooth speakers and Bluetooth headphones. It does not support connecting to a smartphone via Bluetooth.

12. Browser

From the main menu, select Browser to access the file management interface. Swipe up/down or touch < / > to browse folders.

Menu

- (Short press M or touch ... (Menu) icon)
1) Search File: Quickly search for files using English keywords only.
2) Select All / Cancel All: Select or deselect all files in the current folder.
3) Select: Manually select multiple files one by one within the current folder.
4) Move: Move selected files to a new location. Files will be removed from the original location after moving.
5) Copy: Copy selected files to a new location. Original files will remain in their current location.
6) Delete: Delete selected files or folders. A confirmation prompt will appear before deletion.
Note: Deleted files cannot be recovered, so please proceed with caution.

13. Setting

Table with 2 columns: Function, More. Rows include Alarm, Display, Power Saving, Date & Time, and Language.

Table with 2 columns: Information, Select Key tone, Format Internal memory, Format Card, Reset Default Settings.

14. Connect to Computer

Use the provided USB-C cable to connect the MP3 player to your computer.

- The player will display selectable modes:
- Charge and Transfer: Charge the device and transfer files by accessing the player as a removable disk.
- Charger and Play: Charge the device while using the player. (Data transfer is disabled in this mode.)

Notes:

- 1. Always eject the removable disk safely to avoid data loss.
2. If the computer does not recognize the device, reconnect or try another USB port/cable.

12 Month Warranty

Thank you for your purchase. Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.



MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567