


## 43670185 | 72037164 ADULT INFLATABLE BUNNY COSTUME

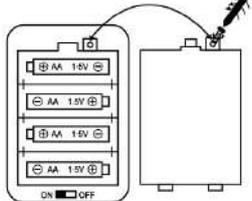

FITS MOST

### Instructions:

			
<p>Components</p>	<p>Step 1: Take out the fan and twist off the top cover.</p>	<p>Step 2: Put the fan in the round hole of the inside of the costume.</p>	<p>Step 3: Twist the top cover to secure the fan.</p>
			
<p>Step 4: Put the battery case into the pocket of the costume and plug in the USB.</p> <p>4 x 1.5V AA size batteries are included. Follow the polarity markings when replacing the batteries. We recommend using alkaline batteries.</p>		<p>Step 5: Put on the costume and switch the fan on, then zip up the costume.</p>	<p>Finished</p>



**WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE PRODUCT BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE PRODUCT WHEN NOT IN USE FOR EXTENDED PERIODS OR WHEN BATTERIES BECOME EXHAUSTED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.**

- 1) THE FAN AND THE BATTERY COMPARTMENT SHALL BE REGULARLY EXAMINED FOR DAMAGES TO THE SUPPLY CORD, USB, ENCLOSURE OR OTHER PARTS. IN THE EVENT OF DAMAGE, DISCONTINUE USE OF PRODUCT UNTIL DAMAGES HAVE BEEN REPAIRED.
- 2) WARNING: FOR ADULT USE ONLY.
- 3) THE COSTUME SHOULD ONLY BE USED WITH THE FAN AND BATTERY COMPARTMENT SUPPLIED BY THE MANUFACTURER.
- 4) THE FAN IS NOT A TOY, PLEASE USE AS INTENDED.
- 5) REMOVE THE FAN, USB AND BATTERY COMPARTMENT BEFORE WASH.

43670185

Size: 150x250mm