

# anko

## Instruction Manual



**Projector Tripod Stand**  
**K: 43-675-005 | T: 72-076-026**

MADE IN CHINA

Before use please read this manual carefully.  
Please retain for future use. Projector not included.

# Safety Instructions

- 1) This product contains no user serviceable parts and do not attempt to repair the product yourself. Leave any servicing or repairs to qualified personnel only.
- 2) If the mounted device is over 5kg, the tripod may tip over, potentially damaging your device.
- 3) Always place the tripod on a flat and stable surface to prevent the mounted device from tipping over. When using outdoors, also be aware that extending the mount too high increases the risk of falling. Be particularly careful when using in windy conditions.
- 4) When changing the position of the tripod stand, please first remove the projector. Strong vibrations from such movement may cause damage to the 360 deg. rotation and the projector.
- 5) Do not leave the product near heat sources such as furnaces or heaters, or inside vehicles on hot days.
- 6) After use, can fold the tripod stand and put into the pouch to store.
- 7) This device is not a toy. Children should be supervised to ensure they do not play with the device.

## Specifications

Maximum operating height: 160cm (H)

Folded height: 60cm (H)

Tripod height adjustment: 70cm to 160cm (H)

Suitable for 1/4" thread hole devices, such as projector or camera

Main Holder Maximum load weight: 5kg

360 deg. Rotation Maximum load weight: 1.5kg

Product weight: 760g

## Package Contents

- 1 x Tripod
- 1 x 360 deg. Rotation
- 1 x User Manual
- 1 x Storage Pouch

# Product Overview

- ① Tripod
- ② 360 deg. Rotation
- ③ Storage Pouch
- ④ The Nut Protective Cover



# Instruction for Use


1. Remove the nut protective cover ④ from the tripod stand, align the 360 deg. rotation ② with the 1/4" screw hole on the tripod stand and tighten to lock it in place.



2. Unscrew the bottom rotary switch to unfold the tripod stand to place it on a flat surface, tighten the screw again.



3. Loose the other two rotary switch to install the telescopic rod to the desired length, then tighten the screw.

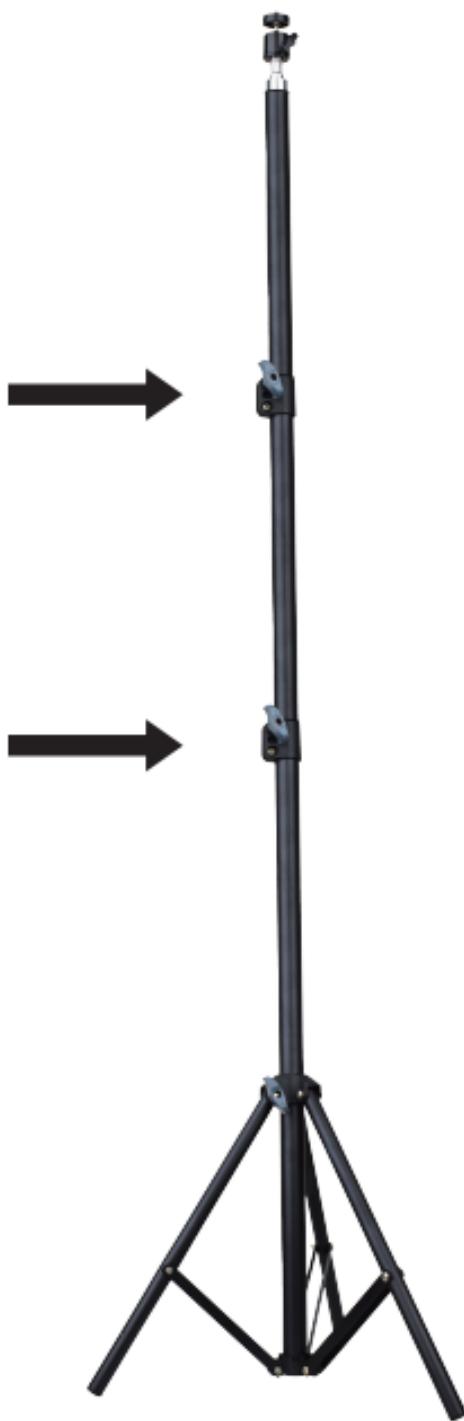

## **12 Month Warranty:**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided.

This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **MADE IN CHINA**

### **CUSTOMER SERVICE:**

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567