

Size: 200*140mm

Binding method: adhesive binding

Material: 106g matte coated paper

Printing: CMYK

尺寸: 200*140mm

装订方式: 胶装

材质: 106g哑面铜版纸

印刷: 彩色


备注:

第一页, 左侧为封底, 右侧封面

第二页, 左侧为封面反面, 右侧为内1页

anko

Instruction Manual

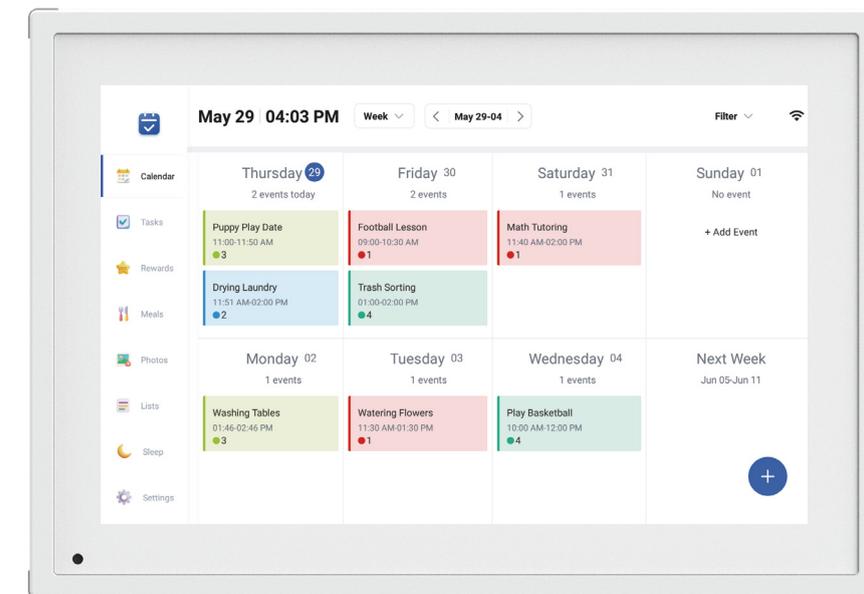

10.1" Smart Family Calendar

K: 43-678-983 | T: 72-151-426

MADE IN CHINA

eCalendar

Download the eCalendar App



Cautions

Precautions and Maintenance

- For indoor use only.
- To avoid risk of fire or electric shock, do not expose the unit to moisture or condensation.
- To avoid overheating, do not block the ventilation holes on the back of the Digital Calendar.
- Keep the Digital Calendar out of direct sunlight.
- Do not dismantle the Digital Calendar. There is a risk of electric shock and there are no user-serviceable parts inside. Dismantling the Digital Calendar will void your warranty.

Cleaning the LCD Screen

- Treat the screen carefully. Because the screen of the Digital Calendar is made of glass and it would be broken or scratched easily.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

Cautions

WARNING:

To reduce the risk of electric shock, do not expose the unit to rain or excessive moisture. This device is intended for private use and not suitable for commercial use!

Introduction

Congratulations on your eCalendar purchase! We are excited to help you lighten the mental load of keeping track of everyone's busy schedules so you can get back to enjoying what matters most to your family. We are always looking to improving and evolve our product, new features will be downloaded automatically to your device or mobile app, and you'll be notified through emails, push notifications, and in-app messages.

The latest manual can be downloaded from www.eCalendar.com.


Contents

1. 10.1” Digital Calendar for Family Schedules Overview	05
2. Getting Started	06
2.1 Create Account and Setup Device	06
2.2 Syncing a New Calendar	08
3. Operation Instruction	11
3.1 Events	11
3.2 Adding, Editing and Deleting an Aevent in App	14
3.3 User Management	15
3.4 Create Tasks	19
3.5 Rewards	22
3.6 Meals	23
3.7 Photo & Video	27
3.8 Lists	31
3.9 Sending an e-card	35

Contents

4. Magic Import	36
5. Sleep Mode	36
6. Settings	38
7. Troubleshooting Guide	40
8. Firmware Upgrade Instructions	44
9. Stand Assembly Instructions	46
12 Month Warranty	47

1. 10.1" Digital Calendar For Family Schedules Overview

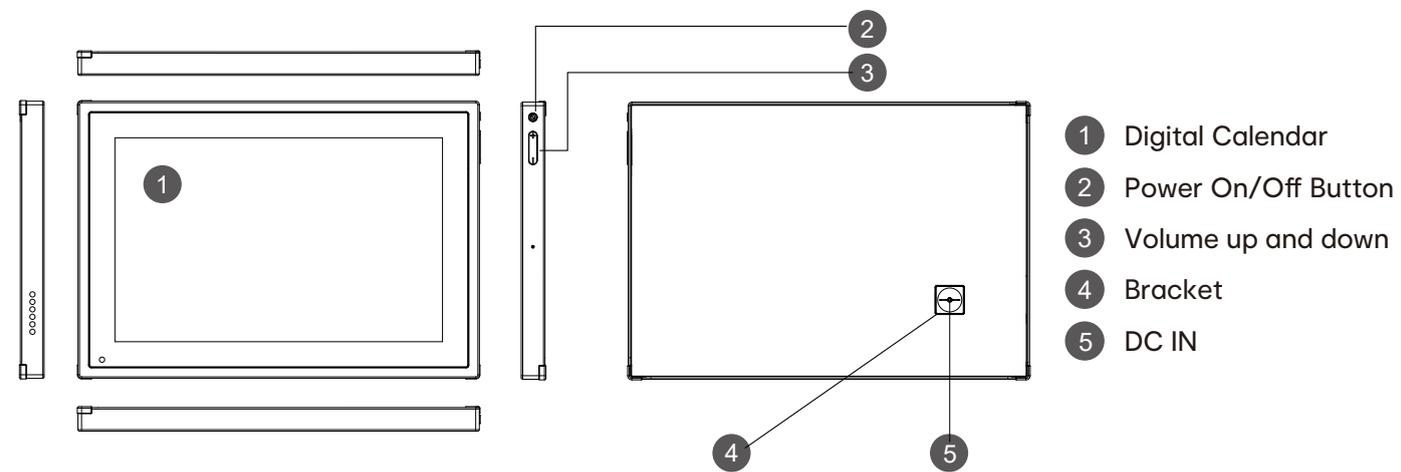

Specifications


Screen	10.1" LCD touch screen	Adaptor	Model: XC018WZ-0502000S0 Input:100-240V AC, 50/60Hz, 1A Max, Class II Output: 5V DC, 2.0A, 10.0W
Resolution	1280 x 800 pixels		
Aspect Ratio	16:10		
Internal Memory	32GB	Accessories	1 x Adaptor, 1 x Stand, 1 x Manual

2. Getting Started

2.1 Create Account and Setup Device

2.1.1 Get the App and Create Account


You'll need the free eCalendar app to use the features of your eCalendar to their full potential. Download the app on Google Play or APP Store and get started.

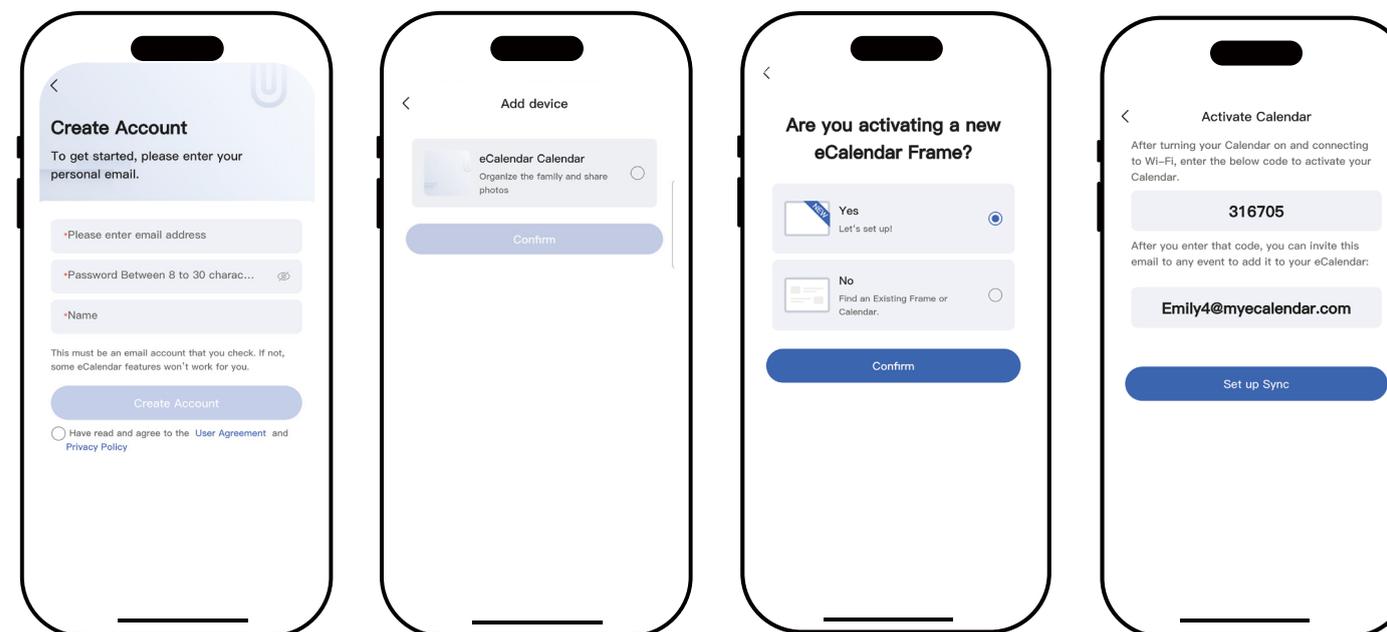

2. Getting Started

2.1 Create Account and Setup Device


2.1.2 Support Device Deletion

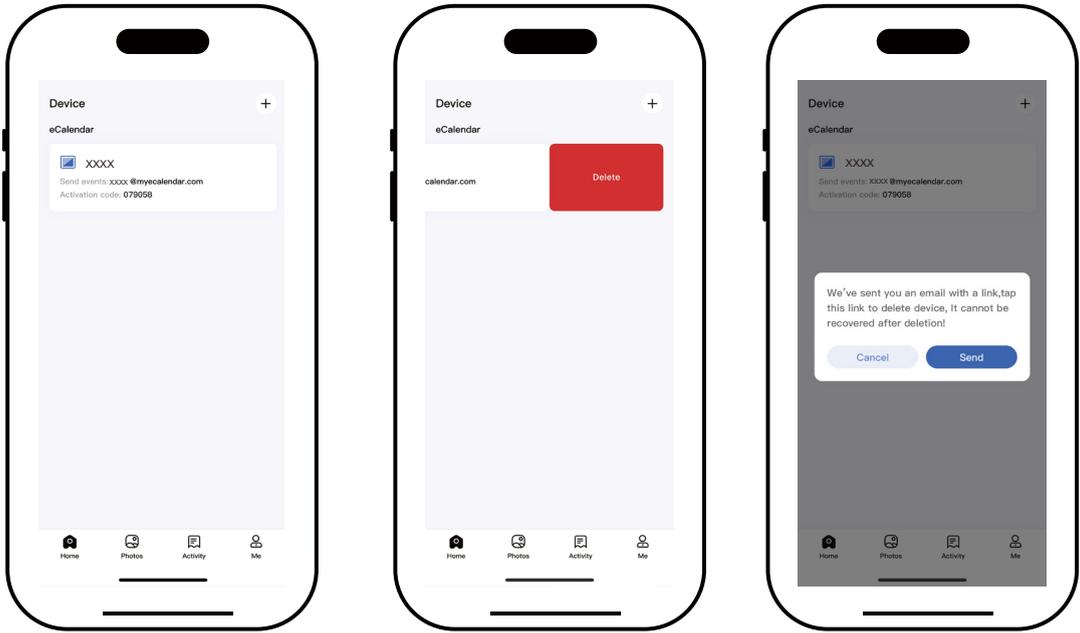

2. Getting Started

2.1.3 Initial Setup on Device

Turn on your eCalendar, select (your preferred) language, connect to wifi and choose the time zone and city, then enter your 6-digit activation code to get started. (PS:The weather function is activated only after you select the city)

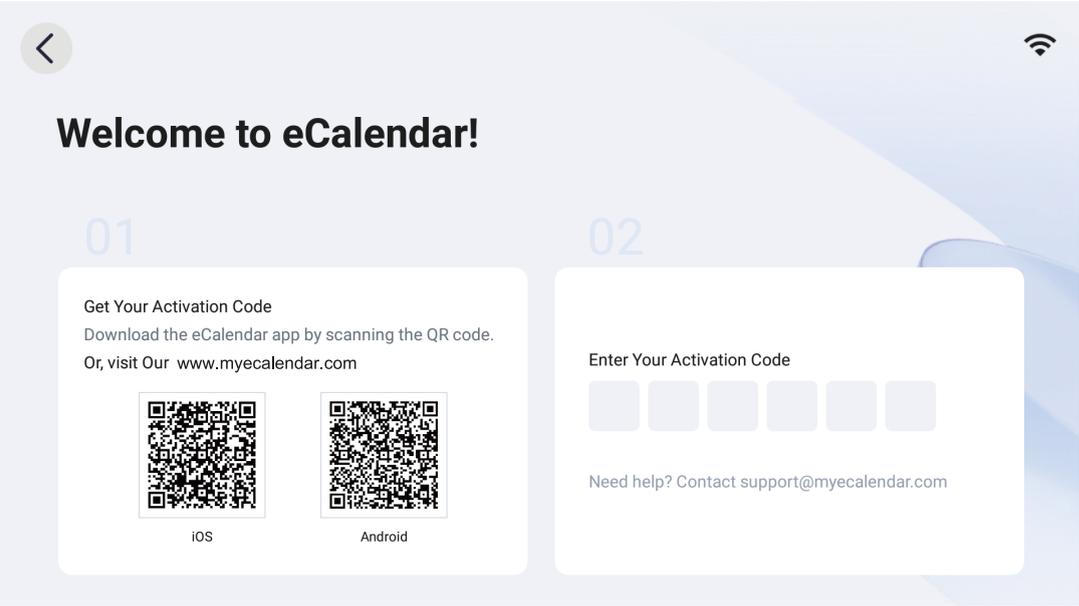

2. Getting Started


2.2 Syncing a New Calendar

Syncing can only be done through the app.

When you sync a source calendar, (such as Google, iCloud, Outlook) with eCalendar any changes on your source calendar will automatically show up on the digital calendar.

1. Open Sync on the home screen.

2. Select "Sync a New Calendar". 

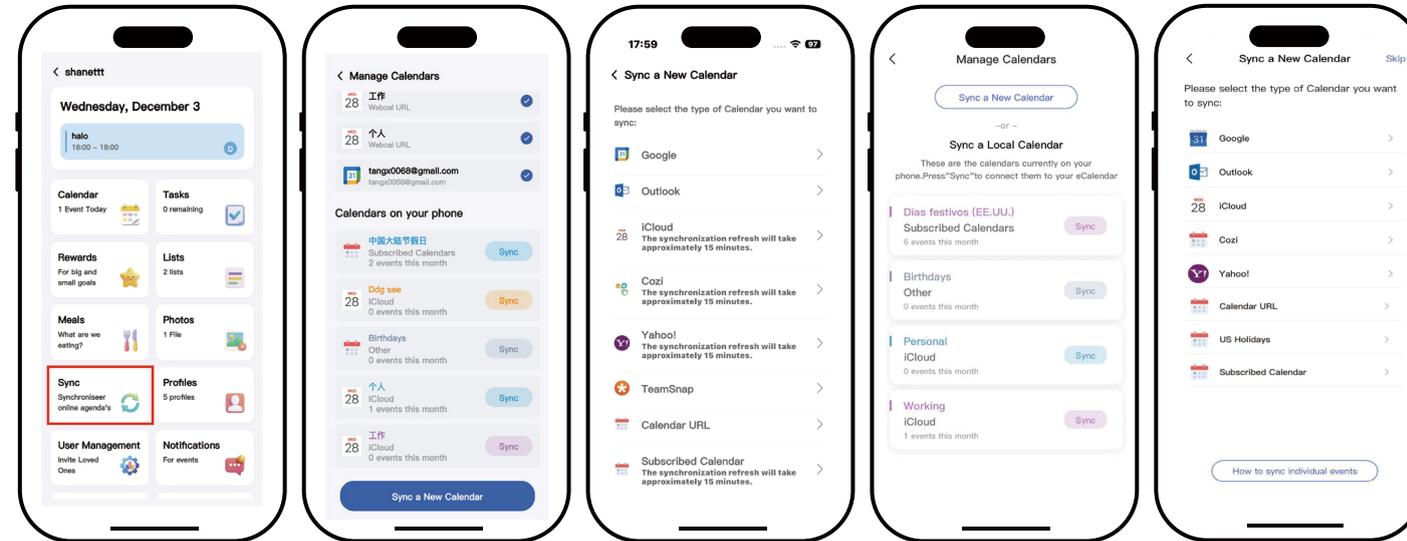

2. Getting Started

2.2.1 Syncing a Local Calendar on Your iPhone

1. Please first have access to a local calendar on your iPhone, not available on Android phones.

2. Select Calendars (Compatible with Different iOS Versions)


Please follow the corresponding operation based on your iPhone's system version:

For iOS versions below 26

Click the " ⓘ " to access the calendar selection interface.

For iOS 26 and later versions, Tap the  button to access the calendar selection interface.


3. Choose your target local calendar, then press Sync to start the syncing process.

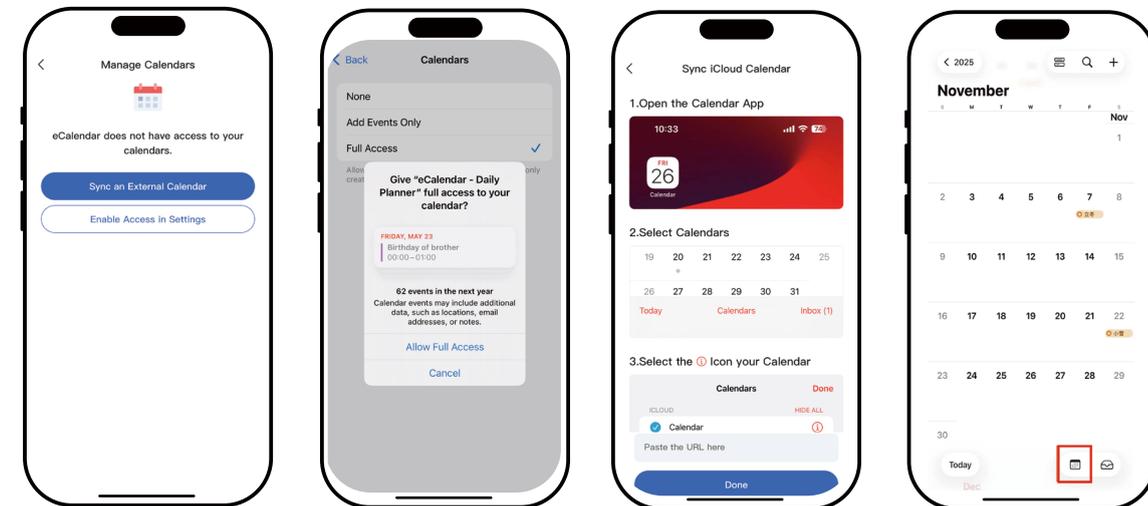

2. Getting Started

2.2.2 Deleting a Synced Calendar

1. Click the synced calendar that you want to delete from the list of synced calendars.
2. Tap the Unsubscribe button to complete the deletion of the synced calendar.
The Profiles associated with your synced calendar will still remain after you remove your synced calendar. You will need to delete the Profiles separately.

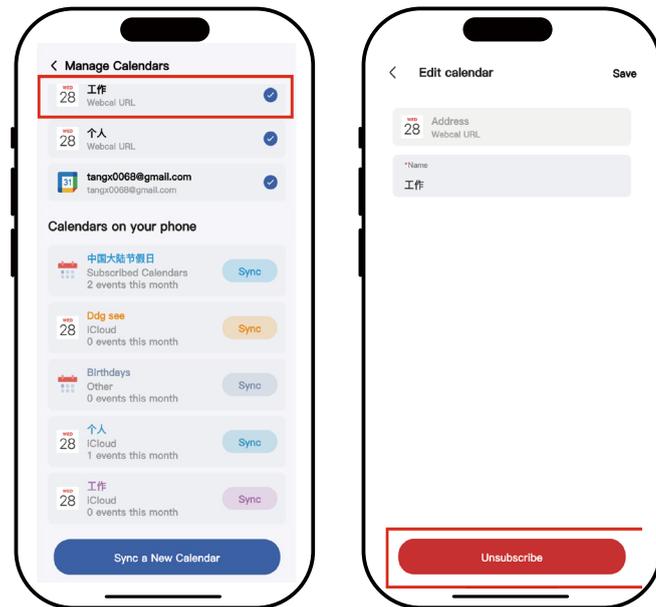

3. Operation Instruction


3.1 Events

You can view your events in different views on the app or device to suit your needs.

3.1.1 Viewing Events-Device

You can view your events in a Day, a Month, or Schedule view. Schedule view can be configured in Settings  to display between 1 to 7 days.

Tap on an event to view details. You can pinch and zoom to show more or fewer hours in Schedule View.

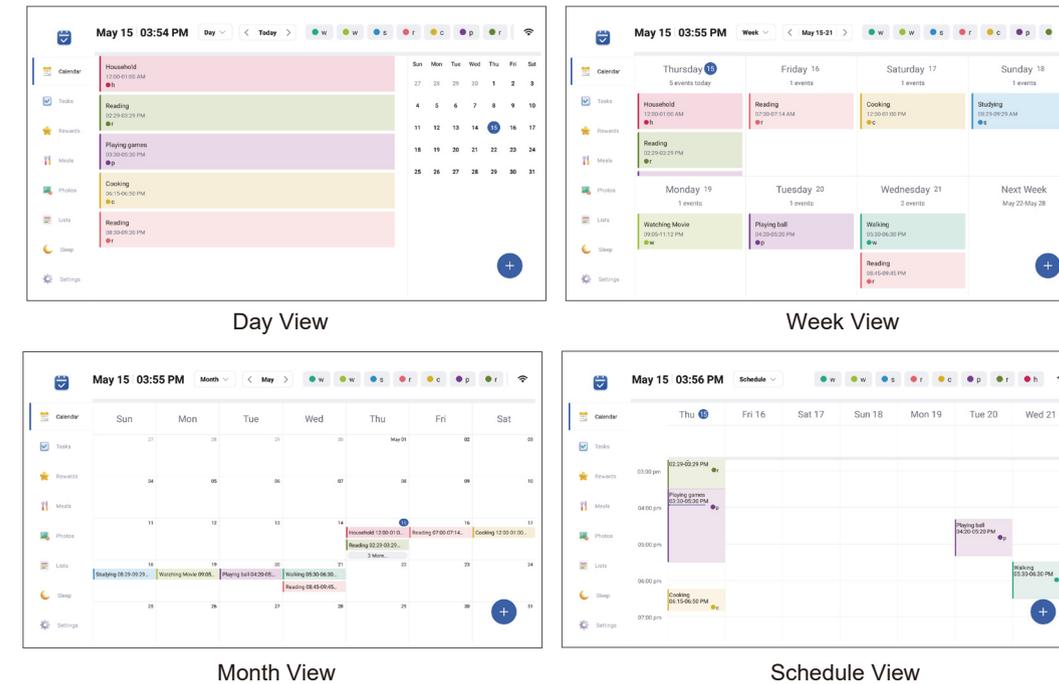


3. Operation Instruction

3.1.2 Creating Events

You can create events on your eCalendar app from both the mobile app and the device. Events created on the device will sync to the eCalendar app vice-versa. If you have synced a Google Calendar with two-way-sync, changes you make with eCalendar will reflect back too.

1. Initial Setup Note: Before creating events, please first select the "Calendar view" via the "Calendar" option in the menu when using the app/device for the first time.
2. Press the **+** in the bottom right.
On iPhone: Pressing and holding a date then releasing will instead switch the view to the Week view of the week that the date belongs to.
3. Enter your details and press Save.

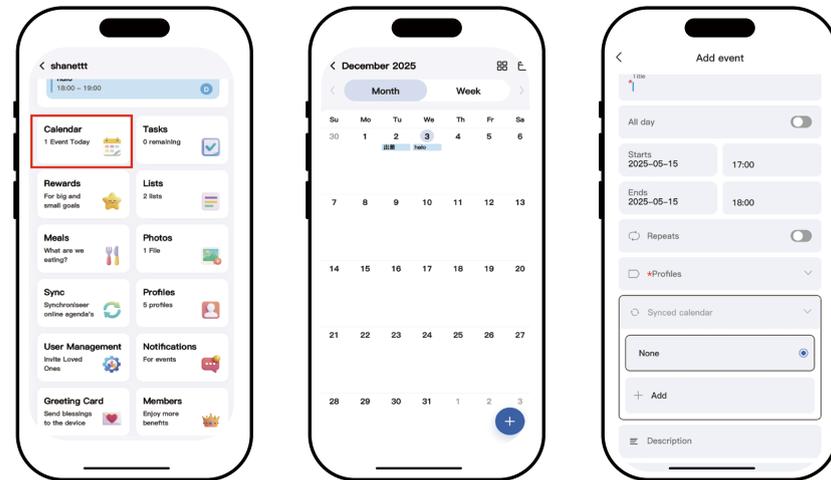


— 13 —

3. Operation Instruction

Adding, editing and deleting events

Tap on **+** in the bottom right to add an event. Enter the details and assign the event to a profile.
Note (for this app): In this application, the term "Profile" corresponds to the "member" function displayed in the app's interface. No profiles (members) are available on first use. Tap "Create a New Profile to Assign event to" (to create a user profile/member) to assign the event. Tap on an existing event to see the details, edit or delete the event. In the 'Schedule' view, if the event period is too short for the display scale, the texts may not show. Zoom in to see the event details.

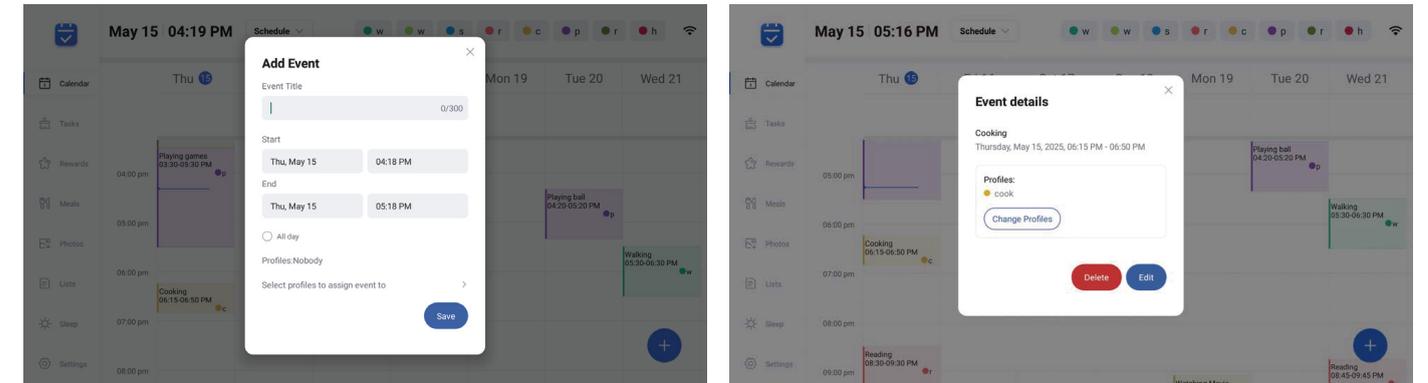

3.1.3 Recurring Events

You can create events that occur on a recurring basis. Events can recur in the following ways:

- Daily
- On certain days of the week (e.g., Tues, Thurs)
- Weekly
- Every X weeks
- Annually


Events can also repeat until a specified end date.

— 14 —

3.Operation Instruction

3.2 Adding, editing and deleting an event in app

1. Open an Event's details and press Edit. 
 2. Edit your event details and press Save.
 3. If the event is on a 2-way synced Google Calendar, the event changes will appear on your Google Calendar.
- Note for editing Google events: At this time, you can only edit single instances of a recurring event. You cannot convert one-off events into recurring events or edit recurrence rules.

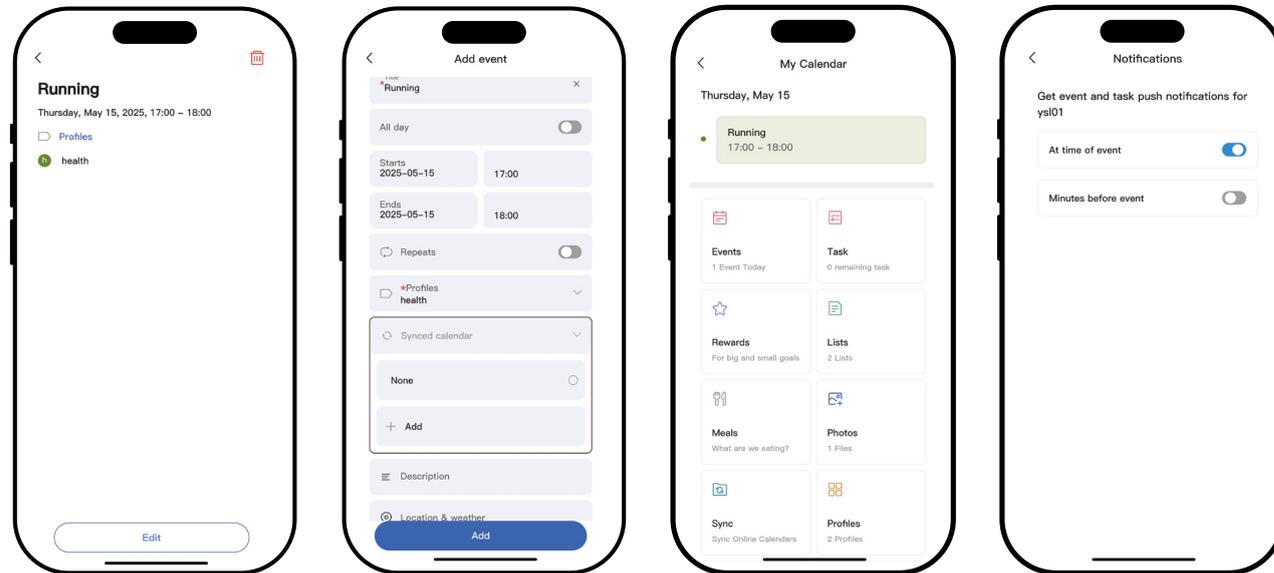

1

2


3

4

— 15 —

3. Operation Instruction

4. Once created, you can set notifications in home screen "Notifications - At time of event and/or Minutes before event".

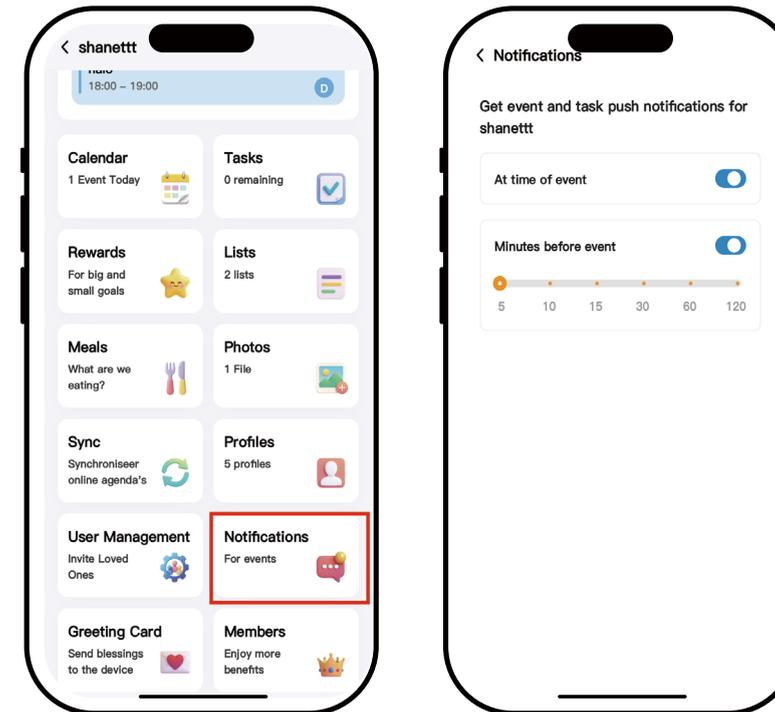

— 16 —


3.Operation Instruction

3.3 User Management

You can view User management in different views on the app or device to invite registered users to manage the calendar.

1. Using User management-APP

You can click on User Management to invite registered users. The interface can vary between phone models.

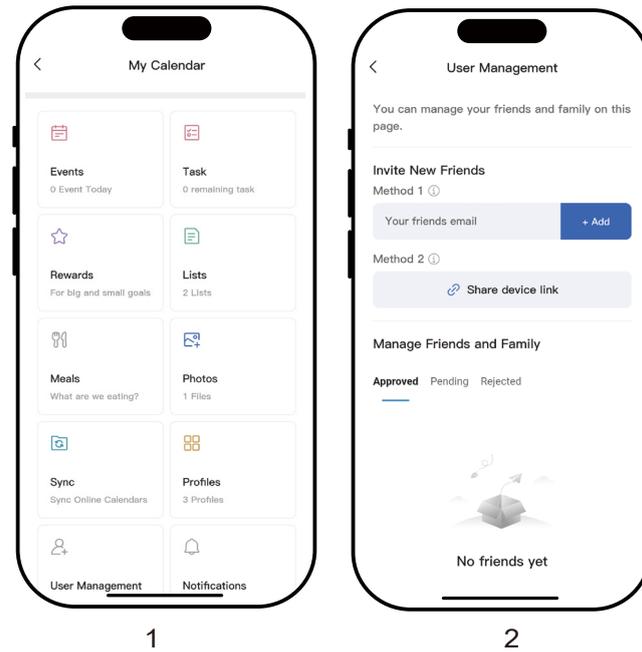


3. Operation Instruction

3.4 Create Tasks

The task feature on our calendar photo frame is the perfect way to organize your whole family's responsibilities in one place.

1. Press 'Task'
2. Tap “+” to create a new category
3. Fill in task information

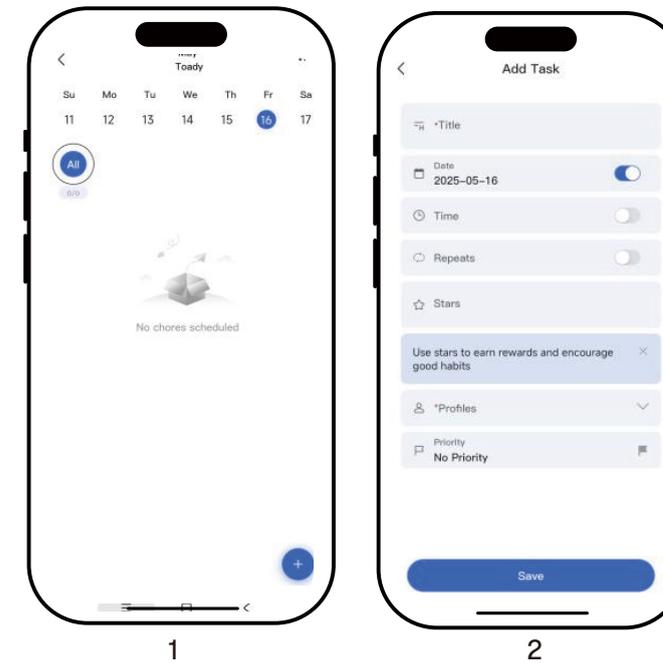


3. Operation Instruction

3.4 Create Tasks

1. Press the “+” in the bottom right of the Task screen to add a new task.

2. Fill in task information

Required fields: Title & Profile

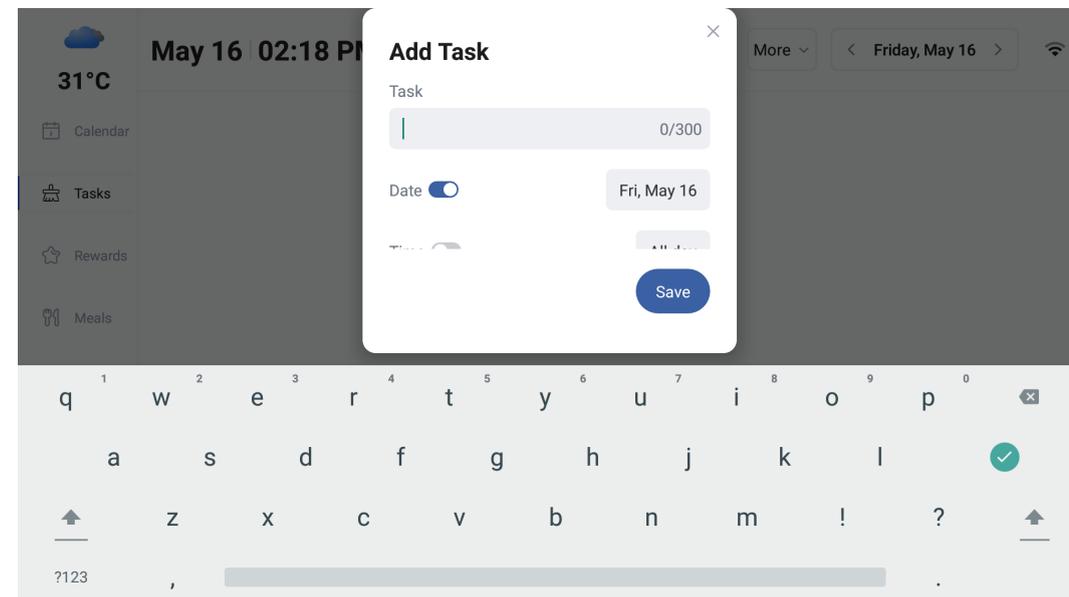


3. Operation Instruction

3. Press 'Save' to create your task.

4. Tap the Task, support click  to edit the task, click  to delete the task, click Mark as complete to mark complete the Task.

5. Custom Task Icons (supports adding emojis to tasks). Now available on the device version 3.7.4, previously version only supported on the phone.

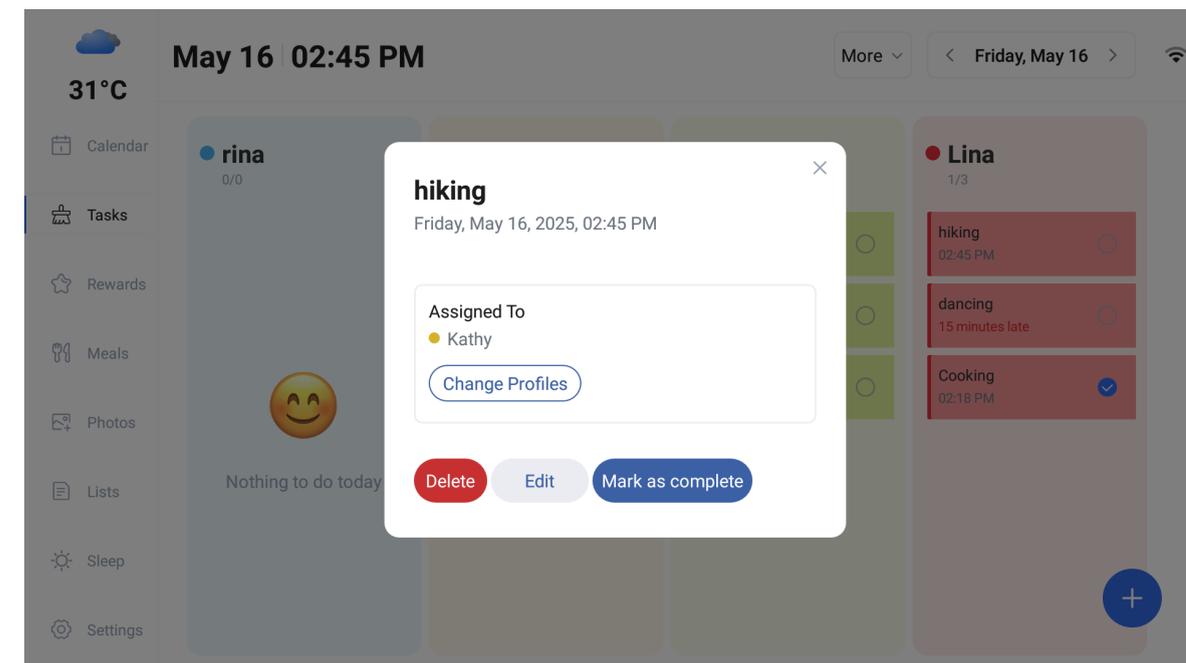



3. Operation Instruction

6. Sound and Animation Effects for Task

This feature is available on both the app and device (you can independently choose to enable/disable it):

For the device: The 3rd button (on the device interface) controls the sound effect for task completion.


For the app: You can enable/disable the feature via the app's Settings section. After enabling the feature, sound and animation effects will be triggered automatically when a task is marked as complete (matches the task completion operation).

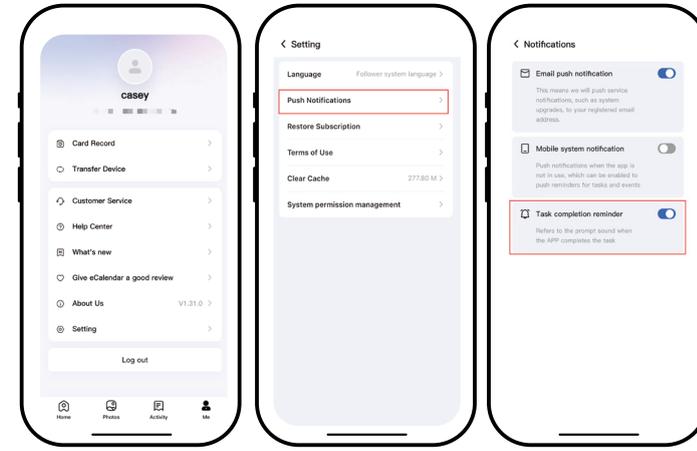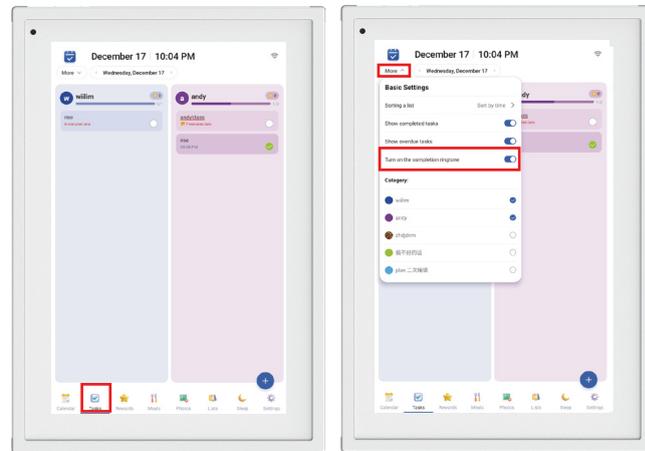

3. Operation Instruction

3.5 Rewards

1. Click the plus sign  at the lower right corner.
2. Fill in the Reward Name and Description, choose an Emoji, choose whether to Renew after redeeming, specify the Star Cost, and finalize by selecting the Target Profile.
3. After completing all fields, click Done and Add.

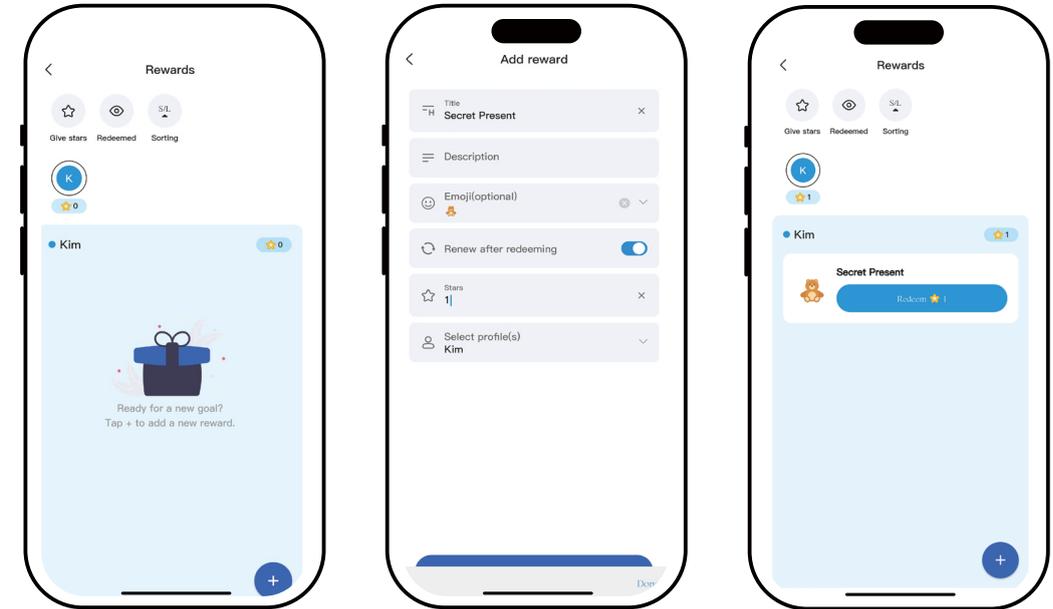


3. Operation Instruction


3.6 Meals

3.6.1 Create Meal plans

① Click "Meals"

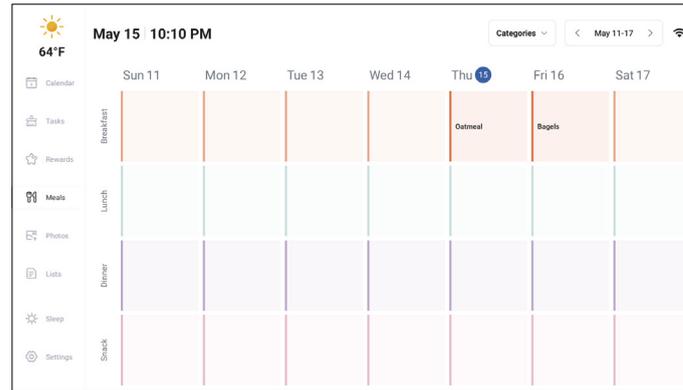

② Click on the breakfast/lunch/dinner/dessert option under the date and select the desired meal.

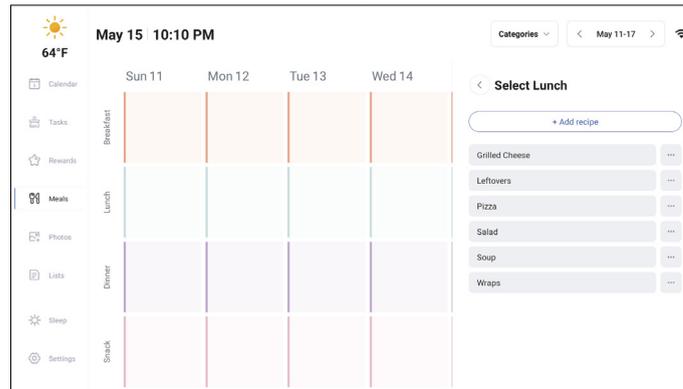



3.Operation Instruction

③ After completing the arrangement, it can be synchronized to the mobile interface.

3.6.2 Add/delete/edit dishes/plan on the device

④ Long press on breakfast/lunch/dinner/dessert under date, then click "add recipe".

⑤ Clicking ... after the dish, can edit dish names, select table of contents, make dish introductions, and save.

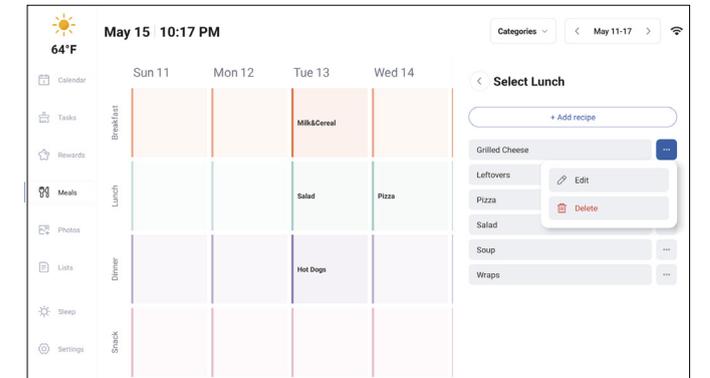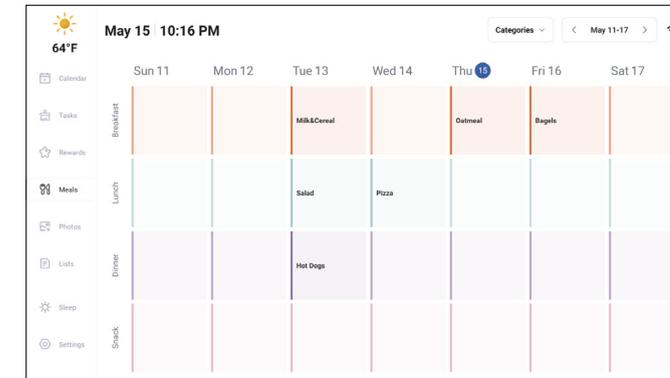


3. Operation Instruction

3.6.3 Create new dining plans on app:

- ① Click on the main interface Meals.

Means view on APP


Tap on **+** in the bottom right or on a time slot to add a meal. Tap and hold on an existing meal to add more meal options. Tap on an existing meal to see the details, edit or delete the meal.

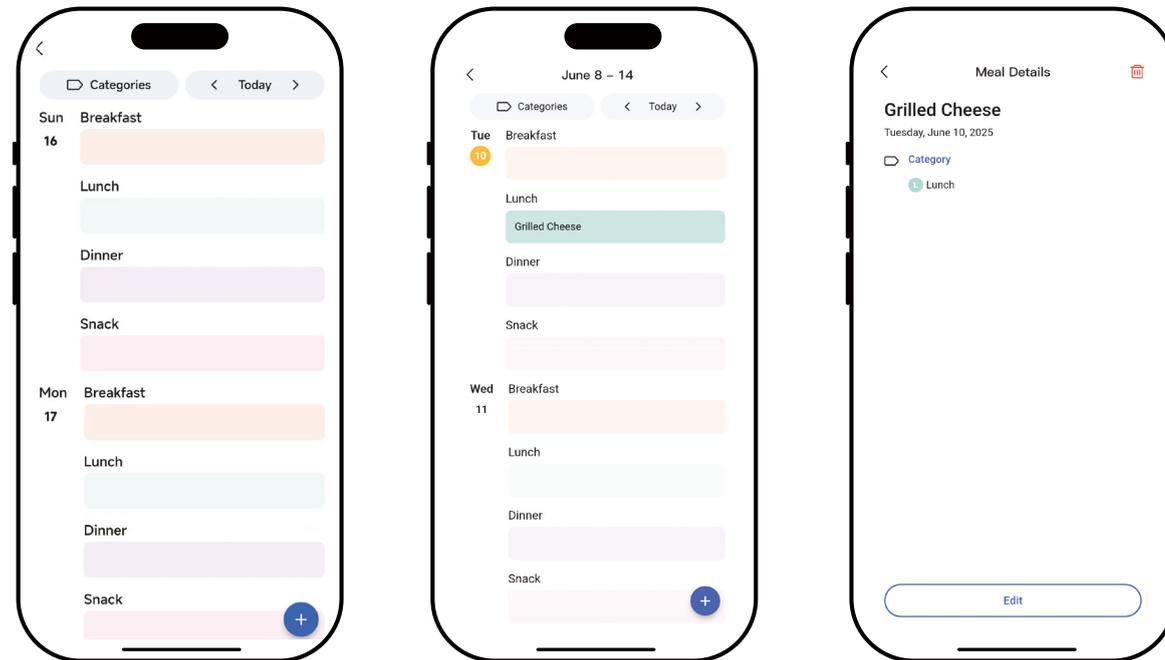

3. Operation Instruction

3.6.4 Delete and edit dishes on app

- ④ Click the+ in the bottom right corner of the Meals interface to enter the receipt box.
- ⑤ Click ...on the right of the created dish to Edit or delete dishes.

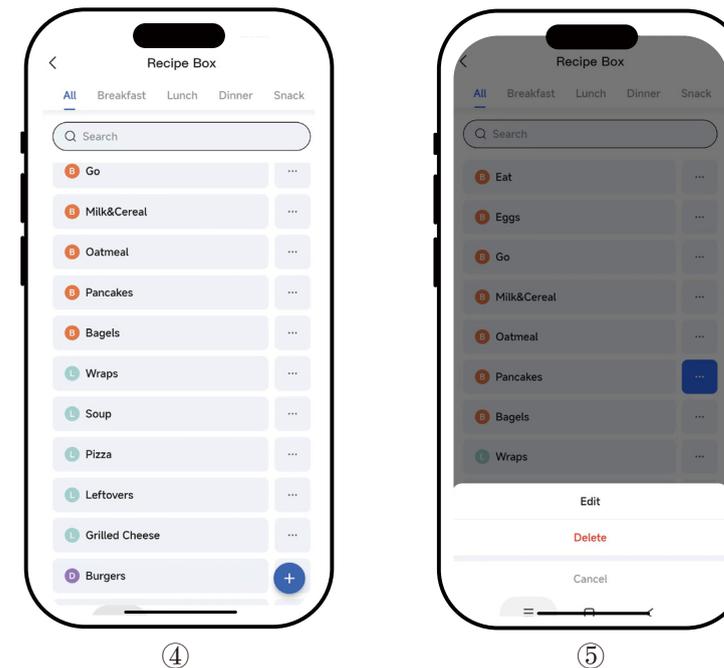

3. Operation Instruction


3.7 Photo & Video

The photo album supports uploading pictures and videos, and allows multiple people to share.

3.7.1 Photo & Video-App


You can upload your pictures or videos using the app's photo function.

1. Click  on left page or Photos on right page.

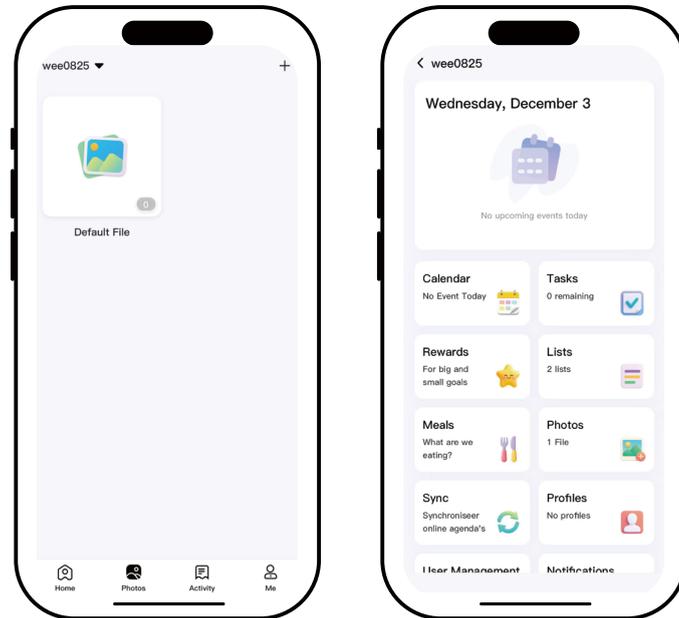


3. Operation Instruction

2. Click "+" to create a new folder.
3. Click the "default file" or the folder your created, tap "+".
4. Select Album to choose photos & videos or Camera to take photo or videos.

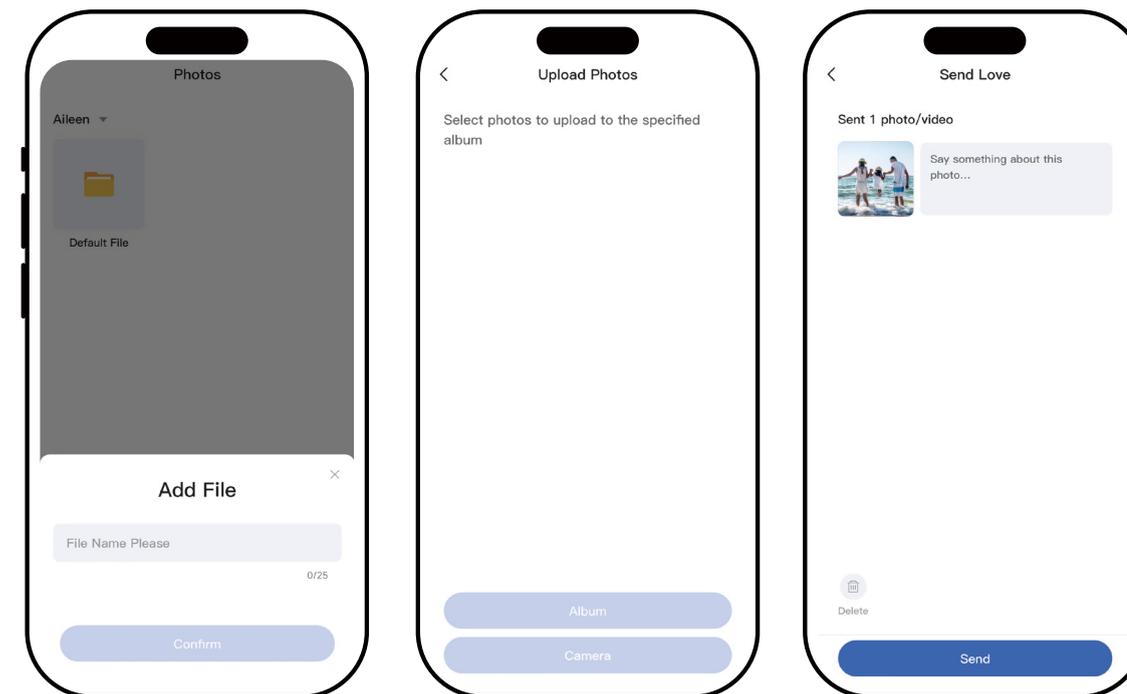

3. Operation Instruction


5. Click send, the photo will send to the device your binded.
6. Click on the uploaded pictures or videos to add titles and comments.

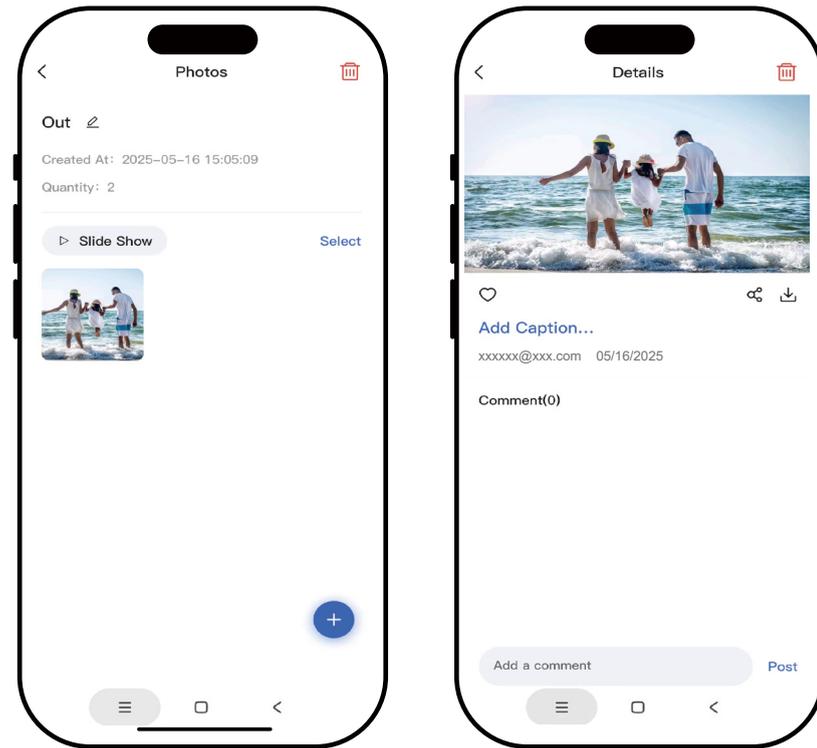

3. Operation Instruction

3.7.2 Photo & Video-Device

1. Photo albums can display the pictures or videos uploaded from our phones.
2. Create folders and mark pictures or videos as favorites.
3. Click on an uploaded image or video to edit it.

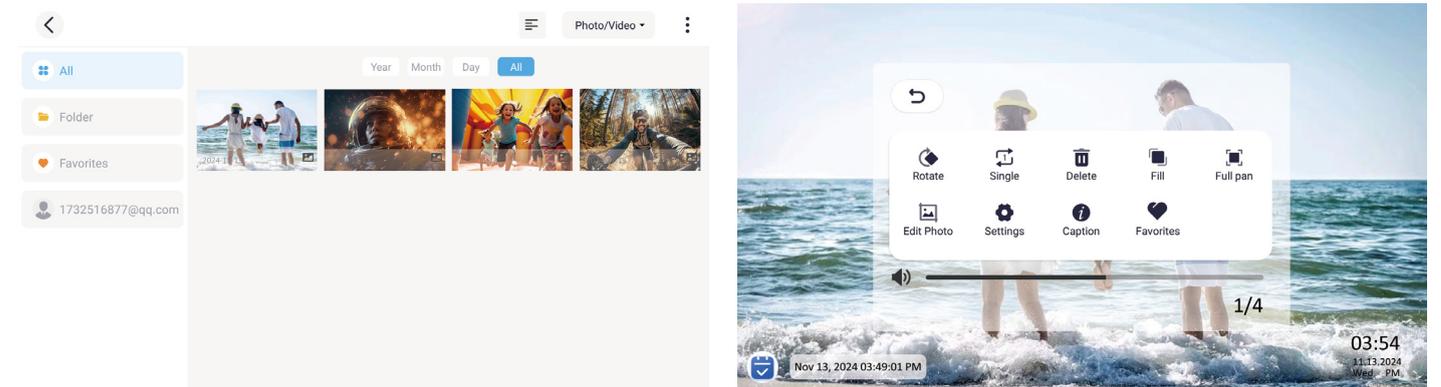

3.Operation Instruction

3.8 Lists


The lists sync between your eCalendar and the mobile app, keeping the whole family on the same page. You can create as many lists as you like.

3.8.1 Lists-App


Creating and Editing Lists

1. Open the Lists on the calendar home screen.
2. Press "+ New List" in the top right corner.
3. Name your list, choose a color, then press "Save."
4. Your new list is ready.
5. Tap the list to add items.
6. Press the list, then tap the "..." in the upper right corner to edit or delete it.
7. Tap the circle next to an item to mark it as completed; the item will then disappear.
8. Tap the "Show completed items" icon at the bottom to view completed items.


3.Operation Instruction

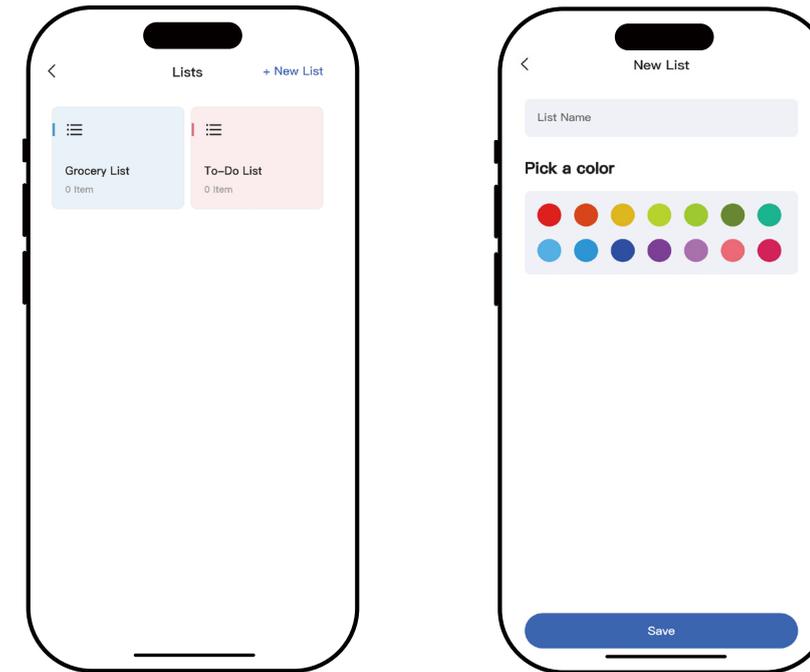


3.Operation Instruction

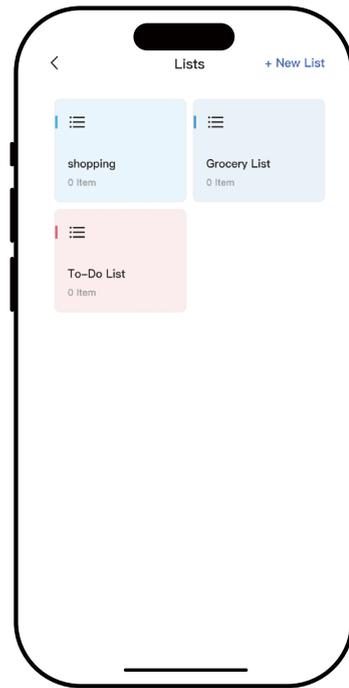

4

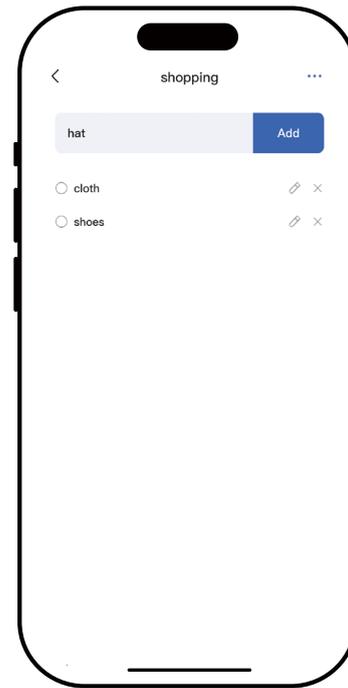

5

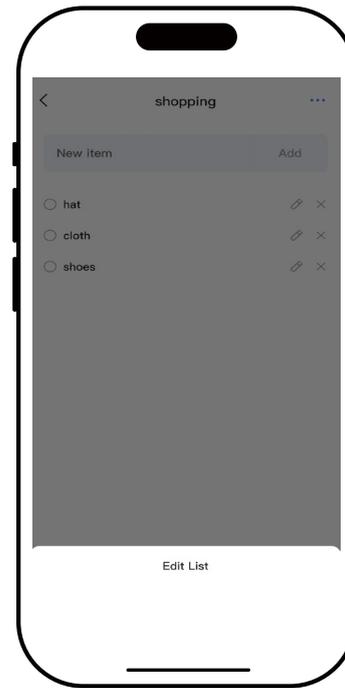


6

3. Operation Instruction

3.8.2 Lists-Device


1. Tap the Lists icon in the sidebar to open the lists.
2. Tap the arrow next to the list name, such as "Shopping List".
3. Press "+New List", enter the new list name, choose a color, and select the list type.
4. Tap a list to add items.

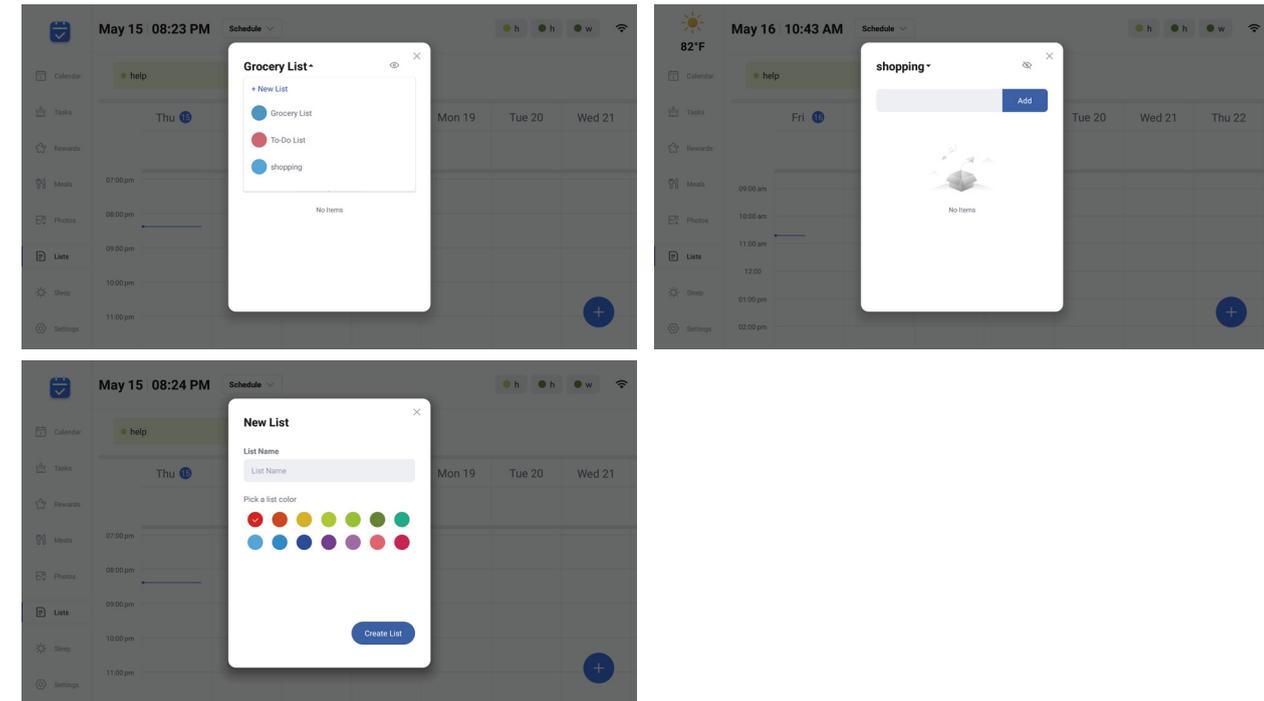

3. Operation Instruction

3.9 Send an e-card


Go to "Greeting Card" in the main menu.
Follow the prompts to create and send an e-card to the selected eCalendar device.

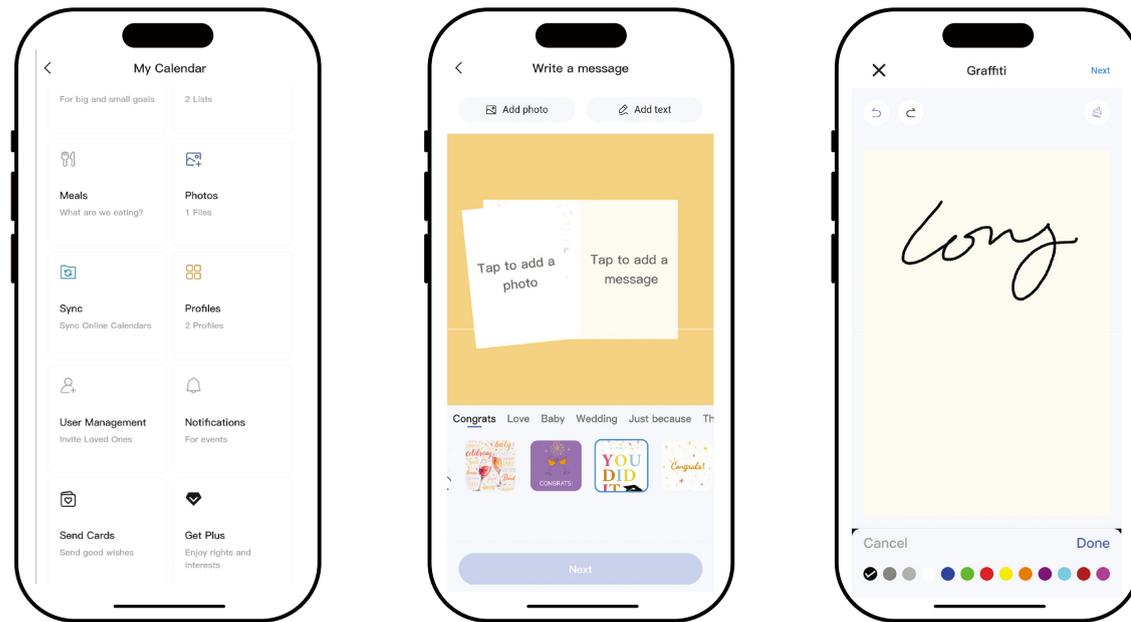

4. Magic Import

Support for sending video, picture, and files to a virtual calendar email address from third-party email services to import video, picture and files(PDF, Excel,Word,TXT).

Note: recognizing and syncing pictures/files sent to the virtual calendar email is a member-only function (requires activating the membership first, no effect will be achieved if the membership is not activated). When the device receives a file (after membership activation), it will automatically parse it as an image or an event. (An item is considered an event if it includes a title and a start date.)

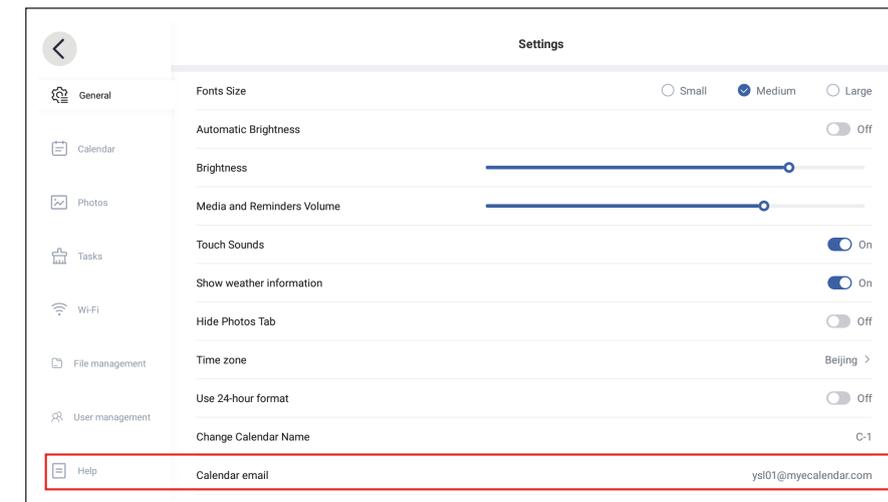


5. Sleep Mode

Sleep Mode turns off your eCalendar's display during scheduled intervals. Make sure your device's time zone is set properly in Settings → Configure Time Zone. Sleep Mode can only be configured from the device.

5. Sleep Mode

Scheduled Sleep and Instant Sleep

1. Tap the moon icon located at the bottom of the sidebar.
2. Toggle on "Sleep Mode Schedule" and select the time for your Calendar to go to sleep and wake up. Press "Save" to confirm. When your Calendar is in Sleep Mode, you can press the power button at any time to wake it up.
3. Tap "Enter Sleep Mode Now" to turn off the display. Press the power button again to wake up your eCalendar.

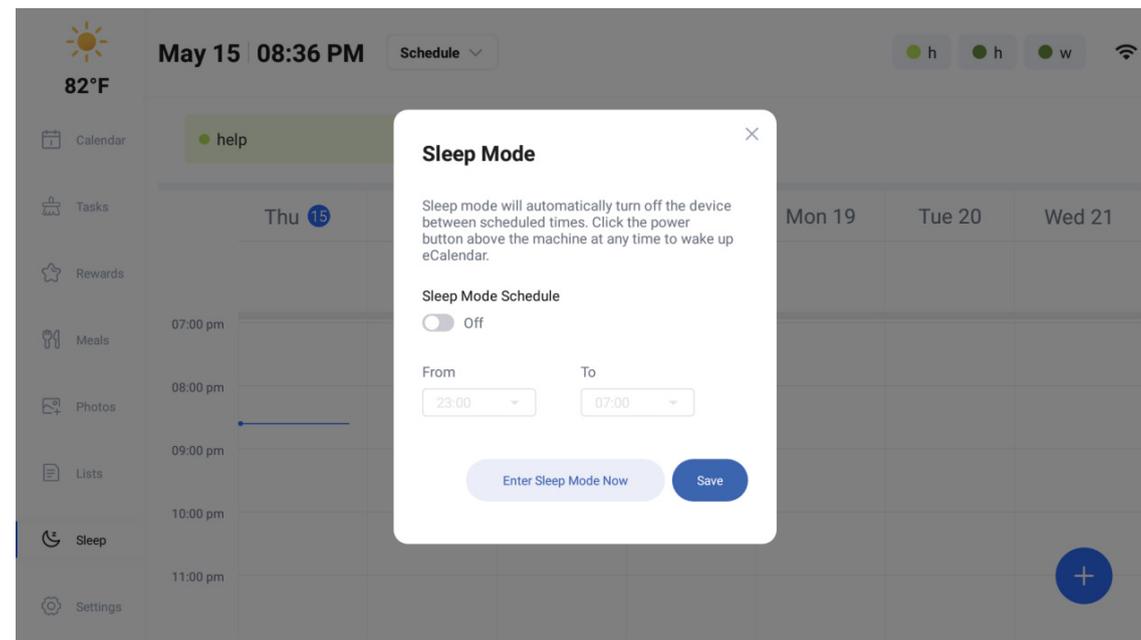


6. Settings

Settings

Settings -> General -> Font Size & Time Zone

1. Choose from Small, Medium, or Large font sizes in "Settings."
2. Change the time zone and language settings.
3. Tap the "Reset Device" icon to clear all data on the device.

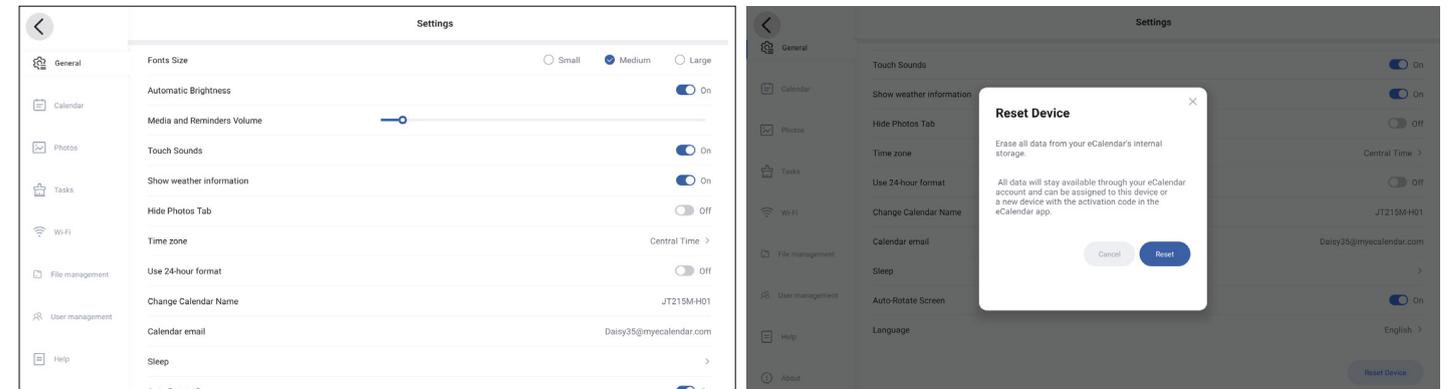


6. Settings

Settings -> Calendar -> Reminder

1. Reminders

You can enable reminders on your eCalendar to alert you about upcoming events.

(Tip: The reminder sound plays only once, but the reminder pop-up will remain displayed on the screen until dismissed. If previous reminder pop-ups are not dismissed, new ones will stack and display together on the screen.)

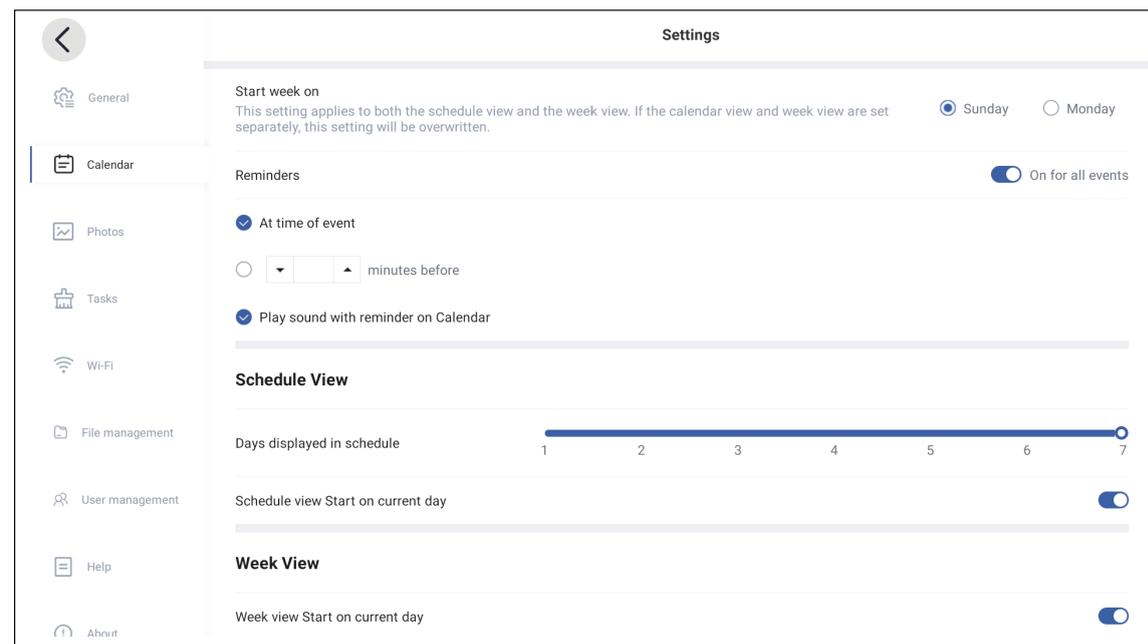

7. Troubleshooting Guide

If you encounter problems while using the digital calendar, please refer to the suggested solutions below.

1. Device fails to power on

- Check the power connection: Make sure the device is properly connected to the power adapter, the plug is firmly inserted, and the outlet is powered.
- Restart the device: hold down the power button to select either to shut down or to restart, or keep holding down the button, the device will be shut down.

2. Unable to connect to Wi-Fi

- Check network status: Make sure the router is working properly and connected to the Internet.
- Verify Wi-Fi Password: Ensure that you have entered the correct password.
- Restart your device and router: Try restarting your electronic calendar and router.
- Check the Wi-Fi band: The device may only support 2.4GHz or 5GHz, make sure the router band is compatible.

3. Screen touch is not responsive

- Clean the screen: Wipe the screen with a clean, soft cloth to avoid stains affecting the touch.
- Restart the device: Hold down the power button to select either to shut down or to restart, or keep holding down the button, the device will be shut down.
- Check for system updates: Make sure the system is updated to the latest version.

4. Unable to sync calendar or photos

- Check network connection: Make sure the device is networked and maintains a stable network connection.
- Checking the login account: Ensure that the device login account is the same as the synchronization account.
- Update the app: Make sure you are using the latest version of the app.
- Regrant synchronization permissions: Check and regrant synchronization permissions in Settings.

7. Troubleshooting Guide

5. The device responds slowly or stutters

- Clean up storage: Delete unnecessary files, photos, or apps.
- Restart the device: Shut down and restart the device to release the memory.
- Check applications: Close unused background applications.
- Restore Factory Settings (only if necessary) : After backing up the data, select Restore factory Settings in the Settings.

6. Unable to play audio or video

- Check volume Settings: Confirm that the device is not silent and adjust the volume to an appropriate level.
- Check file format: Ensure that the file format is compatible with the format supported by the device.
- Restart the device: Try to shut down and restart the device

7. The device automatically shuts down or restarts

- Check the temperature of the device: The device may automatically shut down due to overheat. Avoid use in high temperature environment.
- Check the battery status: If the battery is low, the device may shut down automatically. Please charge it in time.
- Update system firmware: Ensure that the device is running the latest system version.

8. Unable to update the system or application

- Check the network connection: Ensure that the device is properly connected to the network
- Check storage space: Ensure that the device has sufficient storage space for updates.
- Try manual update: Go to Setting check and perform system or application updates.

7. Troubleshooting Guide

9. Can the video sound be adjusted?

- Yes, it can be adjusted.①Tap Setting on the bottom of left.②Click General.③Slid to adjust the sound on Media and Reminder Volume.

10. Can the eCalendar be displayed in both landscape and portrait orientation?

- The eCalendar supports both landscape and portrait orientation display.

11. Can the brightness of the eCalendar be adjusted?

- Yes. You can adjust it yourself according to your needs. Just turn off the automatic brightness, then you can slide to adjust the brightness.

12. Can you sync one calendar or multiple calendars?

- Yes. You can sync as many calendars as you want.

13. Does the eCalendar have a subscription fee?

- Yes. But you can choose to pay or not to pay extra depending on your needs.

14. Can I use the eCalendar without connecting to WiFi?

- Yes, but the eCalendar cannot be edited, only previewed. If you want to operate an electronic calendar, it needs to be connected to the Internet.

15. How to enable 2-Way-Sync?

- If you've already synced your Google calendar and would like to enable Two-Way Sync, we recommend first deleting the calendar before attempting to sync it again.
- All of your existing Google calendar events will be imported when you re-sync, so there's no risk of losing those events.
- While syncing your Google calendar, you'll need to select "Two-Way Sync" during set up or newly created events will not appear on your Google calendar.

7. Troubleshooting Guide

16. How can I ensure that Google Calendar events sync to eCalendar?

- Android Devices: After creating a new event in the Google Calendar app, you need to manually tap the "Refresh" button in the sidebar to sync the event to the eCalendar.
- iPhone: Events created on an iPhone are automatically synced to the eCalendar without additional actions.

17. What types of Google Calendar events are supported by eCalendar?

- eCalendar supports syncing event types only. Task types are not supported.

18. How long does it take to sync events from third-party calendars to eCalendar?

- Google Calendar and Outlook: Syncing takes approximately 1 minute.
- iCloud, Yahoo, and Cozi: Syncing takes between 1 and 30 minutes, with a minimum of 1 minute and a maximum of 30 minutes.

19. Can the digital calendar be used on battery power?


- No, the digital calendar is powered by a direct AC adapter and does not have a built-in battery.

8. Firmware Upgrade Instructions

Mobile App Update


(1) Android OS: Download the latest version from Google Play.

- ① Open Google Play on your phone.
- ② Tap the search bar, enter "eCalendar" and search.
- ③ Tap the Download or Update button.

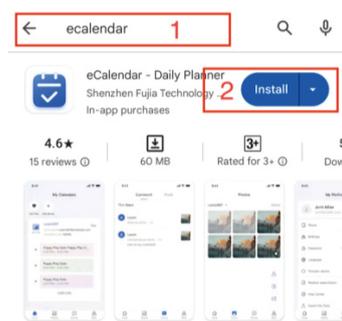


(2) iOS OS: Download the latest version from Apple Store.

- ① Open Apple Store on your phone.
- ② Tap the search bar, enter "eCalendar" and search.
- ③ Tap the Download or Update button.

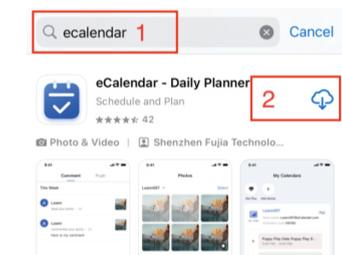


Screenshots for Upgrade Steps:

Please check the calendar version number on the about page of the settings.

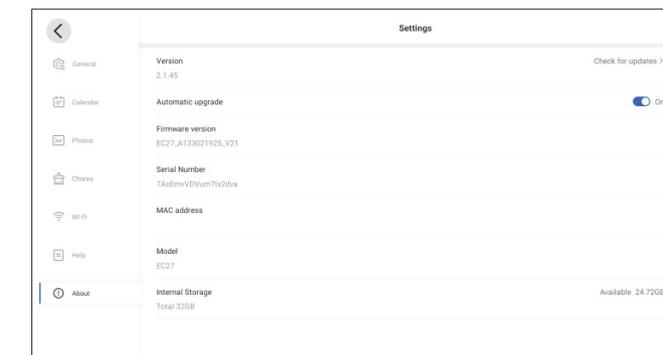


(1) Version 1.4.13 and Earlier: Manually click check for updates to upgrade as follow:

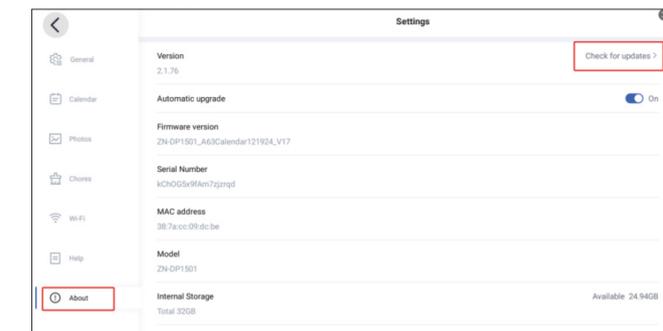

8. Firmware Upgrade Instructions


Screenshots for Upgrade Steps:

(2) Version 1.4.13 and Later and version 2.1.45 Earlier: Upgrade pop-up reminder display when restart, click Upgrade immediately to update, if you click x, Upgrade pop-up reminder display again when restart.

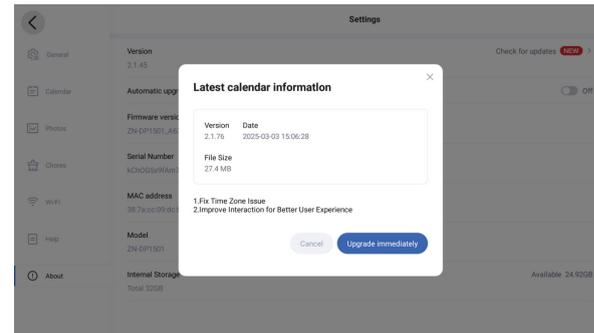


(3) Version 2.1.45 and Later:

① An upgrade pop-up prompt will appear (you can choose to turn off or automatically upgrade) if you turn off the Automatic upgrade button in About page.

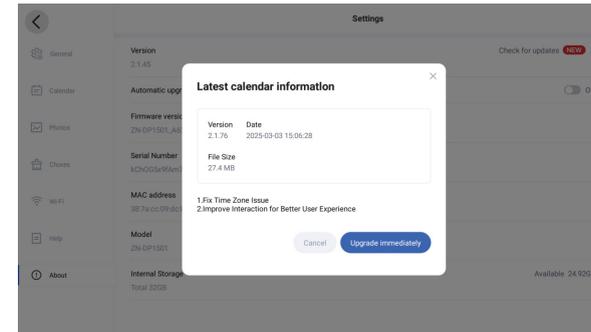

② When you enable the Automatic upgrade button in version 2.1.45 and Later, the device will auto upgrade when turned on the device. Pop-up window showing downloading upgrade.

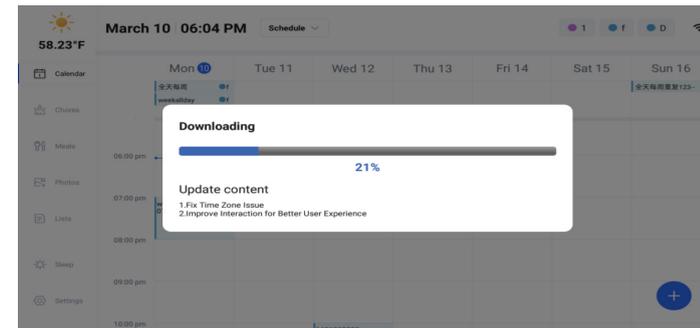

9. Stand Assembly Instructions

Since the adapter and stand are provided separately in the package, please follow these steps to assemble:

1. Prepare the parts

Take out the adapter and stand from the package. (Refer to the assembly images)

2. Align the connection port

Locate the slot on the adapter, then align the matching end of the stand with this slot.

3. Secure the stand

Insert the stand into the adapter's slot, and push gently until it locks in place.

(Note: Match each step with the attached assembly images for clearer operation)



12 Month Warranty:

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you have any cybersecurity-related concerns or queries, please contact us online via our 'Contact Us' page at <https://www.kmart.com.au/contact-us/> or reach us by phone using the numbers listed below.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567



R-NZ



Statement of Compliance

Security standard for consumer grade relevant connectable products
AUSTRALIA

This statement of compliance has been prepared by, or on behalf of Kmart Australia Limited, who is the manufacturer of the below product. The statement of compliance is made in accordance with the Cyber Security (Security Standards for Smart Devices) Rules 2025, authorized by the Cyber Security Act 2024.

Product manufacturer details	
Name of the manufacturer	Kmart Australia Limited
Address of the manufacturer	1 Middle Rd, Chadstone VIC 3148
Name of the authorized representative	Jerry Or (Product Technologist)
Address of the authorized representative	Room 1016-1023A, 10/F, Trade Square, No. 681 Cheung Sha Wan Road, Cheung Sha Wan, Kowloon, Hong Kong
Name(s) of other authorized representatives in Australia (if applicable)	N/A
Address(es) of other authorized representatives in Australia (if applicable)	N/A
Product details	
Product type	10.1" ECALENDAR
Batch identifier	43678983
Defined support period for the product	We will provide security updates for this App until 21/4/2026. This device will receive all available security updates until 31/12/2029.

Declaration

It is declared that, in the opinion of the manufacturer:

1. The product listed in the table above has been manufactured in compliance with the requirements of Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025.
2. The manufacturer has complied with any other obligations relating to the product in Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025.

It is declared that this statement of compliance has been prepared by, or on behalf of, the manufacturer of the product listed in the table above and is accurate at the date of issue of 21/4/2026.

Prepared by or on behalf of Kmart Australia Limited

Jerry Or

(Name, function and signature of the signatory of the manufacturer)

2nd Mar , 2026

(Place and date of issue of the statement of compliance)