


Kids Slide Instruction Manual

1.5-4
years

 
Parts List

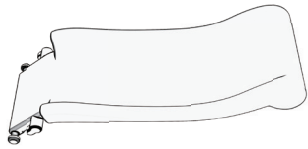

Slide chute (A x 1pc)



Right side panel (B x 1pc)



Left side panel (C x 1pc)



Upper step (D x 1pc)



Lower Step (E x 1pc)

Assembly Instructions

- Step 1. Put the Slide chute (A) and Left side panel (C) together, ensure the side panel can rotate around the Groove. Fig (1).
- Step 2. Insert the Upper step (D) into the middle hole position, and the Lower step (E) to the lower hole of the Left side panel. Fig (2).
- Step 3. Insert the Right side panel (B) into the part of step 2, ensure they are connected together properly. Fig(3).

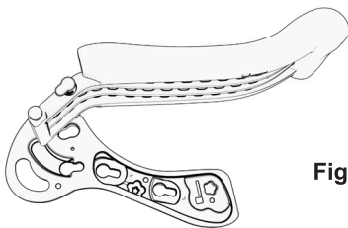


Fig (1)

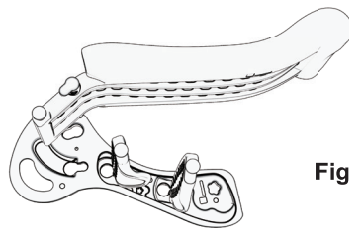


Fig (2)

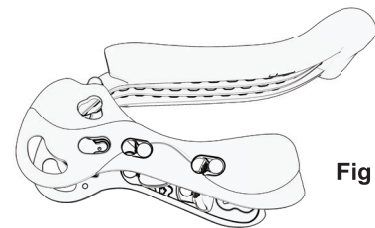


Fig (3)

- Step 4. Spread the two side panels, and let it stand up. Fig (4).
- Step 5. Press down on two sides until you hear a "click", then your kids slide is successfully assembled. Fig (5).

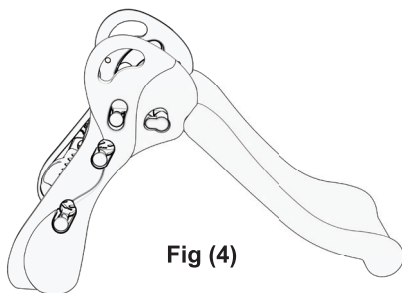


Fig (4)



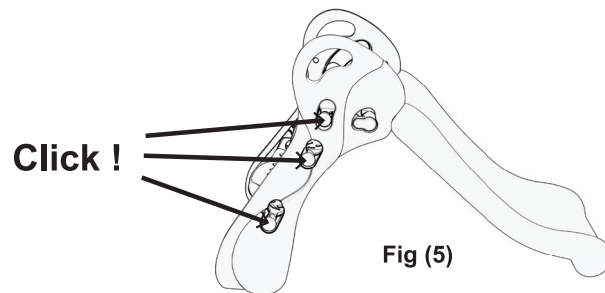


Fig (5)

Folding Instructions

Let the two side panels touch to the floor, hold the end of the slide chute and press down with force until you hear a "click", then the item can be folded and stored on the floor.

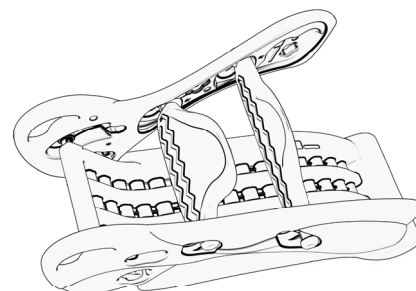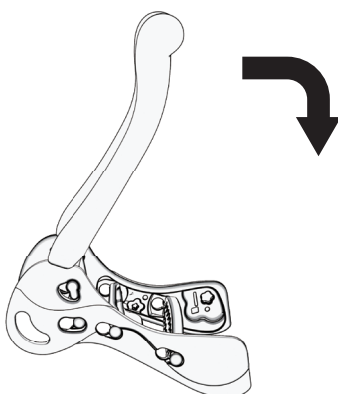

Safety and Maintenance

1. Make sure all parts are securely snapped together before use.
2. Place this product on level ground and at least 2m away from a fence, building, overhead branches, laundry line or electrical wires.
3. Do not allow children to climb on the product when the surface is wet.
4. Do not allow children to wear loose-fitting clothing including ponchos, scarves and garments with drawstrings. Well fitting shoes must be worn at all times.
5. Please check the unit twice a month for tightness, and tighten as required. It is particularly important that this procedure be followed at the beginning of each season. If you find any signs of wear or damage on the parts by periodically checking, stop use immediately, make sure all problems are solved prior to use.
6. When temperature falls below 0°C, outdoor use of this product is not recommended. In extreme cold conditions, material may become brittle and crack upon impact. Store product in a warm protected place.
7. Clean the slide regularly with soapy water in order to avoid a build up of static electricity.
8. Do not leave this item exposed to strong wind and inclement weather.
9. It is recommended that the item be placed under the shade.
10. Activity toys such as swings, slides, and climbing frames should be installed over impact-absorbing surfaces such as sand, wood-bark chips, rubber, and foam plastic. They must not be installed over concrete, asphalt, or any other hard surface.
11. Placement & Sun Protection Recommendation
It is recommended to place the toy appropriately to avoid exposing heat-sensitive surfaces directly to sunlight, in order to prevent burns caused by high temperatures.
12. Don't leave child unattended. Adult supervision required when using.
13. Keep instruction manual for further reference.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: FOR DOMESTIC USE ONLY. FOR INDOOR AND OUTDOOR USE. NEVER ALLOW MORE THAN ONE CHILD TO USE. MAXIMUM USER WEIGHT: 25KG.

WARNING: ADULT SUPERVISION IS REQUIRED AT ALL TIMES. DO NOT LEAVE CHILD UNATTENDED. THIS PRODUCT SHOULD BE USED ON FLAT AREAS ONLY. DO NOT USE ON AN UNEVEN SURFACE.

©KMART AUSTRALIA LIMITED
FOR AU/NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND
KMART AUSTRALIA - 690 SPRINGVALE ROAD, MULGRAVE, VIC 3170 AUSTRALIA.
KMART NEW ZEALAND - REGIONAL OFFICE C/O KMART PAPATOETOE STORE,
HUNTERS PLAZA, GREAT SOUTH ROAD, PAPATOETOE, AUCKLAND, NEW ZEALAND

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125 | **KMART NZ:** 0800 945 995

43-681-891

ADULT ASSEMBLY REQUIRED.

**PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.**