

说明书材质：128g铜版纸
折叠尺寸105x142mm 双面印刷风琴折

正面排一排



1080P Rechargeable Projector

K: 43-686-193 | T: 72-301-777

MADE IN CHINA

Before use please read this manual carefully.
Please retain for future use.

 
Warning

1. Use this product only for intended use as described in this manual.
2. No peeking into the lens while projectors is working.
3. No cloth, or any other material that could stock ventilation holes of the projector.
4. No water-proof function for this projector, no such apparatus as vase or cup should be put around the projector.
5. Projector should be stocked and used at dry and clean condition.
6. Please use the original adapter supplied with the device to charge it.
7. If you won't be using the projector for a long time, please turn it off and cut off the power supply. Charge it once every three months to extend the battery life.
8. To ensure the machine operates normally, it is recommended to clean the dust after a period of use. Tools such as a cleaning stick or cotton swab can be used for this purpose.
9. If projector defected, do not attempt to repair it by yourself. Please contact with your distributor or factory directly.
10. To avoid risk of electronic shock, do not disassemble or repair the device. Incorrect repair may cause risk of electronic shock or injury to people during operating.


Battery Warning:

1. Do not expose the battery to extremely high or low temperatures during use, storage, or transportation, nor to low air pressure at high altitudes.
2. Do not replace the battery with an incorrect type, as this may compromise the device's safety protection (especially for lithium batteries).
3. Never dispose of the battery in fire or a hot oven, or mechanically crush or cut the battery, as this may cause an explosion.
4. Do not leave the battery in extremely high-temperature environments, which may cause explosion or leakage of flammable liquid or gas.
5. A battery exposed to extremely low air pressure may cause explosion or leakage of flammable liquid or gas.

Standard Accessories

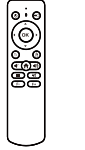

 Remote control
(2x 1.5V-AAA Battery not included)

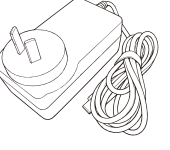

Power Adapter

 


User Manual

Product Overview

Power ON/OFF: long press to turn on/off the projector.
Charging port: the charging indicator light is always on when charging and off when fully charged.

Reset hole: Card needle insertion hole to reset the projector.
If the machine is unresponsive or is running slowly due to insufficient storage space, you can use the reset function.
(Please note: the reset function will delete all data stored on the machine; please ensure you save any necessary data before using this function).

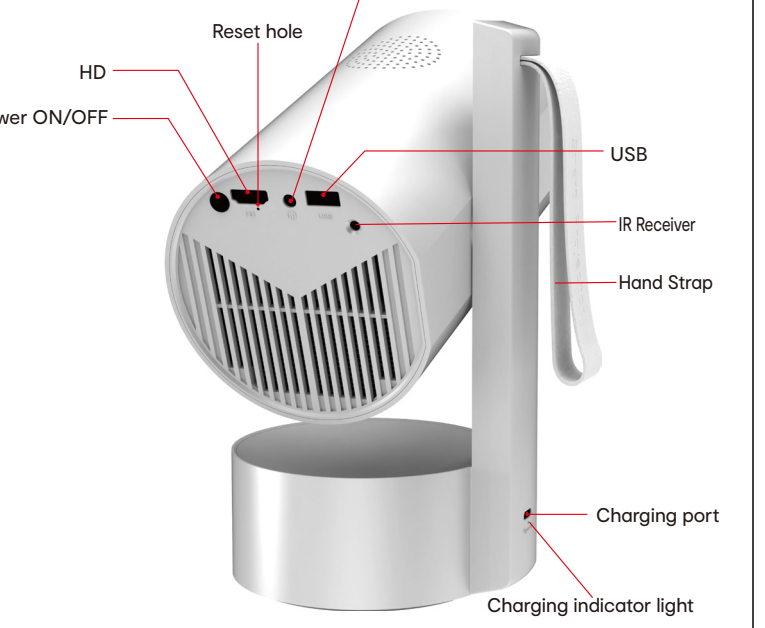

Specification

Model: Anko43A68193
Resolution: 1920*1080P
Battery capacity: 11.1V, 55.5Wh
Dimension: 22.5*11cm
Net weight: 1.1KG
Charging time: 3 hours
Battery play time: 2 hours (daily use, not at high volume or resolution)
Input ports: HDMI, USB
Output ports: 3.5mm Audio Jack

Installation

Choosing a location

Before choosing an installation location for your projector, take the following factors into consideration:
> Size and position of your screen
> Electrical outlet location
> Location and distance between the projector and the rest of your equipment.

You can install your projector in the following ways

1. Front Desktop:

Select this location with the projector placed near the floor in front of the screen. This is the most common way to position the projector for quick setup and portability. Turn on the projector and make the following settings:
Settings >Projection Setting >Projection Mode >Rotate Front



2. Front Ceiling:

Select this location with the projector suspended from the ceiling in front of the screen. Turn on the projector and make the following settings:
Settings >Projection Setting >Projection Mode >Rotate ceiling

Note: A projector mount is required to install the projector in a ceiling.



Operation

Starting up the projector

1. Plug the power cable into the projector and a power outlet. The charging indicator light will be white when charging.

Please use the supplied power cable to avoid possible dangers such as electric shock and fire.

2. Press the power button on the projector or remote control to start the projector. The fans start operating, and a start-up image is displayed on the screen while it warms up. The projector does not respond to further commands while it is warming up.
3. When using for the first time, users must set an initial 6-digit password (which set by themselves and need remember).

Adjust the image



 
Bad



Good!


Connecting HD Devices

HD supports uncompressed video data transmission between the projector and compatible devices like Laptop, DTV tuners, DVD players, Blu-ray players and displays over HD cable. The HD cable(not included) .

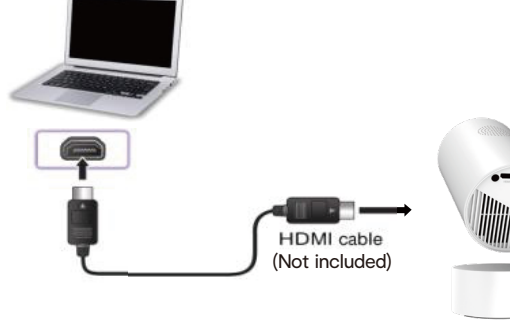


HD signal

 Plugging in an HD cable allows you to access computer and other devices.

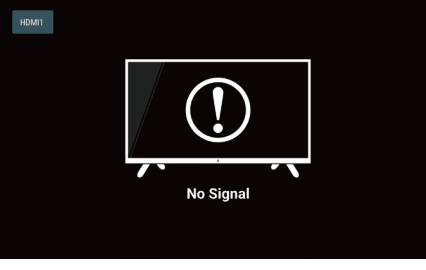


Password setup

 When using the machine for the first time, users will be prompted to set an initial password, confirm and verify it. Once the password has been verified, they can use the machine.
User need remember their password, and can change the password via the Password Setting.
If forgets their password, they may enter the factory master password 951753, then reset the password, verify it and log in to the system.

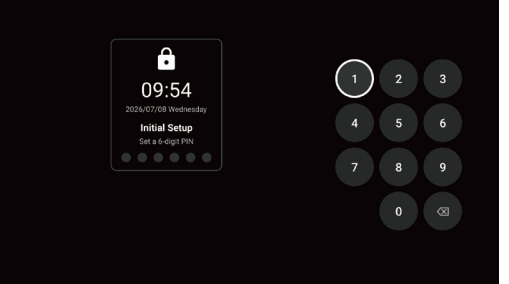


Homepage

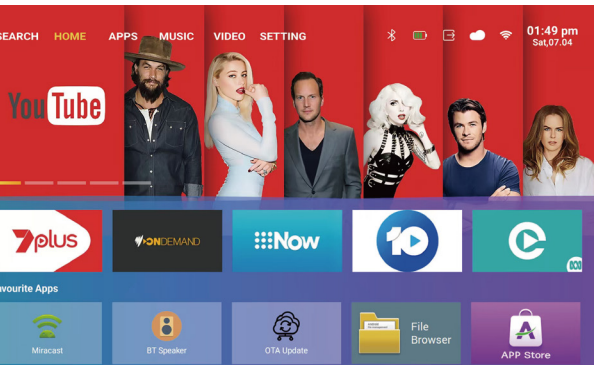 

Setting

 
Basic setting and device information:
Networking Setting, Bluetooth Setting, Language Setting, Date & Time Setting, Projection Setting, Password Setting, Other Setting and About.

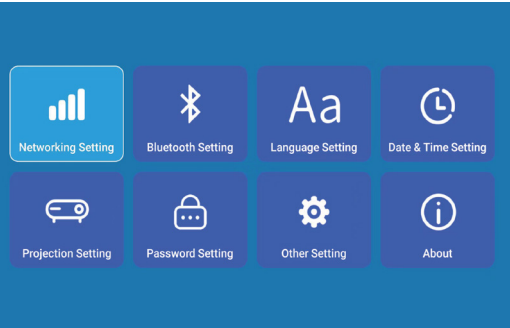

反面排一排，空白页放最后


Data & Time setting

 The default setting is auto timezone and date & Time, also can set date and time by manual.

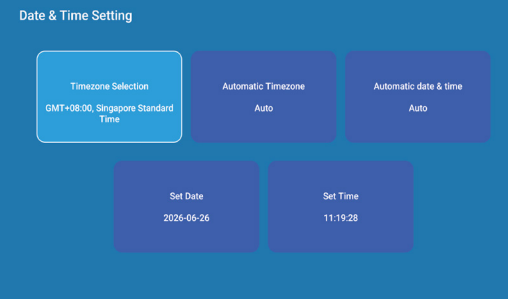


Password Setting

 
The user can turn on/off password verification in Password Setting. If you remember the initial password and want to change the password, you can click "Change Password" to set a new password.

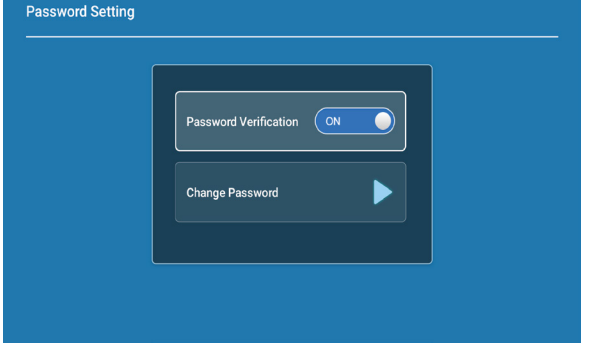

Change Password

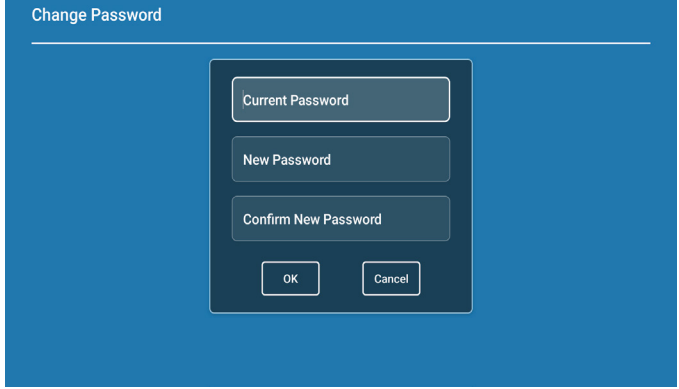 


Other setting

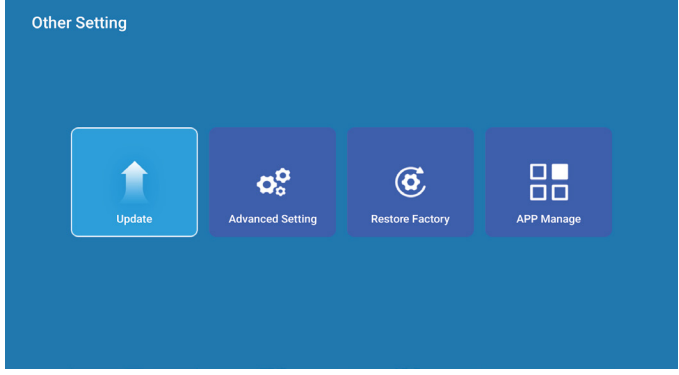 


Screen Mirroring

 Miracast: turn on the screen mirror of android device and make sure that your android device is connected to the same network as the projector.

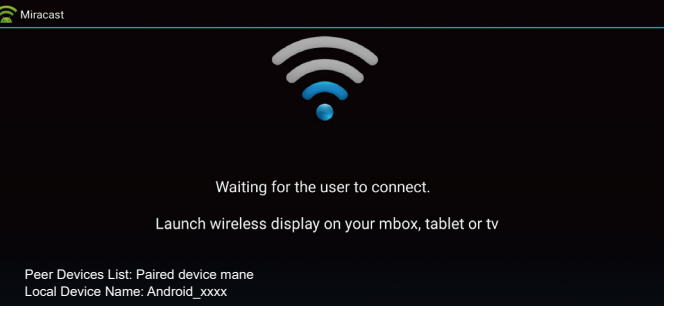


Screen Mirroring

 Emotn cast:
1.Screen mirroring: turn on the screen mirror of iOS device and make sure that your iOS device is connected to the same network as the projector.

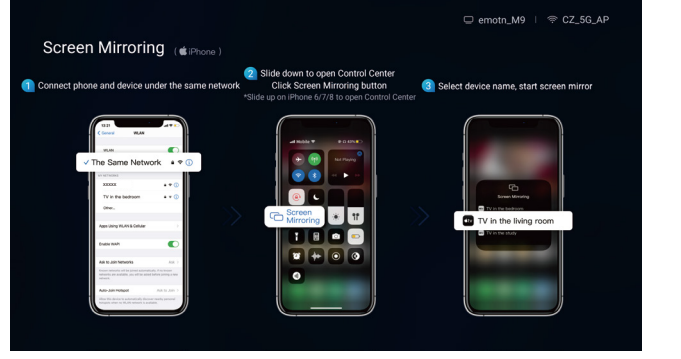


Screen Mirroring

 2.Online video cast: support android and IOS device, connect device and projector user the same network, open video app click the TV button.

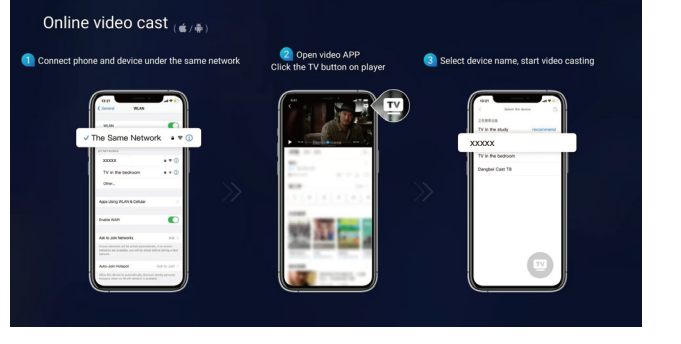

Networking Setting

 The user first connects to the wifi or sets the hotspot, and can watch the video online after connecting to the network.

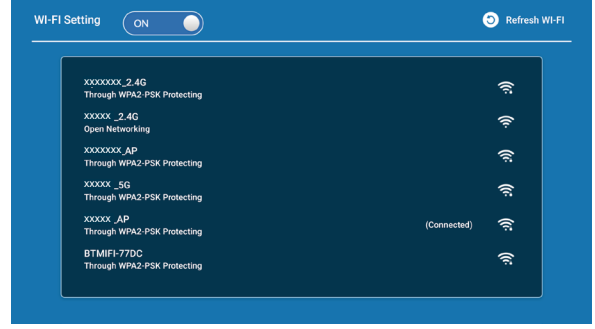


Bluetooth Setting

Connect Bluetooth devices, Bluetooth phones, Bluetooth speakers etc.




Projection setting

 The user can adjust Manual Rotate Mode, Projection Mode, Focus Setting, Quadrangle trapezoid, Simple trapezoid and Screen Zoom.

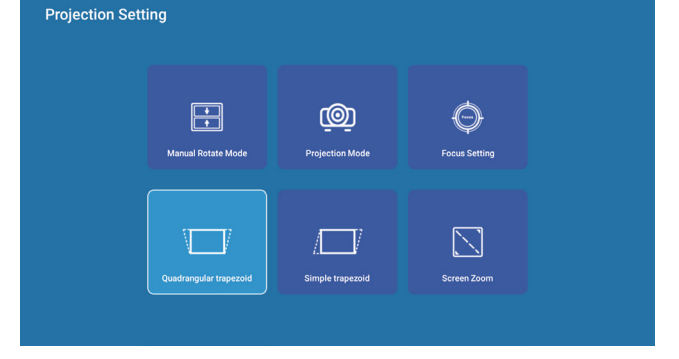


About

The model, version and storage information of the machine.

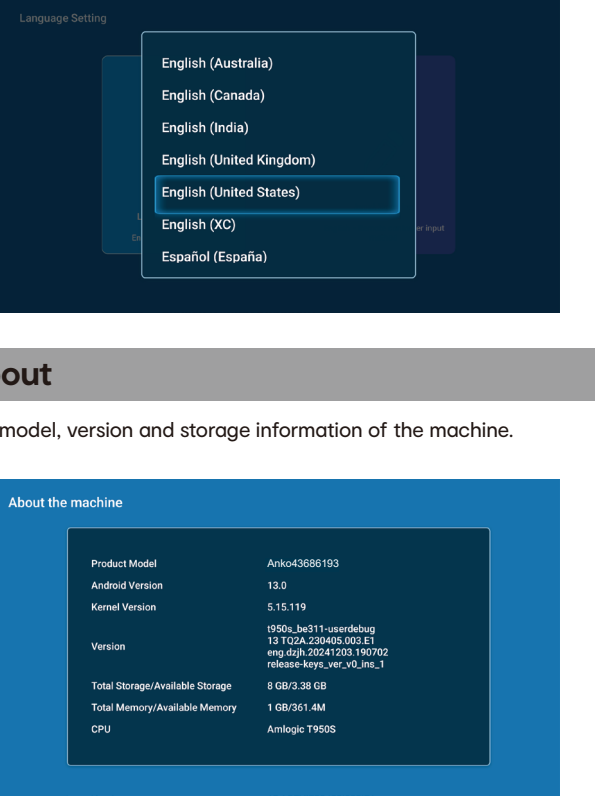

Language setting

 The users can choose English, Chinese, Korean, etc. The default language is English.

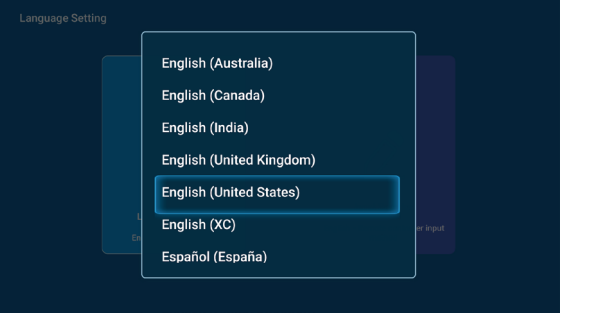

Trouble Shooting

- Remote control not working?
Make sure the batteries are effective and installed in the correct way.

- Blurry image?
Use manual focus to get the best image
The quality of the projection screen will also affect the image quality. Recommended to use it on a white wall or a better quality screen. Not suggest to use it on a thin white gauze screen, which will reduce the image quality.

- No Sound?
Ensure the Mute button has not been pressed.

- Automatic shut-down?
The unit will shut down if it overheats. Please ensure it is used in a ventilated environment.
The bottom of the projector has a air inlet, please ensure it is not blocked.
It is recommended to unplug the power supply after use to prolong the service life.

- Upside down image?
Please enter "Projection Mode" to select the corresponding mode.

- Video can not be mirrored or cast?
Due to copyright restrictions, some videos cannot be mirrored or projected.
The cast function only supports the built-in APP application of the projector.

- Black spot on the screen?
Wipe the lens with dry and clean cloth to remove dust on the lens.

- The APP cannot be used?
It might be that the old version of the app is no longer usable after the upgrade.
Please uninstall it from the App Store and then download and reinstall it.

- Forgot password cannot login?
Resetting the projector to reset the password.
If forget your password, can enter 951753 to reset your password and then access the main interface.

12 Month Warranty:

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you have any cybersecurity-related concerns or queries, please contact us online via our 'Contact Us' page at <https://www.kmart.com.au/contact-us/> or reach us by phone using the numbers listed below.



MADE IN CHINA
CUSTOMER SERVICE:
Kmart AU: 800 124 125
Kmart NZ: 0800 945 995
Kmart AU: 1300 753 567

Jerry Or

17th April, 2026

Statement of Compliance

Security standard for consumer grade relevant connectable products

This statement of compliance has been prepared by, or on behalf of Kmart Australia Limited, who is the manufacturer of the below product. The statement of compliance is made in accordance with the Cyber Security (Security Standards for Smart Devices) Rules 2025, authorized by the Cyber Security Act 2024.

Product manufacturer details	
Name of the manufacturer	Kmart Australia Limited
Address of the manufacturer	1 Eldon Rd, Chesham VIC 3148
Name of the authorized representative	Jerry Or (Product Technology)
Address of the authorized representative	Room 1016-1024A, 101F, Trade Square, No. 881 Cheung Chee Wan Road, Cheung Chee Wan, Kowloon, Hong Kong
Name(s) of other authorized representatives in Australia (if applicable)	N/A
Address(es) of other authorized representatives in Australia (if applicable)	N/A


Product details	
Product type	1080P Rechargeable Projector
Batch identifier	43686193
Defined support period for the product	We will provide security updates for this App until 31/12/2026. This device will receive all available security updates until 2/8/2028.

Declaration
It is declared that, in the opinion of the manufacturer:

1. The product listed in the table above has been manufactured in compliance with the requirements of Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025.
2. The manufacturer has complied with any other obligations relating to the product in Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025.

It is declared that this statement of compliance has been prepared by, or on behalf of, the manufacturer of the product listed in the table above and is accurate at the date of issue of 26/02/26.

 Prepared by or on behalf of Kmart Australia Limited

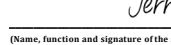

17th April, 2026

Jerry Or

17th April, 2026

(Place and date of issue of the statement of compliance)