

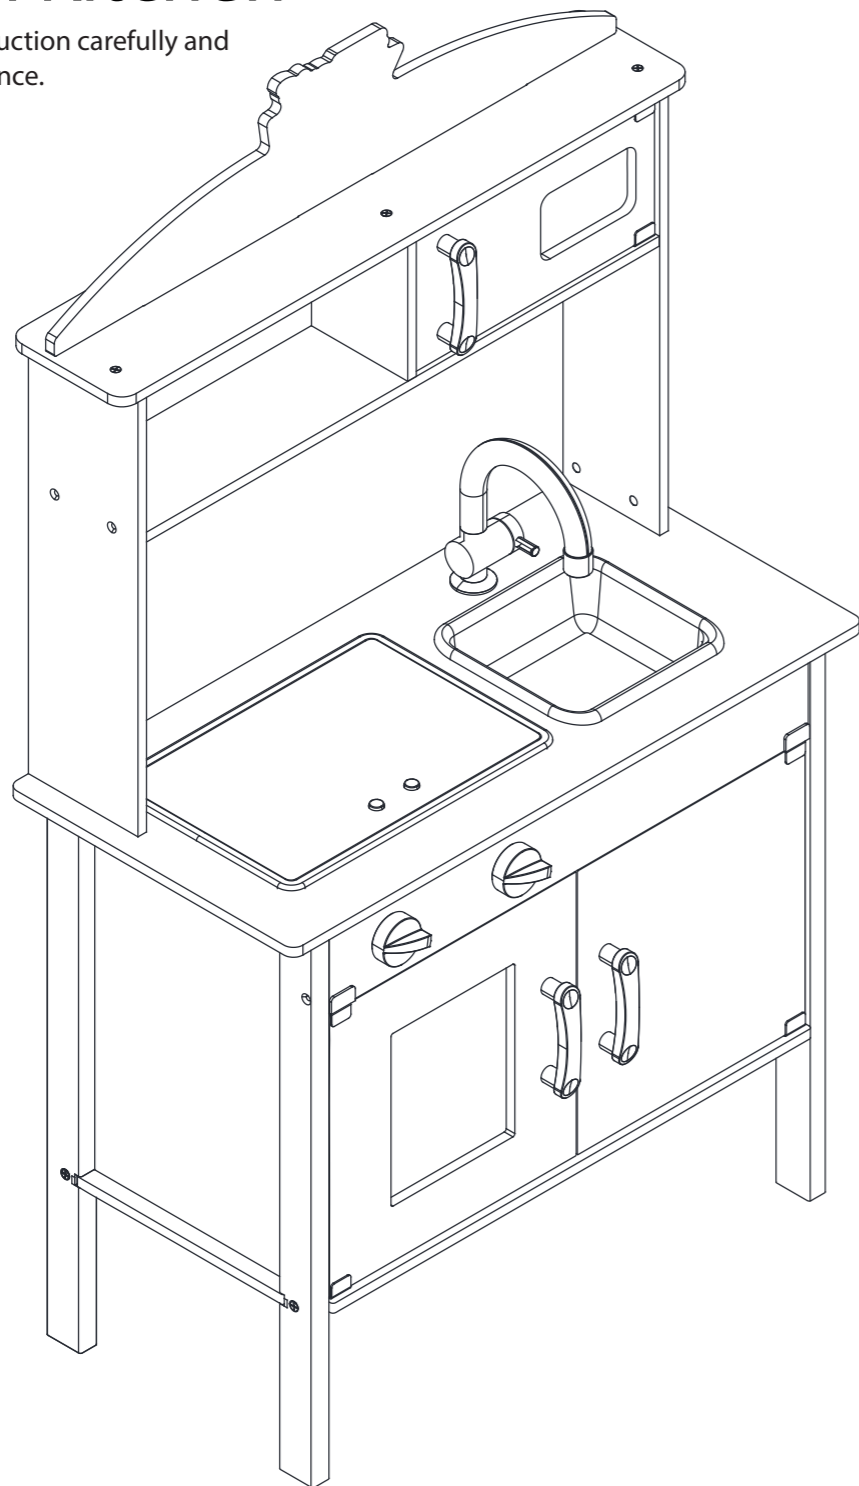 


INSTRUCTION MANUAL



# Wooden Kitchen

Read and follow instruction carefully and keep for future reference.



MADE IN CHINA

**WARNING:**  
CHOKING HAZARD - SMALL PARTS.  
NOT FOR CHILDREN UNDER 3 YEARS.



**WARNING:** PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.





## WARNING:

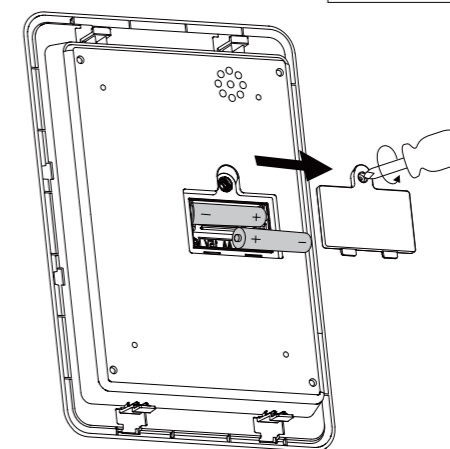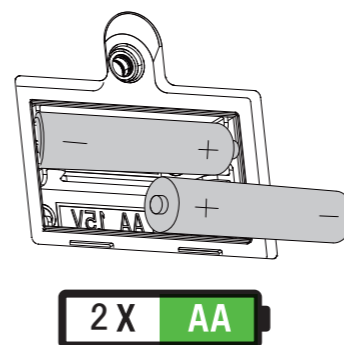  - **WARNING:** ADULT ASSEMBLY IS REQUIRED. UNASSEMBLED PARTS CONTAIN SCREWS WITH FUNCTIONAL SHARP POINTS. PLEASE KEEP UNASSEMBLED PARTS AWAY FROM SMALL CHILDREN. THIS IS A TOY, INTENDED FOR ROLE PLAY ONLY.
- **WARNING:** PLEASE SECURE THIS PRODUCT WITH THE SUPPLIED WALL FIXING. IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL. PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING DEVICE TO USE. REGULARLY CHECK THE ANCHOR IS SECURELY MAINTAINED.
- **CAUTION:** PLEASE CHECK CONDITION OF PRODUCT REGULARLY AS SCREWS MAY LOOSEN WITH USE OVER TIME. TIGHTEN SCREW FITTINGS IF NECESSARY. DISCONTINUE USE OF THE ITEM IF EXCESSIVE WEAR AND TEAR IS FOUND.

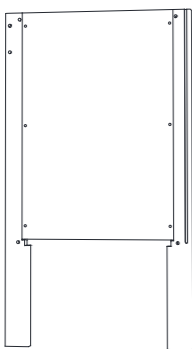 
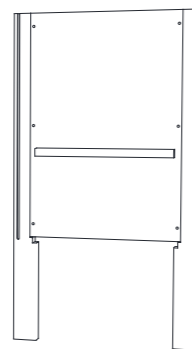 
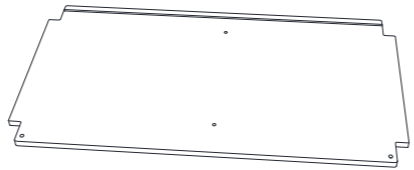 
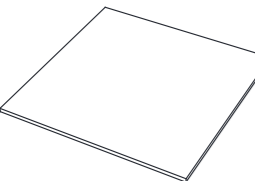 
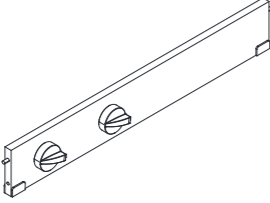 
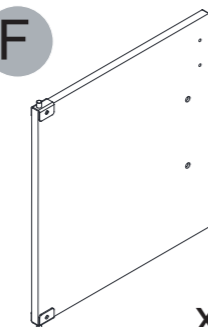 
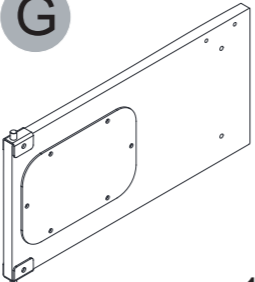 
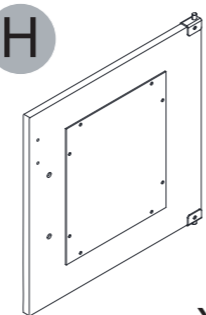 
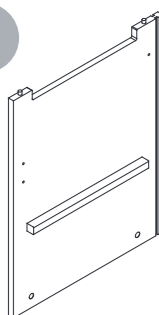 
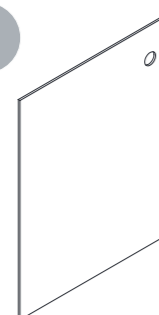 
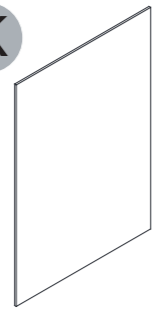 
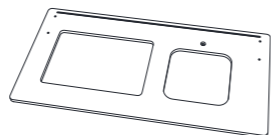 
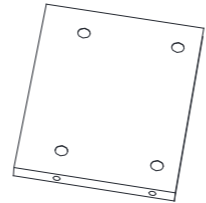 
 
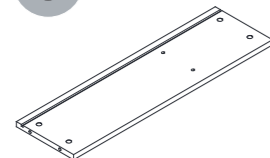 
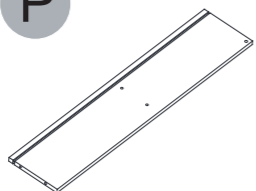 
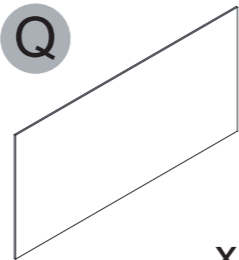 

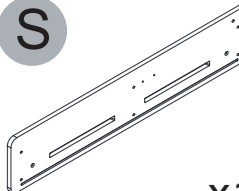 
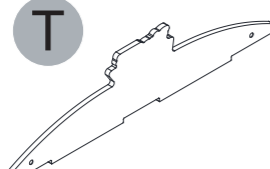 

 











• **WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ and -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES SHOULD ONLY BE CHARGED BY ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE. THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

 
• **WARNING:** DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN. IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.

**WARNING:**  
CHOKING HAZARD - SMALL PARTS.  
NOT FOR CHILDREN UNDER 3 YEARS.




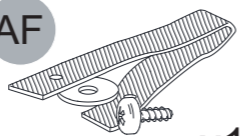  PARTS LIST


<b>A</b>  x1	<b>B</b>  x1	<b>C</b>  x1		
<b>D</b>  x1	<b>E</b>  x1	<b>F</b>  x1	<b>G</b>  x1	<b>H</b>  x1
<b>I</b>  x1	<b>J</b>  x1	<b>K</b>  x1	<b>L</b>  x1	<b>M</b>  x1
<b>N</b>  x1	<b>O</b>  x1	<b>P</b>  x1	<b>Q</b>  x1	<b>R</b>  x1
<b>S</b>  x1	<b>T</b>  x1	<b>U</b>  x1	<b>V</b>  x1	<b>W</b>  x1
<b>X</b>  x3	<b>Y</b>  x3	<b>Z</b>  x3	<b>AA</b>  M4X35mm x24	<b>AB</b>  M4X40mm x6
<b>AC</b>  M3X8mm x12	<b>AD</b>  M5X20mm x1	<b>AE</b>  M3X19mm x6	<b>AF</b>  M4X10mm x1	<b>AG</b>  M4X40mm x1

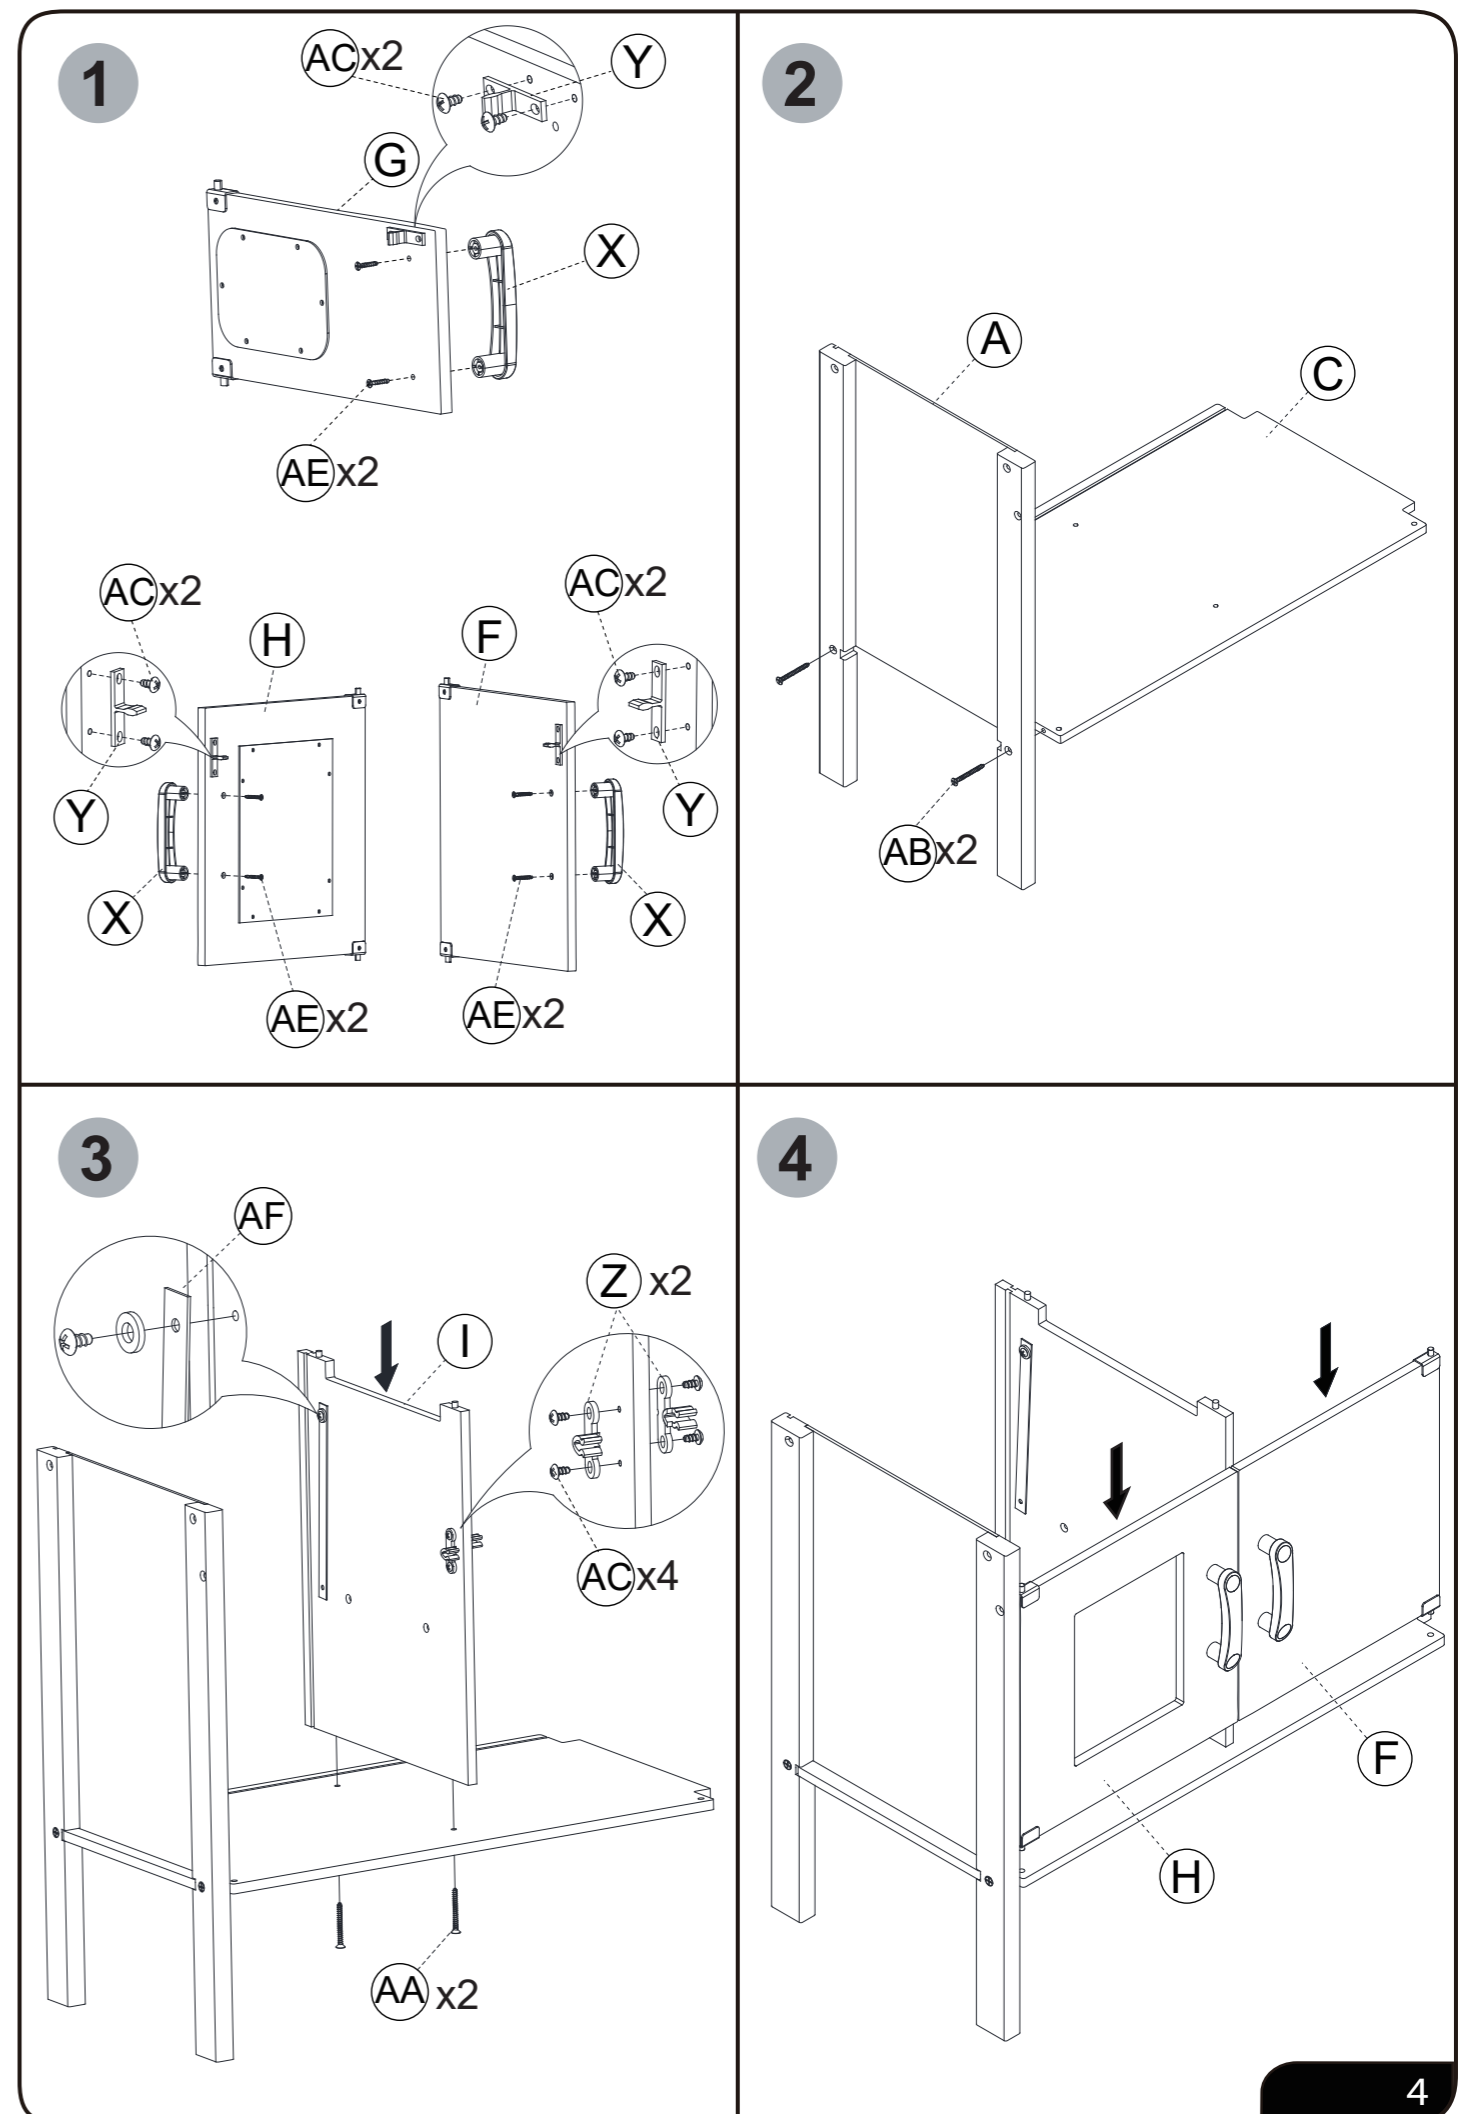 


5

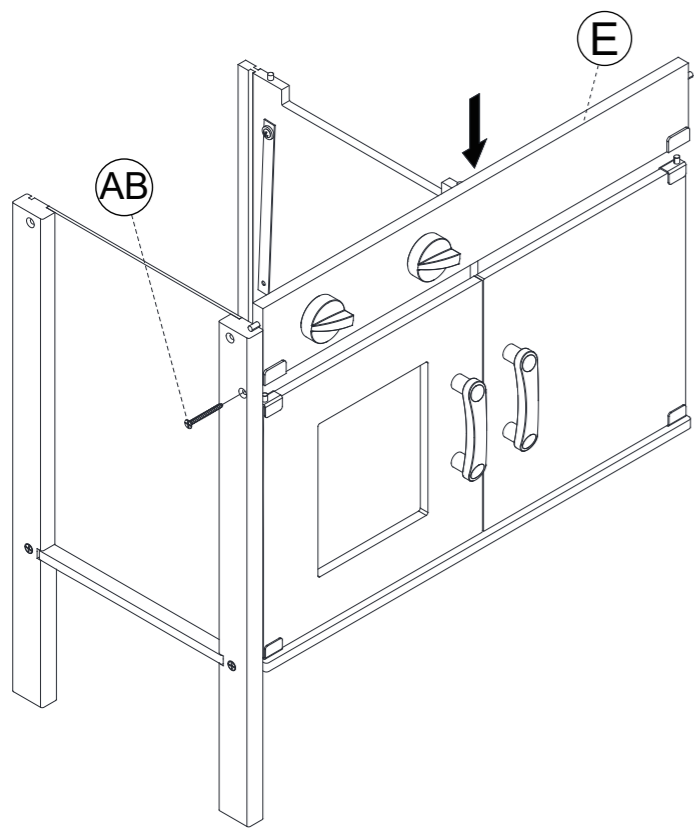 


6

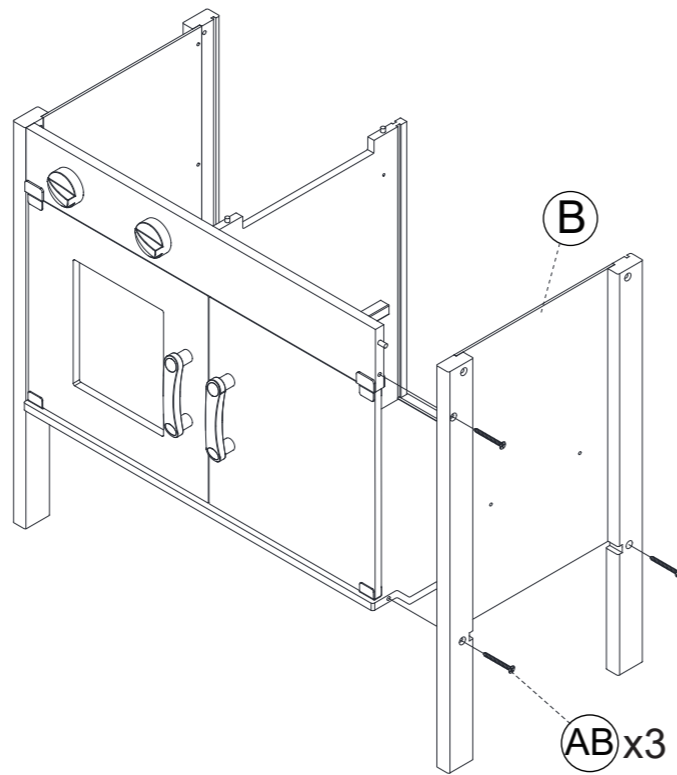 


9

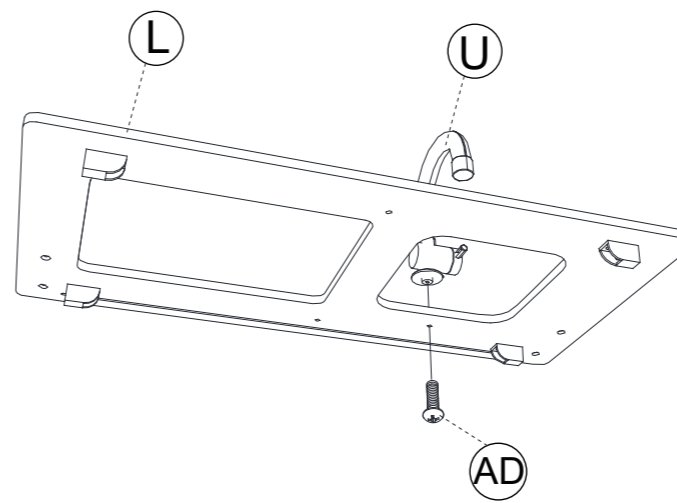 


10

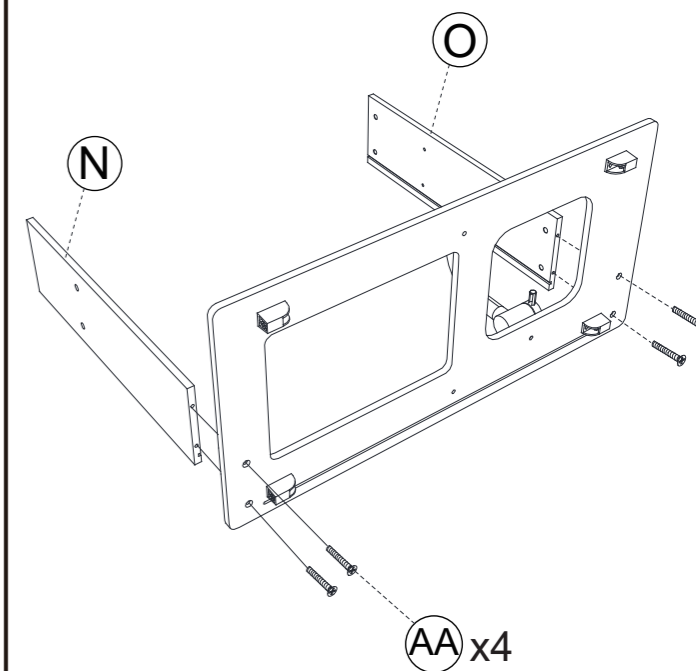 


7

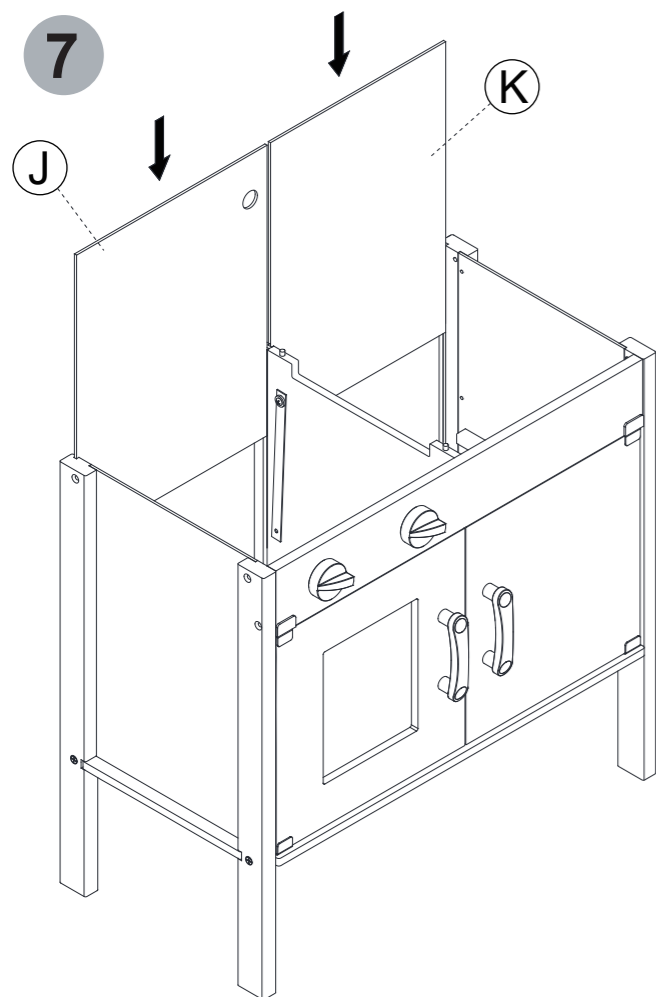 

8

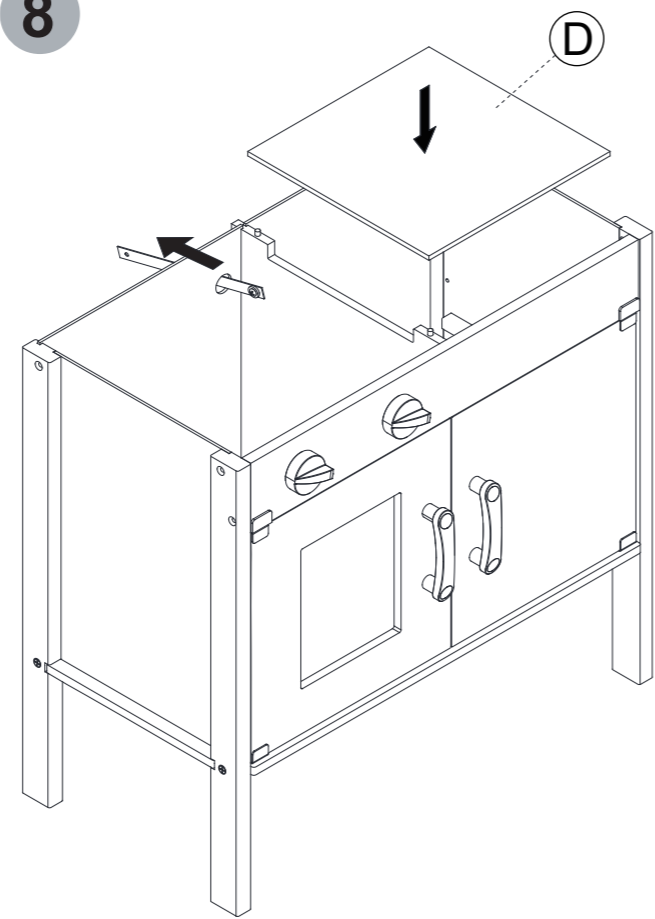 

11

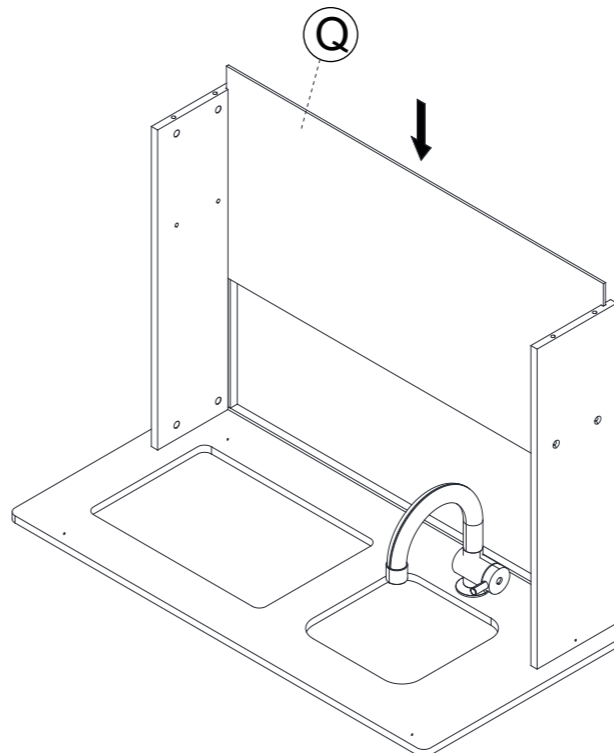 

12

