

Assembly Instructions

K: 43691050| T: 72405833 METAL AND WALNUT LOOK SHOE RACK

CARE INSTRUCTIONS:

Wipe clean with a damp cloth. Keep away from water and direct sunlight. For indoor and domestic use. Check and tighten all parts regularly.

 
 
WARNING:

Do not stand, sit, or lean on the product. Do not drag the product. Use only on a flat surface. Do not use until all screws, bolts and knobs are firmly secured. This product contains small parts and sharp points, keep away from children and babies. Adult assembly required. Failure to follow these warnings could result in serious injury.

MAXIMUM SAFE LOAD: 30KG FOR TOP PANEL, 8KG FOR EACH LAYER.

①


Hardware List

	a	M6X25	16PCS
	b	M5x38	4PCS
	c	6x30	2PCS
	d	M5x10	4PCS
	e		2PCS
	f		4PCS







	g	M6	1PC
	h		2PCS
	i		2PCS
	j	M5X22	6PCS
	k	M5	1PC

②

									
A	x1	B	x1	C	x1	D	x1	E	x2
									
F	x1	G	x2	H	x1	I	x1		

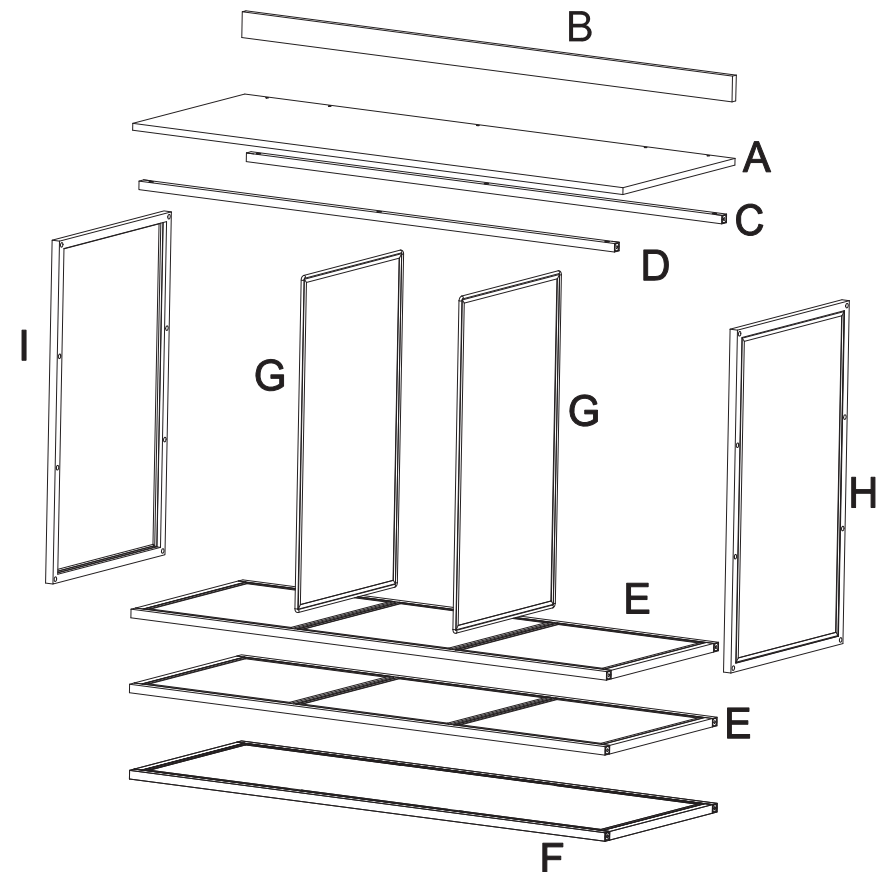 


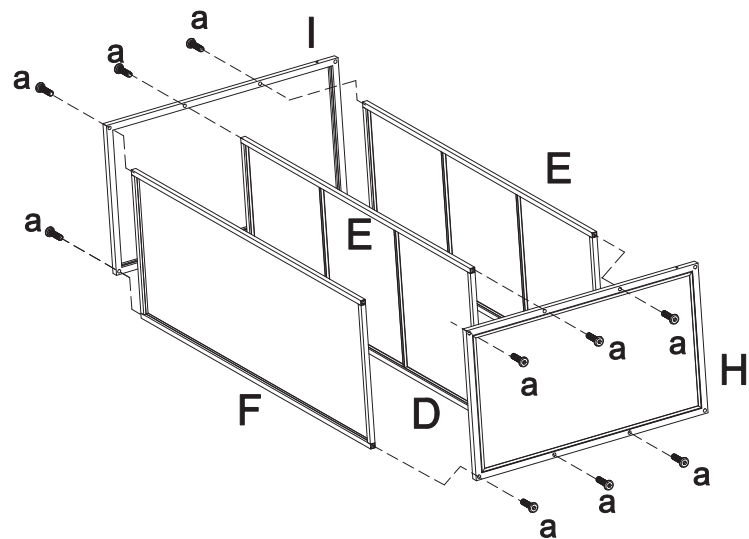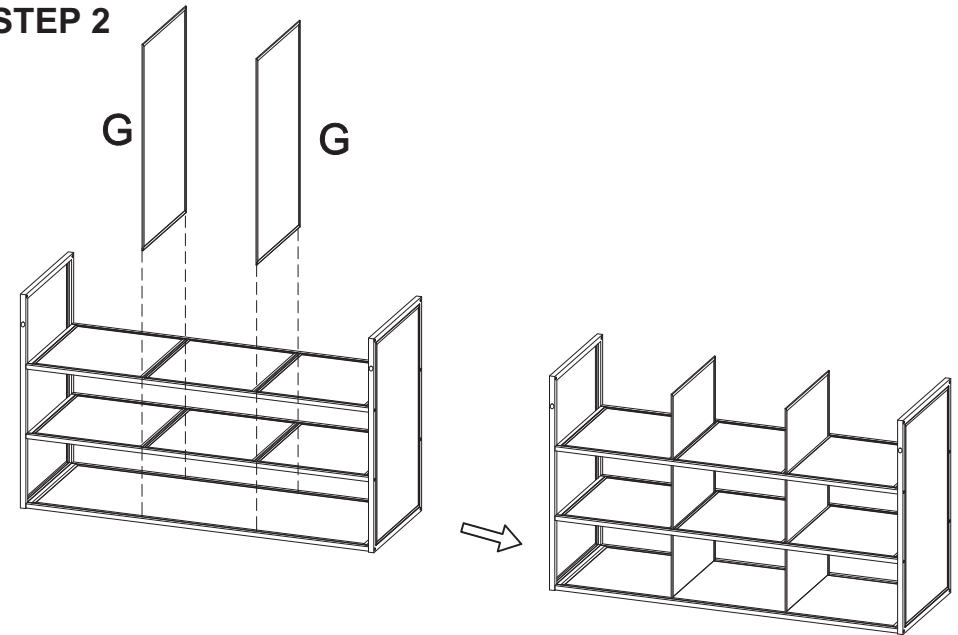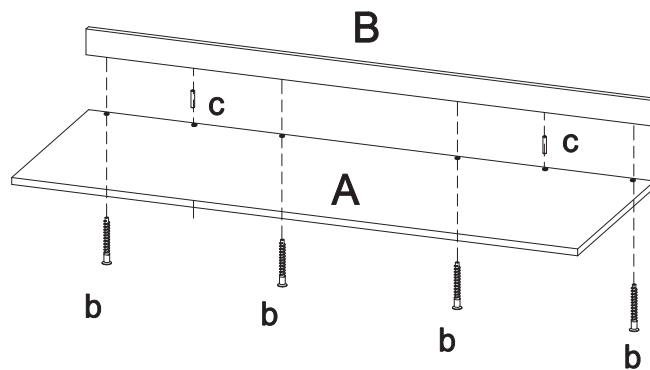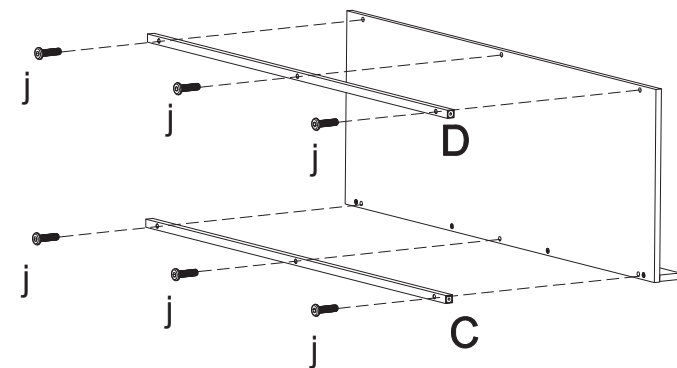      Do not tighten the screws fully during assembly
Fully tighten screws after the final assembly steps

STEP 1**STEP 2****STEP 3****STEP 4**


STEP 5

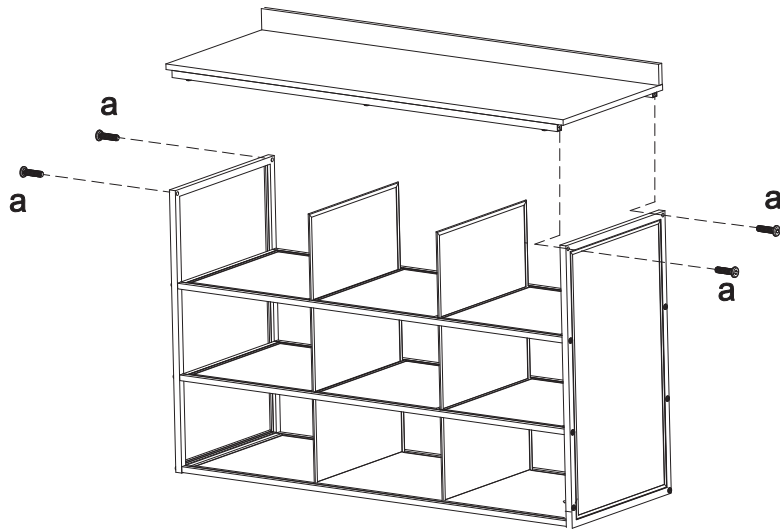  a x 4pcs  g x 1PC




STEP 6

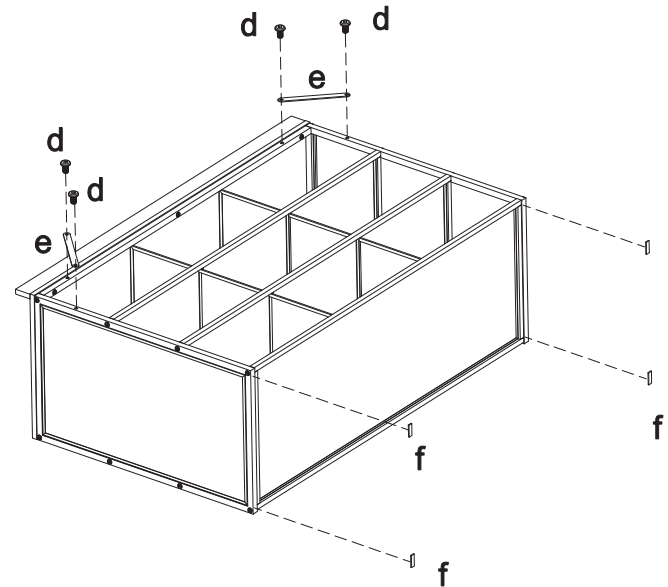  d x 4pcs  e x 2pcs  f x 4pcs  k x 1PC



⚠ WARNING

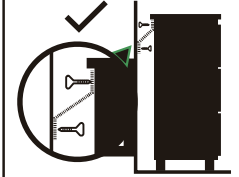 

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

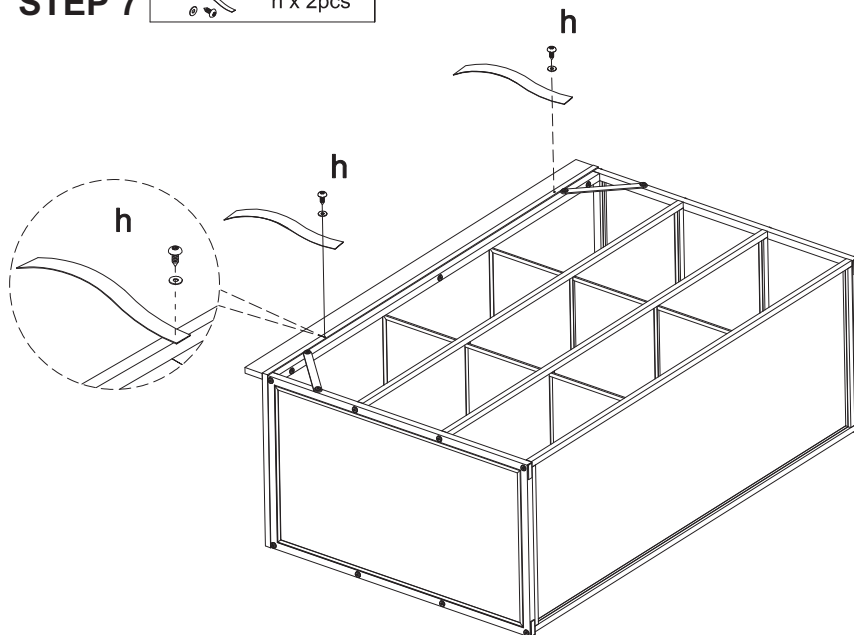 
NEVER put a TV on this furniture



This is a permanent label. Do not remove!


STEP 7

 h x 2pcs



STEP 8

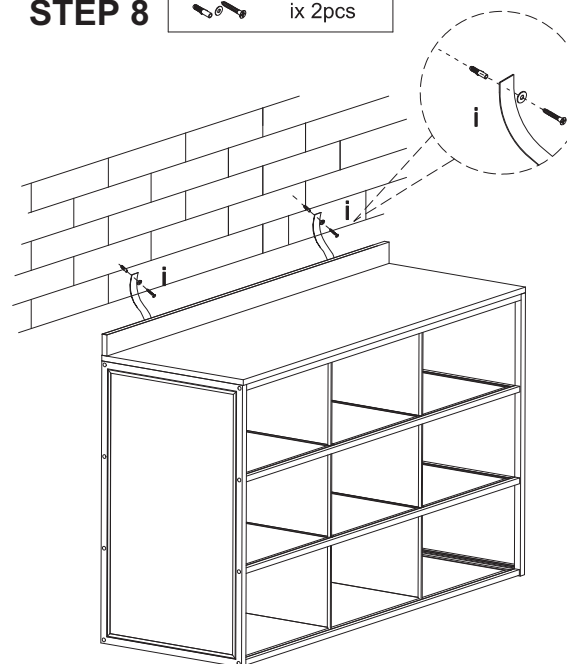  ix 2pcs



TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

