

anko

Garment Steamer **User Manual**



Model no.: TSK-7762

General Safety Instructions

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

Read this user manual carefully before first use and save it for future reference.

 
Read this user manual carefully before first use and save it for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer is not responsible, and the guarantee will not apply.
- Before connecting your appliance, check if the mains voltage is the same as the voltage indicated on your appliance and that the power outlet has an earth connection. If unsure, check with an electrician.
- Before each use, ensure that the electric cord or any other parts on the appliance are not damaged.
- Keep the garment steamer and its cord out of reach of children when it is connected to mains power or cooling down.
- Never direct steam towards people or animals. Never direct steam towards any other electrical or/and electronic appliances.
- The garment steamer is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- If the appliance shows evidence of damage, malfunction, water leaks or other abnormality, DO NOT use.
- Always make sure the appliance is switched off, unplugged and cooled down before cleaning.
- **IMPORTANT! The appliance must not be left unattended while it is connected to mains power and before it has cooled down.**
- Do not unplug the appliance by pulling on the cord or on the appliance.
- Never immerse the main unit, the Sole plate, the cable or cord plug in water. Never wash them under a water tap.
- The sole plate of the appliance can become extremely hot and may cause burns if touched. Do not allow the supply cord to come in contact with the sole plate.

- **CAUTION! For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrical person only to avoid a hazard, or the product must be disposed of.**
- The garment steamer must be used and rested on a flat, stable surface.
- When placing the appliance on its stand, ensure that the surface on which the stand is placed is stable.
- The iron must not be stored until it has cooled.
- The plug must be removed from the socket-outlet before filling the water reservoir.
- Care should be taken when using the appliance due to the emission of steam.
- Unplug the appliance during filling and cleaning.
- **IMPORTANT!** To avoid damage or blockage of the garment steamer, do not use any scented water or additives.
- Remove the plug from the mains power outlet socket and allow the appliance to cool down completely before cleaning.
- **WARNING!** Do not use alcohol, acetone, benzene, scouring cleaning agents etc. to clean the appliance.
- Never use a hard brush or metallic pad to clean the Sole plate and never place the appliance on a rough surface.
- For additional electrical protection, this appliance should be connected to a household residual current device (safety switch) with a rating of no more than 30mA. If unsure consult an electrician for advice.
- For cleaning, please refer to the "CLEANING AND MAINTENANCE" section.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

PARTS

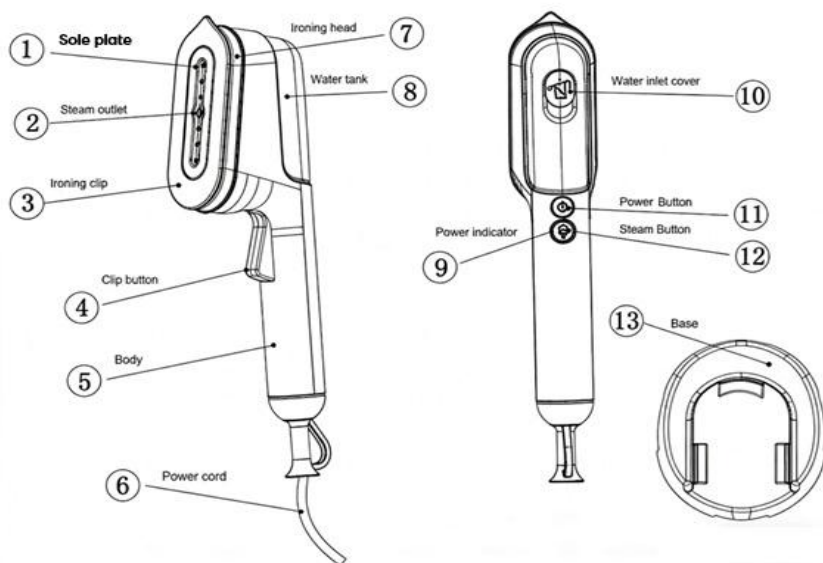


FILLING THE WATER TANK



To prevent scale build-up always empty the water tank after use. Rinse the water tank to remove any deposits.

 - Ensure that the steamer is cold and not connected to mains power.
- Open the water inlet cover (10) by lifting the cap.
- Place the garment steamer on the stand and fill the tank with water, using a filler cup (not provided).
- Press down the inlet cover to close the water tank. To avoid water spillage, ensure that the water tank is properly closed.

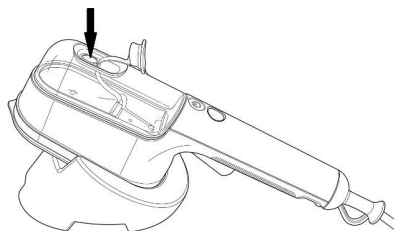

NOTES:

To avoid calcium deposits, we recommend you use distilled water for your garment steamer.

 
IMPORTANT! To avoid damage or blockage, do not use any scented water or additives.

OPERATION

WARNING! The Sole plate is extremely hot when used. Disconnect the iron from the mains power outlet and let the iron to cool down before detaching the Sole plate.

Use as Steam Iron

1. Fill the water tank as described above.
2. Position the Garment Steamer on its Base on a suitable flat stable surface.
3. Connect the plug into a 220-240V AC electric power outlet.
4. Press the Power Button to turn ON the unit, the power indicator will keep flashing while heating up.
5. Wait until the power indicator becomes steady, this means the garment steamer has heated up and is ready to use.
6. Press the Steam Button to release steam, press the button again to stop emitting steam.
7. Hold the steamer in a horizontal position then start ironing.

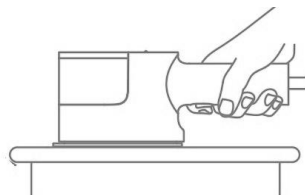

Use as Garment Steamer

1. Fill the water tank as described above.
 2. Position the Garment Steamer on its Base and on a suitable flat stable surface.
 3. Connect the plug into a 220-240V AC electric power outlet.
 4. Press the Power Button to turn ON the unit, the power indicator will keep flashing while heating up.
 5. Wait until the power indicator becomes steady, this means the garment steamer has heated up and is ready to use.
 6. Press the Steam Button to release steam. Hold the steamer in a vertical position with steam nozzle facing away from you.
 7. Do not use the appliance upside-down or direct steam towards any part of your body.
- ATTENTION: To protect against burns or injury to people, do not iron or steam fabrics while being worn on the body. Do not direct steam towards the body when ironing.**
8. When the water tank runs out of water, you will hear loud noise from the pump. Unplug the unit and refill with water.
 9. After use, continue to steam until the water tank runs out of water and no steam comes out from the steam outlet.
 10. Unplug the steamer and wait for an hour for it to cool down before storage.

NOTES:

The high temperature steam can reach 100°C. Ensure that the material is high-temperature resistant before steaming. Do not leave the steam panel on the same spot for too long to avoid damaging the garment.

Keep the steamer nozzle a slight distance away from garment with frills, ruffles, ruching or sequins. Use only the steam to loosen the fabric. You can also steam from the inside of the fabric.

 
 


Check the fabric label for recommendations before applying the steamer. We recommend that you test acrylic, nylon or other synthetic fabrics in an inconspicuous area to ensure these fabrics are not damaged by hot steam.

Using the Clip Press (Vertical Ironing)

For harder crease, use the Ironing Clip to increase steam penetrations.

1. Press the Clip button to open the clamp, then place the fabric in between.
2. Release the Clip button to clamp the fabric firmly between the heated plates.
3. Glide the steamer slowly downward while releasing steam to lock in a perfectly crisp crease.

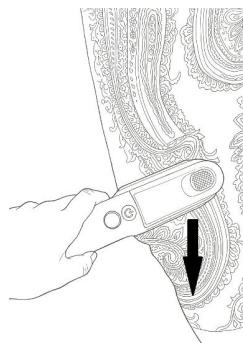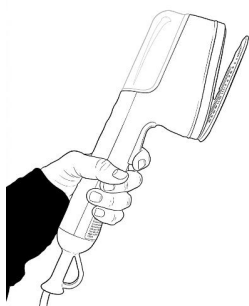

4. **Pull** the sides of the garment with your other hand to **stretch** it. Wear a glove on the hand you are using to hold a garment. The glove protects your hand against the steam from the steamer nozzle.

CLEANING AND MAINTENANCE

IMPORTANT! Unplug the iron from mains power and allow it to cool down completely before cleaning and storing.

- Clean the upper part of the iron with a damp cloth. Use a mild detergent if necessary.
- Do not use alcohol, acetone, benzene, scouring cleaning agents etc., to clean the iron. Do not use hard brushes or metallic objects.
- Remove any deposits on the soleplate with a damp cloth. To avoid scratching the finishing, never use a metallic pad to clean the soleplate, and never place the iron on a rough surface.
- To remove synthetic residue from the soleplate, iron over an old cotton rag in high heat setting.
- Always store the emptied iron horizontally on a stable surface with a cloth protecting the soleplate.

IRONING TIPS

IMPORTANT! always check whether a label with ironing instructions is attached to the garment. Always follow the ironing instructions attached to the garment.

- The iron heats up quicker than it cools down, therefore, you should start ironing the articles first requiring the lowest temperature such as those made of synthetic fibre/material.
- If the fabric consists of various kinds of fibres, you must always select the lowest ironing temperature to iron the composition of those fibres.
- Silk and other fabrics that are likely to become shiny should always be ironed on the inner side.
- To prevent staining do not spray water straight on silk or other delicate fabrics.
- Velvet and other textures that rapidly become shiny should be ironed in one direction with light pressure applied. Always keep the iron moving at all times.
- Pure wool fabrics (100% wool) may be ironed with the iron set to steam position. Preferably set the steam button to the maximum position and use a dry cloth between the garment and the iron for protection.
- Do not touch plastic buttons on the garment with a hot iron because they may melt.
- Be careful around zippers and similar items to prevent the soleplate from scratching.

Symbol	Fabric	Temperature setting	Variable steam	Steam shot	Spray
	Nylon, silk	MIN 	✗	✗	✓
	Wool		✗	✗	✓
	Cotton, Linen	 MAX	✓	✓	✓
	Attention! This symbol indicates: DO NOT IRON!				✓ possible ✗ not possible

TECHNICAL DATA

Rated voltage: 220-240V~ 50-60Hz

Rated power: 1200-1400W

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us