



Multi Snack Maker

FS-328

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.



Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against the risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquid.
- For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.
- Do not operate the appliance if it is damaged or malfunctions.
- Do not touch hot surfaces. Only use the handle.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use an extension cord with this appliance.
- Do not dismantle and repair the appliance by yourself. **DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!**
- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- Do not operate your appliance inside a cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Use only heat-proof synthetic or wooden utensils when making waffles, this is to prevent damage to the non-stick coating on the heating plates. Make sure that the utensils are not pointed or have sharp edges.

-  **Caution, hot surface. Care must be taken. The surfaces will get hot during and immediately after use.**
- For cleaning the cooking surface, please refer to section "CLEANING AND STORAGE".

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

KNOW YOUR MULTI SNACK MAKER

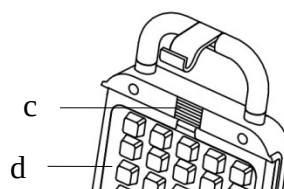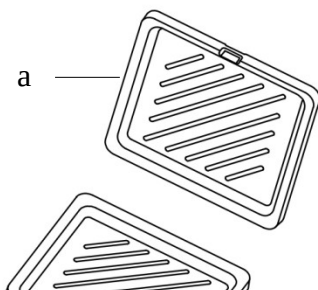

a. Grill plates

b —————

- b. Handle
- c. Plate release button
- d. Waffle plates
- e. Handle
- f. Red power indicator
- g. Locking clip

g —————

IMPORTANT!

- Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product back to the place of purchase for replacement.
- When using the appliance for the first time, carefully remove all internal and external packaging and dispose them responsibly.

BEFORE FIRST USE

- Clean the appliance following the section "Cleaning and Storage".
- Place the appliance on a flat, solid, dry and heat-resistant surface. Ensure a minimum of 30 cm free space around the appliance. Do not operate your appliance inside a cabinet or directly under a wall cabinet.

IMPORTANT! Place the appliance on a heat-resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat-resistant mat is recommended.

- Plug the appliance into a mains power supply.

Note: Make sure the voltage shown on the appliance matches your local mains power before plugging it in. Rated voltage: 220-240V~ 50-60Hz.

- Heat the appliance **without any food** for about 5 minutes. Apply a light coating of cooking oil to the baking plates and carefully wipe it in with a paper towel. You only need to condition the appliance before first use.

You may notice a small amount of smoke or odour during this process — this is normal and will disappear after a few uses.

CAUTION! The baking plates get very hot during use.

- Unplug the appliance and your multi snack maker is now ready for use.

HOW TO USE YOUR MULTI SNACK MAKER

1. Press the plate release button to remove the baking plates. Choose the correct pair of baking plates and install them into the snack maker. Wipe the baking plates with a damp cloth, then dry with a paper towel.
2. Close the appliance and plug it into a power outlet. The red power indicator illuminates when the appliance is heating up, and it will cycle ON and OFF to maintain the cooking temperature. It takes approx. **3 minutes** to reach the cooking temperature.
3. **Open the appliance** and lightly brush the baking plates with a small amount of vegetable oil.
4. **Add your ingredients**, gently close the lid and secure the **locking clip** in place.

NOTE: Do not slam the lid shut, as this can cause the mixture to spill out.

5. The cooking time will vary depending on your ingredients, but as a guide, allow about **5 minutes**. If you prefer a darker or crisper result, close the lid again and cook for a little longer until reach your desired colour.

IMPORTANT: Do not open the lid during the first 2 minutes of cooking. This can cause the snacks to split and make them difficult to remove.

6. When removing your snacks, **use a plastic or wooden spatula** only. Never use sharp or metal utensils, as they can damage the non-stick coating. Use **oven mitts** when handling hot food or parts of the appliance.
7. After use, **unplug the appliance** from the power outlet and allow it to cool down before cleaning or storing.

WARNINGS!

- Never use a sharp knife or fork to remove food — this will damage the non-stick coating. Use **heat-resistant wooden or plastic utensils** only.
- Always **unplug the appliance** when not in use or before cleaning.
- If the **surface or housing** of the snack maker becomes cracked or damaged, **stop using it immediately** and unplug it from the power outlet to avoid the risk of electric shock.

CLEANING AND STORAGE

This appliance should be cleaned after each use.

WARNING! Do not immerse the multi snack maker in water or in a dishwasher!

- Always ensure the snack maker is disconnected from the mains power outlet socket before attempting any cleaning or maintenance.

- Ensure that your snack maker has completely cooled down before cleaning. The snack maker will be very hot during and immediately after use.
- Clean the inside and outside of the appliance with a damp cloth or soft brush. Do not use anything abrasive that can scratch or damage the appliance. Wipe dry with a soft dry cloth.
- Wash the accessories with soapy water. Dry all components thoroughly before storage.
- Store the appliance in a dry location and out of the reach of children.

WARNING! Do not wrap the power cord around the appliance.

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 590-710W

SUGGESTED RECIPE

Ingredients

250g	all-purpose flour
25g	sugar
200ml	milk
2	eggs
50g	butter
3g	baking powder

DIRECTIONS

Beat the eggs in a mixer until well mixed. Add the remaining ingredients and mix until smooth. Leave the mixture for at least half an hour.

Preheat the waffle maker. Use a pastry brush to lightly grease the non-stick coating of the baking plates with oil or butter. Pour mixture into waffle maker. Cook until golden brown.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us