 


# anko

## POWER BLOWER

### Instruction Manual

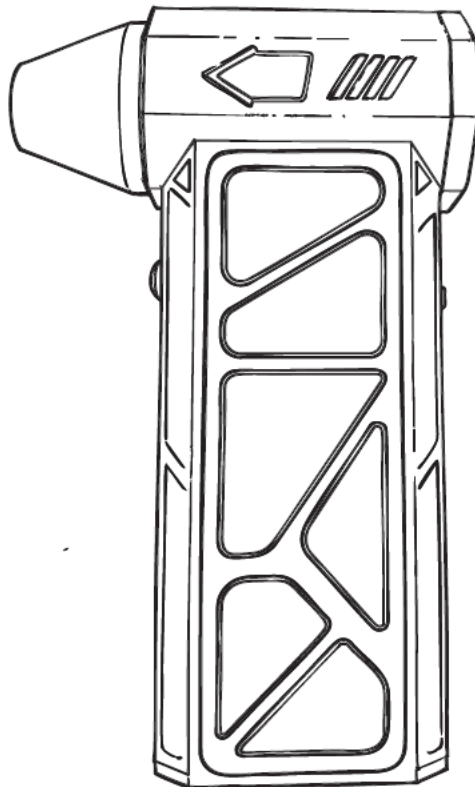

Model No.: APRF07

Rev 01

 
To ensure the proper operation of this device, please read this instruction manual carefully before using the device and keep them for further reference.

## EXPLANATION OF SYMBOLS


The following symbols and signal words are used in this user manual, on the product or on the packaging.



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.

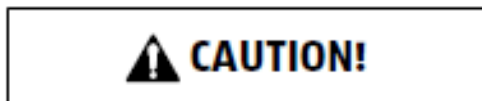

 This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.

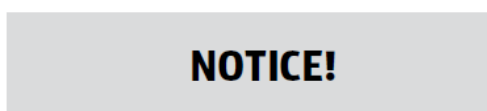

This signal word warns of possible damage to property.



The Regulatory Compliance Mark (RCM) shows that a product is safe to supply to the Australian Market.



Fans suitable for Tropical climates.

## IMPORTANT SAFEGUARDS



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions on to the next owner of this product.

**When using electrical products, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed including the following:**

- **Usage restrictions:** This product is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- **Children:** Supervise children to ensure they do not play with the product. Close supervision is necessary when any product is used by or near children. Keep the product and its cord out of reach of children less than 8 years old.



**Risk of injury!**

**If you do not use the product properly there is an increased risk of injury.**

- Any type of servicing, apart from ordinary cleaning, must be carried out by a qualified electrical person only. There are no user-serviceable parts in this product.
- Do not immerse the product or USB charging cable in water or other liquids.
- Always switch off and unplug the USB charging cable when you are not using it, when you intend to clean it, or in the event of a malfunction.
- Do not dispose of the battery in a fire or a hot oven or mechanically crush or cut the battery as this can result in an explosion.
- Do not leave the battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- **Do not leave the Product running or charging unattended and ensure to remove the charging cable from the product when it is fully charged.**
- The product must only be used with a charger with a safe extra low voltage (USB Charger with min. DC 5V output and 2A output) corresponding to the marking on the product.
- This product contains batteries that are non-replaceable.
- For the safe disposal of used batteries, please consult with your council on the guidelines for recycling used batteries items.
- If the batteries have leaked, please do not use the product and dispose of it accordingly.

#### **WARNING: Risk of fire**

- Do not vacuum or blow, hot, glowing or burning ash. Pick up cold ash only.
- The dust container must be emptied and cleaned before and after each use.
- Do not use paper dust bags or bags made from similar flammable materials.
- Do not use any other vacuum cleaner to vacuum ash.
- Do not rest ash on the vacuum cleaner or on flammable or polymeric surfaces, including carpeting and vinyl tile.
- For cleaning, see section “CLEANING AND MAINTENANCE”.



**WARNING!** Ensure that the charger (not supplied) and/or USB cable does not get wet (water splashes etc.).

- Do not use your charger or the USB cable with wet hands.
- Do not immerse the USB cable in water or other liquids or use near sinks, baths or showers.
- Only charge the Product with the USB cable that was supplied with the Product.
- Only charge the Product from an Extra Low Voltage Battery Charger (not supplied) with an output rating the same as indicated on the Product’s rating label.

#### **Usage Conditions and Restrictions**

- **Domestic use only:** This product is intended for private domestic use only. It is not suitable for commercial, industrial or trade use.
- **Intended purpose:** Do not use the product for anything other than its intended purpose, and only use it as described in this manual. Any other use is not recommended and may cause fire, electric shock, or injury.

- **Keep clear:** Never place anything on top of the product while it is in use.
- **Repair:** The product has no user-serviceable parts contained inside. Do not attempt to repair, disassemble, or modify it yourself.
- **Liability:** Misuse or improper installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damage or injury caused by misuse of the product or noncompliance with the instructions.

## NOTICE!

 
### Risk of damage!

Improper handling of the product may result in damage.

- Keep the product and USB charging cable away from open flames and hot surfaces.
- Never insert any objects into the housing.
- Never throw the product into a fire.
- Do not cover the product during use.
  - The product contains batteries that are non-replaceable. When the battery is at the end of its life, the product should be properly disposed of.
  - Do not press down on the power button with excessive force.

## SAVE THESE INSTRUCTIONS

## PRODUCT OVERVIEW

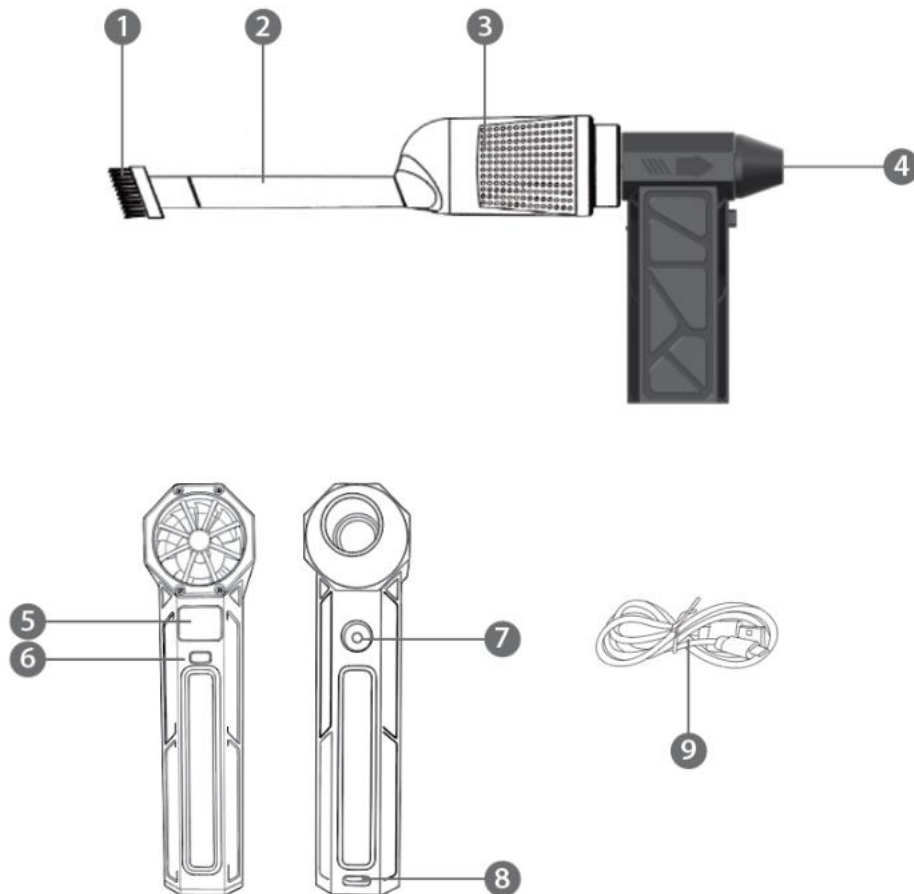

1. Vacuum brush head
2. Vacuum extension rod
3. Vacuum dust cup/filter
4. Air Outlet/Blower
5. LED screen/Battery percentage
6. Power/Speed selector button
7. Light
8. USB Charging port
9. USB cable

# INSTRUCTIONS

## USING YOUR PRODUCT FOR THE FIRST TIME

Carefully unpack the product and remove any packaging. Check to make sure that all parts are included (see Product Overview) and there is no visible damage to the product. If the Blower is damaged or any parts are missing, return the product back to the place of purchase for a replacement. Ensure to read all instructions carefully and keep them for future use.

## OPERATION

### CHARGING THE PRODUCT

Ensure that you fully charge the Blower before first use.

1. Insert the smaller end of the USB Charging cable into the input port of the blower.
2. Insert the larger end of the USB charging cable into a 5Vd.c. 2A USB charger (not supplied) and switch it ON.

**NOTE:** Charging starts automatically. The LED screen will display the charging percentage (E.g. 70%) and the green charging indicator will begin to flash.

3. Charging is complete when the display shows 100%. Disconnect the USB charging cable from the blower and the power source.

**NOTE:** Do not overcharge. Overcharging will affect the service life of your blower. The charging cable should be removed once the charging is complete.

### SPEED SETTINGS

The product has 4 speeds. Each press of the power/speed button will change the speed, and the LED screen will display the set speed.

Press 1	Speed 1	Display shows P1	Low speed
Press 2	Speed 2	Display shows P2	Medium speed
Press 3	Speed 3	Display shows P3	High speed
Press 4	Speed 4	Display shows P4	Turbo speed

### USING THE BLOWER

Ensure that the product is fully charged.

To use the blower function, ensure that the vacuum parts are not assembled.

1. Press the Power/speed selector button to switch ON the blower. This will default to Low speed. The product has 4 speeds.
2. To increase the speed, press the Power button again to switch to a higher speed. Each press of the power/speed button will increase the speed.
3. After reaching the highest speed, pressing the Power/speed button again will turn the blower OFF.

 
**NOTE:** You will need to cycle through the speeds to turn the Blower off.

**NOTE:** To turn on the light function, press and hold the power/speed button to turn it on. To turn it off, press and hold the power/speed button again.

## USING THE VACUUM

Assemble the vacuum as per below.

The product needs to be fully assembled for the vacuum function to work.

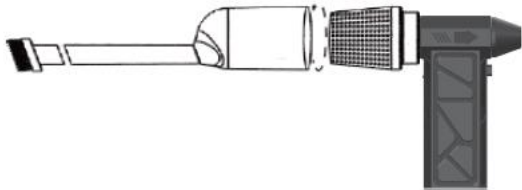

Ensure that the product is fully charged.

1. Press the Power/speed selector button to switch ON the Blower. This will default to Low Vacuum speed. The Blower Vacuum function has 4 speeds.
2. To increase the speed, press the Power button again to switch to a higher speed. Each press of the power/speed button will increase the speed.
3. After reaching the highest speed, pressing the Power/speed button again will turn the Blower Vacuum function OFF.
4. Gently vacuum up the debris. The vacuum setting is not meant for high volumes of debris.

**NOTE:** You will need to cycle through the speeds to turn the Blower Vacuum function OFF.

**NOTE:** To turn on the light function, press and hold the power/speed button to turn it on. To turn it off, press and hold the power/speed button again.

5. When you have completed the vacuuming, ensure to empty the dust cup as described in the Cleaning and Maintenance section.

## CLEANING AND MAINTENANCE

 
### NOTICE!

Improper handling of the product may result in damage.


- Make sure that no water or other liquids penetrate the housing.
- Never immerse the product in water or other liquids.
- Do not use any aggressive cleaners, brushes with metal or nylon bristles, sharp or metallic cleaning utensils such as knives, hard scrapers and the like as they may damage the blower.

### Cleaning the dust collecting cup

1. Rotate the dust collecting cup and remove it from the blower.

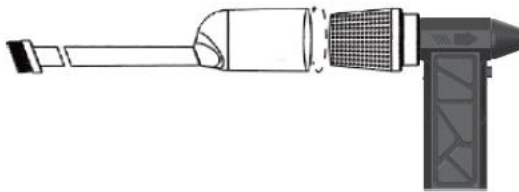

 2. Remove the filter from the cup and pour the debris collected into a bin.
3. Separate the filter cover and the cup in sequence and clean the filter cover with a brush. The filter can be washed under cold water if required, ensure to dry it thoroughly before reassembling.
4. To reassemble the dust cup, put the filter into the dust cup and rotate and tighten in the opposite direction of the above steps.

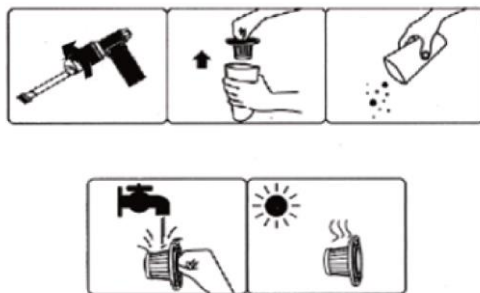

## STORAGE

All parts must be clean and dry before being stored.

- Always store the product in a cool and dry environment.
- Keep the Blower out of direct sunlight and near windows.
- Recharge the Blower every three months to avoid damaging the battery during storage.

## TECHNICAL DATA

USB INPUT	DC 5V, 2.0A
BATTERY TYPE	7.4V 2000mAh Li-ion battery
CHARGING TIME	Approx. 3 hours
USAGE TIME	Approx. 11 mins (at Turbo speed)

## BATTERY DISPOSAL WARNING



At the end of the product's life, it must be disposed of correctly.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical products or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical products are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling programmes.

## 12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>