



Blender
BLT1000-SA
User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using the electrical appliance, basic safety precautions should always be followed, including the below:

1. Read all instructions.
2. Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
3. Do not let cord hang on hot surface or over edge of table counter.
4. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or is dropped or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
5. If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard .
6. Close supervision is necessary when any appliance is used by or near children.
7. Avoid contacting moving parts.
8. Keep hands and utensils out of container while blending to reduce the risk of severe injury.
9. The use of attachment, including canning jars, not recommended by manufacture may cause fire, electric shock or injury.
10. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Then remove plug from wall outlet by grasping the plug, not the cord.
11. To reduce the risk of injury, never place blade assembly on unit base without the cup properly attached.
12. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliances by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Do not leave machine on unattended.
15. When removing the cup assembly from unit base, wait until the blades completely stopped.
16. Always operate blender with top lid in place.
17. Always use the appliance on a secure, dry level surface.
18. Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.
19. Do not use outdoors.
20. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;

– bed and breakfast type environments.

21. Do not use appliance for other than its intended use.

22. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

23. Switch off the appliance and disconnect from mains power supply before changing accessories or approaching parts that move in use.

24. Always disconnect the appliance from power outlet socket if it is left unattended and before assembling, disassembling or cleaning.

25. To protect against risk of electrical shock. Do not immerse the unit base into water or other liquids.

26. Blade is sharp, handle with care.

27. **WARNING: Potential injury from misuse.**

28. **CAUTION:** To avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

29. The max operation time per time shall not exceed 2 minutes.

30. For cleaning, please refer to CLEANING AND MAINTENANCE section.

IMPORTANT!


Do not blend hot liquids.

Be careful if hot liquid is poured into the blender, it can be ejected out of the appliance due to sudden steaming.

The appliance incorporated with a non-self-resetting thermal motor protection circuit to protect the motor from overheating. If the motor shuts OFF while in use, unplug the unit from main power outlet. Remove the blending cup from unit base and free the blade of any obstructions. Allow the unit to cool down for at least 30 minutes. After then, plug the unit back into mains power for normal operation.

HOUSEHOLD USE ONLY

KNOW YOUR BLENDER

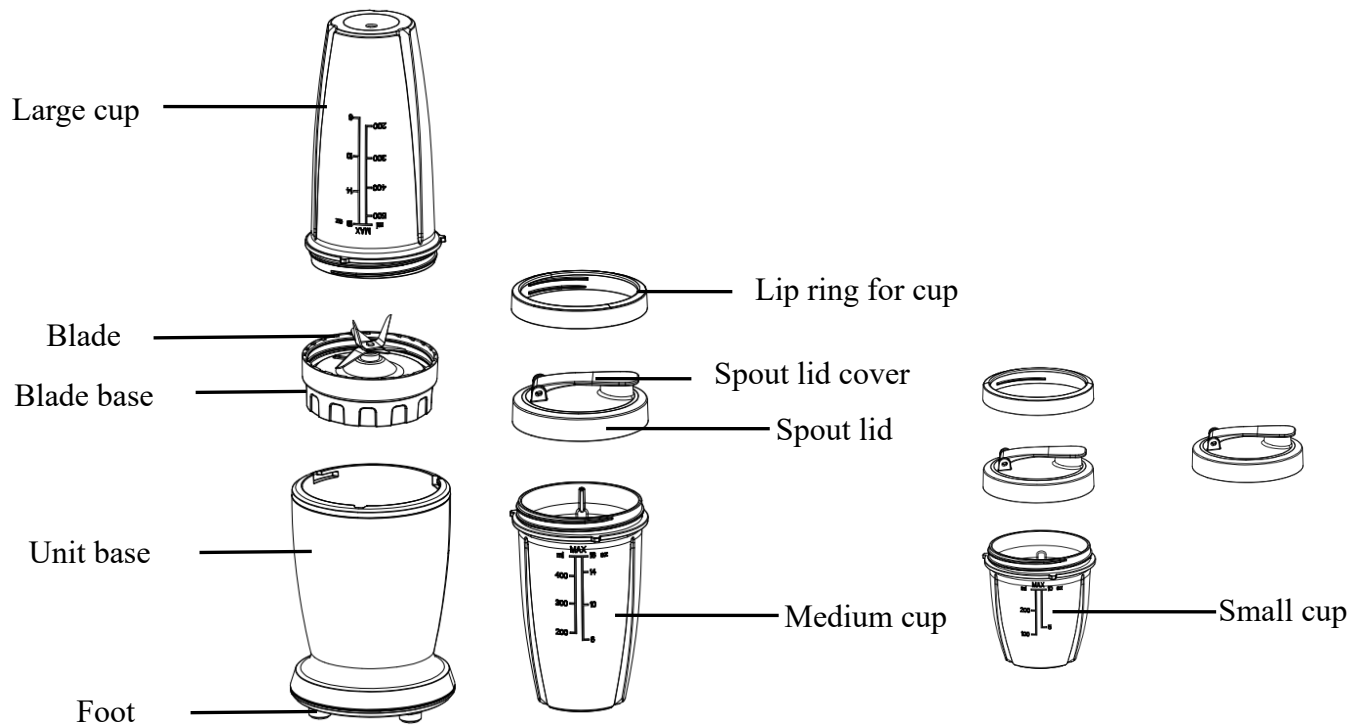

This blender includes 3 cups, 3 spout lids, 2 lid rings for cup, blade base and unit base. Lid rings are designed to drink juice easier, while the spout lids with cover are for ease of portability.

For the initial use

1. Unpack the appliance and place all parts on a flat surface.
2. Immerse all the cups, spout lids, lid rings, blade and blade base in warm soapy water and rinse them and dry. **Never immerse unit base** in water for cleaning to prevent the risk of electric shock.

CAUTION: The blade is very sharp, handle with great care.

3. The correct assembly way will be described in detail in below sections.

CAUTION: Before assembling the cup, be sure the power cord is unplugged from the power outlet.

The cup is suitable for making mixture which the juice and pulp are mixed.

For attaching the blade and blade base, firstly place the blade base on a flat surface, insert the blade into the hole of the blade base, place the cup onto the blade base and make sure the blade protrudes from the bottom opening of the cup, and turn the cup clockwise to lock them.

For attaching the cup with the blade base, only place the cup with blade base onto the unit base, then turn the cup clockwise to lock them **(see fig 1)**.

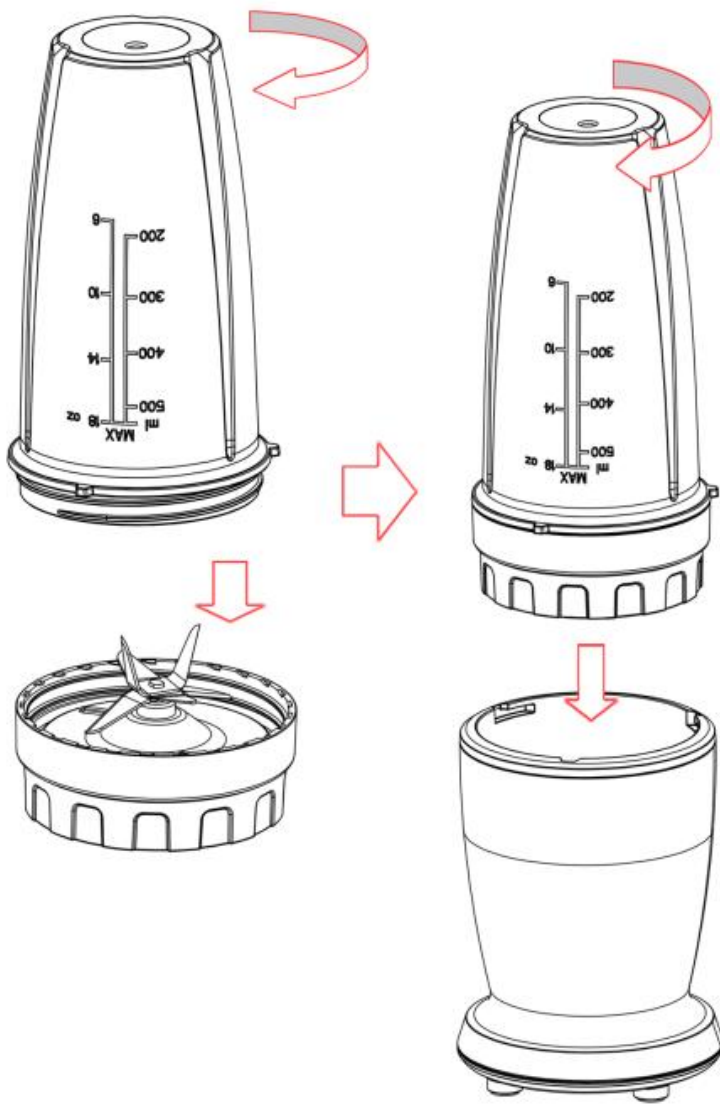


fig 1

How to use (Blending fruit and vegetable)

Before attaching the plug into the outlet, please ensure that the cup with blade base is not in the unit base.

1. Peel or core the fruit or vegetables, cut them into small dices, and put the food pieces into the cup. Usually, certain amount of purified water must be added to facilitate the smooth running of the appliance. The proportion of food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the cup.

RECIPE

FOOD TYPE	SPEC	WEIGHT	OPERATION TIME
Carrot (apple, pear, etc.)	Cut into 15mm*15mm*15mm	Carrot: 300g Water: 240g	5 seconds
Carrot (apple, pear, etc.)	Cut into 15mm*15mm*15mm	Carrot: 216g Water: 324g	2min

Note: Never use boiling liquids or run the appliance empty.

2. Attach the blade base with the cup, then lock them in the unit base to let the appliance start to work. The max operation time per cycle shall not exceed 2 minutes. Minimum 1 minute rest time must be maintained between two continuous cycles to prevent the blender from overheating.
3. Pull out the supply cord plug from the power outlet once the mixture has been blended to your desired consistency.
4. Turn the blade base anticlockwise and lift it to disassemble from unit base, then pour and serve.

CLEANING AND MAINTENANCE

1. Clean immediately after each use. Pour a little warm soapy water into the cup, assemble the cup with the unit base, and then insert the plug into the outlet for a few seconds.
 2. Remove the cup from the unit base by turning it and rinse the cup, blade and blade base under running water.
 3. Wipe the outer surface of unit base with a damp cloth. Do not use abrasive cleansers.
- Never immerse unit base in water or other liquid for cleaning.**
4. Dry all parts and then replace them.

Note: 1. The blade and blade base can be detached from the cup. Turn the cup anticlockwise to disassemble it from the blade base. Use care when rinsing the blade as it is sharp.

2. The cups, spout lid, lid rings, blade and blade base are dishwasher-safe components, but the temperature setting shall not exceed 70°C.

If you encounter any problem during use, never disassemble the unit base by yourself. There are no user serviceable parts inside.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 400W

Large cup: Max 540ml

Medium cup: Max 480ml

Small cup: Max 300ml

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us