 


anko

CITRUS JUICER

Instruction Manual

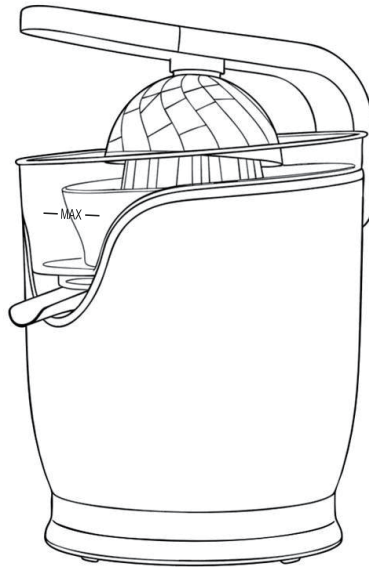

Model No.: ACJ806

To ensure the proper operation of this product, please read this instruction manual carefully before using the product and keep it for future reference.

Important Safeguards



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions on to the next owner of this product.

Explanation of Symbols



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.

READ ALL INSTRUCTIONS

When using an electrical product, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed, including the following:

- This product is designed exclusively for juicing prepared, suitable food.
- This product is exclusively intended for domestic use and not for the commercial sector.
- Only use the product as described in this manual. Any other use is improper and may lead to product damage or even personal injury.
- This product is not a toy.
- The manufacturer or retailer assumes no liability for damage caused by improper or incorrect use.
- The product is intended to be used in households and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - Farmhouses.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.



Risk of electric shock!

Faulty electric installation or excess mains voltage can cause an electric shock.

- Only connect the power cable if the mains voltage of the socket matches the information shown on the rating plate.
- Only connect the power cable to an easily accessible socket so that you can quickly disconnect it from the mains power in the event of a malfunction.
- Do not use the product if there is visible damage or if the power cable is defective.
- Do not open the product. Leave repairs to a qualified service technician or contact Customer Service. Liability and warranty claims are excluded if you carry out repairs yourself, improperly connect the product to the power supply or operate it incorrectly.
- Do not immerse the product or the power cable in water or other liquids.
- Never touch the power cable with wet or damp hands.
- Never pull the power cable out of the socket by the cord; always grip the plug instead.
- Never use the power cable as a carry handle.
- Do not place any objects on the power cable.
- Keep the product, the mains plug and the mains cable away from open flames and hot surfaces.
- Connect the power cable so that it cannot be tripped over.
- Do not bend the power cable and do not pass it over sharp edges.

- For electrical safety, if the power cable of the product is damaged, it must be replaced by a qualified electrical person only.
- Only parts that match the original product data may be used for repairs. This product contains electrical and mechanical parts that are essential for protection against sources of danger.
- Only use the product indoors. Never operate it in damp rooms, outdoors or in the rain.
- Never store or use the product where it can fall into a tub or sink. Do not use the product if it has fallen into water.
- Never reach for the product if it has fallen into water. Immediately disconnect the product from the power supply.
- Disconnect the product from the mains in the case of a fault (such as unusual noise or smoke).
- Do not operate the product with an external timer or separate remote-control system.
- Do not use the product during a thunderstorm. Switch it off and pull the power cable out of the socket.
- While the product is not in use or is being cleaned, or if a malfunction occurs, always turn the product off and disconnect it from the power supply.



Danger to children and persons with reduced physical, sensory or mental abilities (e.g. partially disabled, elderly people with reduced physical and mental abilities) or lack of experience and knowledge (e.g. older children).

- This product shall not be used by children.
- Children must not clean and/or service the product.
- Keep the product and its cable out of reach of children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety.
- Children must not play with the product.
- Do not leave the product unattended while in use.
- Do not let children play with the packaging film. They may become tangled when playing and suffocate.
- Ensure that children do not insert objects into the product.



Risk of injury!

Faulty operation due to improper handling can cause injuries.

- Only start the product when it is fully and properly assembled.
- Switch the product off and disconnect the power cable from the power supply before changing accessories or coming close to moving parts.
- Always disconnect the product from the power if it is left unattended and before assembling, disassembling or cleaning.
- Never reach into the product or touch the accessories with your hand or other objects during operation.
- Do not use the product if it is damaged or has visible cracks.
- Keep body parts, especially fingers, hair, and other objects away from sharp and/or rotating accessory parts.
- Clean surfaces and product parts that come in contact with food at regular intervals as described in the section "Cleaning and Maintenance".
- **IMPORTANT!** The maximum operating time is 15 seconds for 2 halves of fruit. Allow the product to rest for 15 seconds before using it again. After 10 cycles of operation, allow the product to cool down to room temperature before using it again. Failing to follow above instructions may cause damage to the product.

NOTICE!

Risk of damage!

Improper handling can damage the product.

- Never operate the product when it is empty.
- Do not apply excessive pressure to the product.
- Do not use the product if it is blocked or damaged.
- Do not move the product during operation.
- Do not place any objects on the product or cover it.
- Operate the product on a level, stable, dry, heat-resistant surface. Never place the product on the edge of the work surface.
- Never place the product on or near hot surfaces (stove tops, etc.) and never expose the product to high temperatures (heater, etc.) or to bad weather (rain, etc.).
- Never immerse the product in water to clean it.
- Stop using the product if any of its components are cracked or deformed. Only replace the damaged components with matching original spare parts.

- Dismantling the product beyond the degree shown in the illustrations can lead to irreparable damage and will void the warranty.

NOTICE!

Modifications of the product by the user/s may cause damage to property or persons and will be deemed as not in accordance with the instruction manual and no liability for damages will be accepted by the manufacturer.

NOTICE!

 
Non-compliance: We accept no liability for any eventual damages caused by improper use or inappropriate handling, or by any other non-compliance with the instructions in this manual.

WARNING!

- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord or plug to rain, moisture, or any other liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event where the product is dropped into water, turn off the power at the power outlet and remove the plug immediately.
DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER SUPPLY.
- It is important to note that the product will have to be inspected by a qualified technician before using it again.

SAVE THESE INSTRUCTIONS

Parts Guide

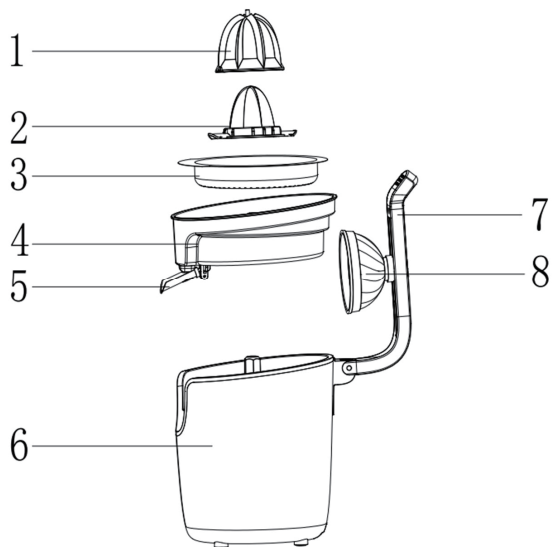

1. Large juicing cone
2. Small juicing cone
3. Filter sieve
4. Juicing container
5. Drip spout
6. Motor unit
7. Handle
8. Pressing cap

Instructions

GETTING STARTED

Check the product and parts guide.

NOTE!

Risk of damage!

If opening the packaging with a sharp knife or other pointed object, be careful to avoid damaging the products surface.

- Proceed carefully with opening the packaging.
1. Remove all packaging from the product.
 2. Check that the delivery is complete (see Parts Guide).
 3. Unwind the power cord to its full length and inspect the cord and plug for any damage. Do not use the product if these parts are damaged. In the case of damage, contact Customer Service for further assistance.
 4. Place the product on a level, dry and heat-resistant surface ready to use. Ensure you read all instructions carefully and keep them for future use.

Cleaning the product and accessories

1. Remove the packaging and all protective film.
2. Clean the product and accessories before using them for the first time (see section "Cleaning and Maintenance").

NOTE: Do not use any abrasive cleaners as these may scratch the surface.


ASSEMBLY INSTRUCTIONS

Ensure the product is assembled correctly before attempting to use it.


1. Attach the pressing cap to the handle, ensure that it is securely connected.



 
2. Place the juicing container over the spindle in the centre of the product with the drip spout aligned over the opening.

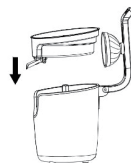

 3. Position the filter sieve over the juicing container, securing it into place.

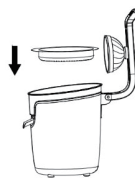


 4. The filter sieve must be aligned over the juicing container so that it is aligned properly with the tank. Align the two positioning slots on the filter sieve with the two positioning rods on the juicing container respectively.




5. Position the required juicing cone over the filter sieve, securing it into place.

 NOTE: If you are using the large juicing cone, this should be placed over the small juicing cone to ensure that it is secure.

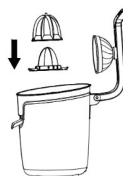

 6. The drip spout should be in the open position. Gently move the spout down to move it into the open position and lift it to close it.

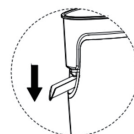

7. Connect the power cord to the power outlet. The product is now ready to use.



 
8. Select your fruit to be juiced, wash them and then cut in half ready to juice.




OPERATING INSTRUCTIONS

NOTE: Ensure that the product is assembled in the correct order and that the drip spout is in the closed position.

1. Gently, press the half of fruit to the middle of the juicing cone.



 2. Press the handle with the assembled pressing cap onto the fruit and the product will start to operate.



3. After the fruit has been processed, turn the power off at the wall outlet. Place a container (e.g. glass or cup) under the drip spout. Open the drip spout, by pressing down on it slowly to release the juice into your chosen container. Do not overfill the juicing container. To avoid the container overflowing and juice leaking, it is recommended to immediately release the juice as soon as the fruit is processed.

 


CAUTION: Do not allow the juice to pass the MAX line on the container or the juice will leak.


DISASSEMBLY INSTRUCTIONS

Always unplug the product from the power outlet before disassembling or cleaning.

1. Raise the handle and remove the fruit peel.



 2. Detach and remove the juicing cones, filter sieve and juicing container.



3. Remove the pressing cap from the handle.



NOTE: Ensure to clean all removable parts in warm soapy water and dry thoroughly before reassembling the product.

TIPS AND HINTS

- Choose fresh fruit that is firm, not soft as it should yield more juice.
- Always wash citrus fruit to remove any pesticides and residues from handling.
- Room temperature fruit should yield more juice than refrigerated fruit.
- If a recipe calls for zest, remove the zest before juicing the fruit.

Troubleshooting

Problem	Possible cause	Solution
The product does not work.	The product is not connected to a working power outlet.	Ensure that the product is connected correctly to the power outlet and that it is in good working order.
	The accessories are not assembled in the correct position.	Reassemble the accessories in the correct order.
Product stops working during use.	The handle is being pressed too hard.	Press the handle gently.
	Motor overload.	Rest the product for 30 minutes before using again.

If the above troubleshooting steps do not resolve your problem, contact Customer Service.

DO NOT attempt to disassemble or repair the product yourself.

Cleaning and Maintenance



Risk of injury!

Improper handling of the product may increase the risk of injury.

- Always disconnect the power cord from the power outlet before cleaning.



Risk of short circuit!

Water or other liquids that have penetrated the housing may cause a short circuit.

- Make sure that no water or other liquids penetrate the housing of the motor unit.
- Never immerse the motor unit in water or other liquids.

NOTICE!

Risk of damage!

Improper handling of the product may result in damage to the product.

- Do not use any aggressive cleaners, brushes with metal or nylon bristles or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. They could damage the surfaces.
- Do not put the product or accessories in the dishwasher, as this may damage the product.

Cleaning the product

NOTE: Ensure that the product is disconnected from the power outlet and cooled down before cleaning.

- Disconnect the power cord from the power outlet and disassemble all accessories before cleaning.
- Clean the motor unit with a damp cloth and dry thoroughly.
- Remove the juicing container, cones and pressing cap and wash with warm soapy water to remove any fruit residue. Rinse thoroughly and then wipe all parts dry with a dry cloth.
- NEVER immerse the base or power cord in water or any other liquid.

WARNING! The product and parts are **NOT** Dishwasher Safe.

- Reassemble the product when clean and dry for easy storing.

Storage

All parts must be completely dry before being stored.

- Always store the product in a dry and clean area.
- Protect the product from direct sunlight.
- Store the product so that it is not accessible to children.

Technical Specifications

Model Number	ACJ806
Power Supply	220-240V~ 50-60Hz
Rated Power	130W

WARRANTY

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/-Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us