



Pancake Maker

FS-616

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.



Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against the risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquid.
- For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from the mains power when not in use and allow the appliance to cool down before cleaning.
- Do not operate the appliance if it is damaged or malfunctions.
- Do not touch hot surfaces. Only use the handle.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use an extension cord with this appliance.
- Do not dismantle and repair the appliance by yourself. **DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!**
- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- Do not operate your appliance inside a cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- The temperature of accessible surfaces may be high when the appliance is operating.

- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Use only heat-proof synthetic or wooden utensils when making pancakes, this is to prevent damage to the non-stick coating on the heating plates. Make sure that the utensils are not pointed or have sharp edges.
-  **Caution, hot surface. Care must be taken. The surfaces will get hot during and immediately after use.**
- For cleaning the cooking surface, please refer to section "CLEANING AND STORAGE".

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR PANCAKE MAKER

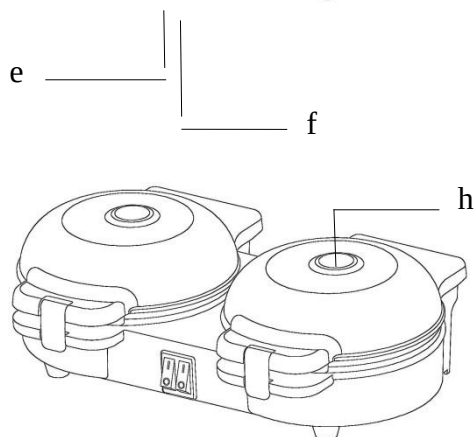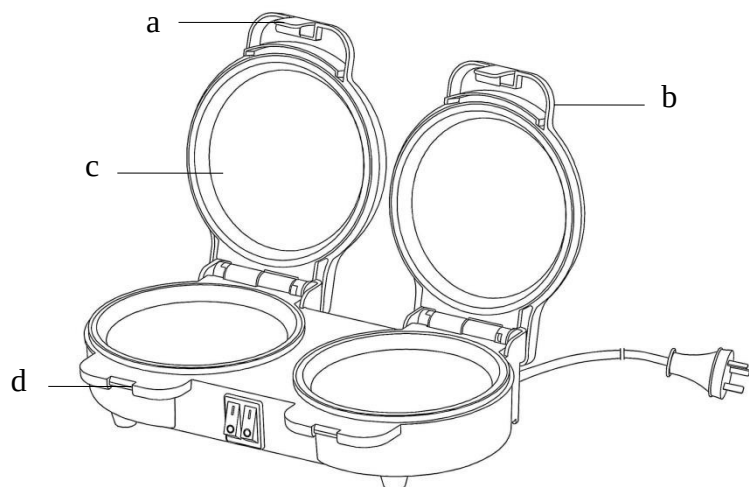

- a. Locking clip
- b. Handle
- c. Upper baking plate
- d. Lower baking plate
- e. On/Off button-left pancake maker
- f. On/Off button-right pancake maker
- g. Power plug & cord
- h. Heating indicator

IMPORTANT!

- Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to the place of purchase for replacement.
- When using the appliance for the first time, carefully remove all internal and external packaging and dispose them responsibly.

BEFORE FIRST USE

- Clean the appliance following the section "Cleaning and Storage".
- Place the appliance on a flat, solid, dry and heat-resistant surface. Ensure a minimum of 30 cm free space around the appliance. Do not operate your appliance inside a cabinet or directly under a wall cabinet.

IMPORTANT! Place the appliance on a heat-resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat-resistant mat is recommended.

- Plug the appliance into a mains power supply.

Note: Make sure the voltage shown on the appliance matches your local mains power before plugging it in. Rated voltage: 220-240V~ 50-60Hz.

- Heat the appliance **without any food** for about 5 minutes. Apply a light coating of cooking oil to the baking plates and carefully wipe it in with a paper towel. You only need to condition the appliance before first use.

You may notice a small amount of smoke or odour during this process, this is normal and will disappear after a few uses.

CAUTION! Handle with care. The baking plates get very hot during use.

- Unplug the appliance and your pancake maker is now ready for use.

HOW TO USE YOUR PANCAKE MAKER

1. Wipe the baking plates with a damp cloth, then dry with a paper towel.
2. Close the appliance and plug it into a mains power outlet socket. Press the On/Off button to turn ON the appliance. The On/Off button should light up and will stay ON until you turn OFF the On/Off button. It takes approx. **3 minutes** to reach the cooking temperature.
3. **Open the appliance** and lightly brush the baking plates with a small amount of vegetable oil.
4. **Add your ingredients and spread it evenly on the bottom baking plate**, gently close the lids and secure the **locking clip** in place.

NOTE: Always use a thin layer of batter as it will expand during cooking, and do not slam the lids shut, as this can cause the mixture to spill out.

5. The cooking time will vary depending on your ingredients, but as a guide, allow about **5 minutes**. If you prefer a darker or crisper result, close the lid again and cook for a little longer until reach your desired colour.

IMPORTANT: Do not open the lid during the first 2 minutes of cooking. This can cause the pancake to split and make them difficult to remove.

6. When removing your pancakes, **use a plastic or wooden spatula** only. Never use sharp or metal utensils, as they can damage the non-stick coating. Use **oven mitts** when handling hot food or parts of the appliance.
7. After use, press the On/Off button to switch off the appliance, **unplug the appliance** from the power outlet and allow it to cool down before cleaning or storing.

WARNING!

- Never use a sharp knife or fork to remove food, this will damage the non-stick coating. Use **heat-resistant wooden or plastic utensils** only.

- Batter will expand rapidly during cooking (expand rate can differ with recipe). If too much batter is added to the appliance, steam and pressure will build up in the appliance. Be cautious when releasing the Locking clip during or after cooking.
- Always **unplug the appliance** when not in use or before cleaning.
- **IMPORTANT!** If the **surface or housing** of the pancake maker becomes cracked or damaged, **stop using it immediately** and unplug it from the power outlet to avoid the risk of electric shock.

CLEANING AND STORAGE

This appliance should be cleaned after each use.

WARNING! Do not immerse the pancake maker in water or in a dishwasher!

- Always ensure the pancake maker is disconnected from the mains power outlet socket before attempting any cleaning or maintenance.
- Never leave the pancake maker unattended during use.
- Ensure that your pancake maker has completely cooled down before cleaning. The pancake maker will be very hot during and immediately after use.
- Clean the inside and outside of the appliance with a damp cloth or soft brush. Do not use anything abrasive that can scratch or damage the appliance. Wipe dry with a soft dry cloth.
- Store the appliance in a dry location and out of the reach of children.

WARNING! Do not wrap the power cord around the appliance.

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 1000-1200W

SUGGESTED RECIPE

Ingredients

250g	all-purpose flour
25g	sugar
200ml	milk
2	eggs
50g	butter
3g	baking powder

DIRECTIONS

Beat the eggs in a mixer until well mixed. Add the remaining ingredients and mix until smooth. Leave the mixture for at least half an hour.

Preheat the pancake maker. Use a pastry brush to lightly grease the non-stick coating of the baking plates with oil or butter. Pour mixture into pancake maker. Cook until golden brown.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us