

anko

Toaster TAB1010A-SA User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using electrical appliance. Basic safety precautions should always be followed including the following:



1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug the toaster from the mains power outlet socket when not in use and before cleaning.
Allow it to cool down before putting on or taking off parts, and before cleaning the appliance.
7. Allow the toaster to cool down completely before cleaning or storing.
8. Do not operate the toaster with a damaged cord or plug, or in abnormal state. If the supply cord is damaged, it must be replaced by a qualified electrical person to avoid a hazard, or the toaster must be disposed of.
9. Do not let the cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use the toaster for other than its intended use.
12. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
13. **Bread may burn; therefore toasters must not be used near or below curtains and other combustible materials. The toaster should be attended when in use.**
14. **WARNING! Electric Shock Hazard. Do not attempt to dislodge food when the toaster is in use or connected to mains power.**
15. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
16. Use the appliance on a level and stable work surface.
17. Do not attempt to dislodge food when toaster is connected to mains power.
18. The toaster is not intended to be operated by means of an external timer or separate remote-control system.

19. Be sure to take the bread out carefully after toasting to avoid injuries.
20. This toaster is fitted with a grounded plug for safety. Please ensure the wall outlet in your house is well earthed. If unsure, check with an electrician.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. Cleaning and user maintenance shall not be made by children without supervision.
24. Don't use the appliance outdoors.
25. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments,
 - Farmhouses,
 - By clients in hotels, motels and other residential type environments,
 - Bed and breakfast type environments.
26. When heating toaster pastries, always use the lightest toast colour setting.
27. Do not use the toaster without the crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
28. Do not use this appliance with any products that contain sugar content or with products containing jam or preserves.
29. For cleaning, please refer to "CLEANING AND MAINTENANCE" section.
30. Save these instructions for future reference.

WARNING!

Never operate toaster on its side. To prevent damage to the toaster, DO NOT toast with extremely runny ingredients such as butter, jam and other sugary ingredients. Adding any food substances to bread, waffle, pastry or muffins can cause an electric shock and / or fire. This toaster is for toasting bread, waffle, pastry and muffins only.

KNOW YOUR TOASTER

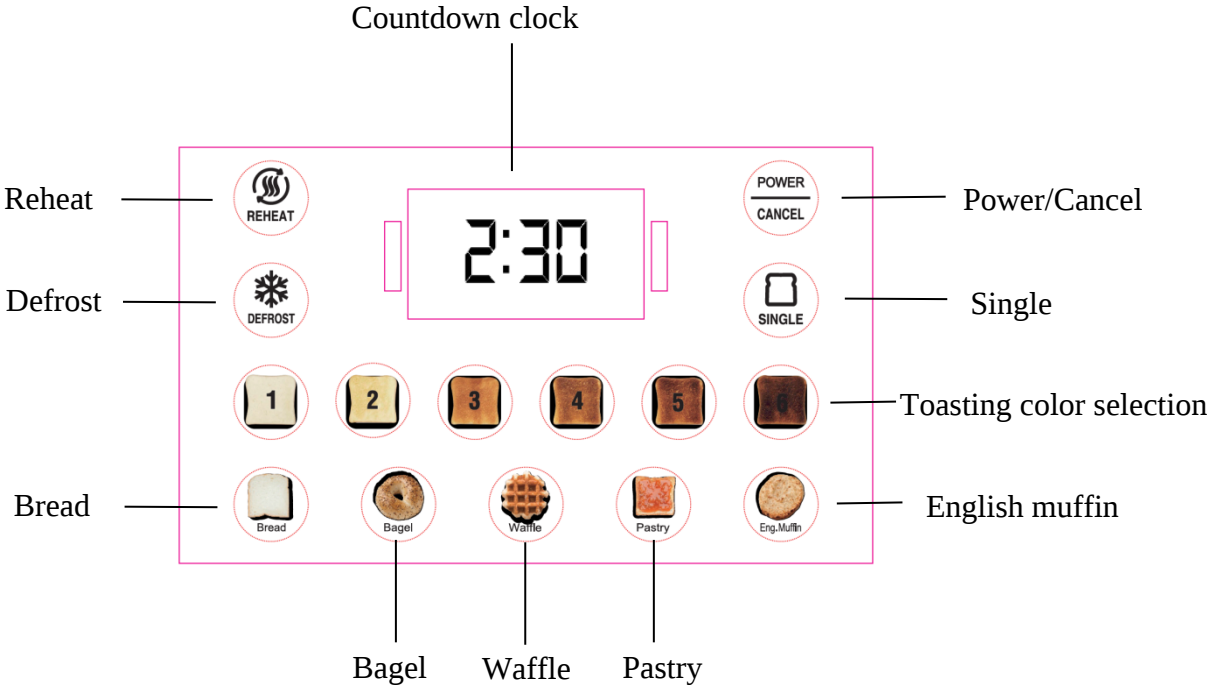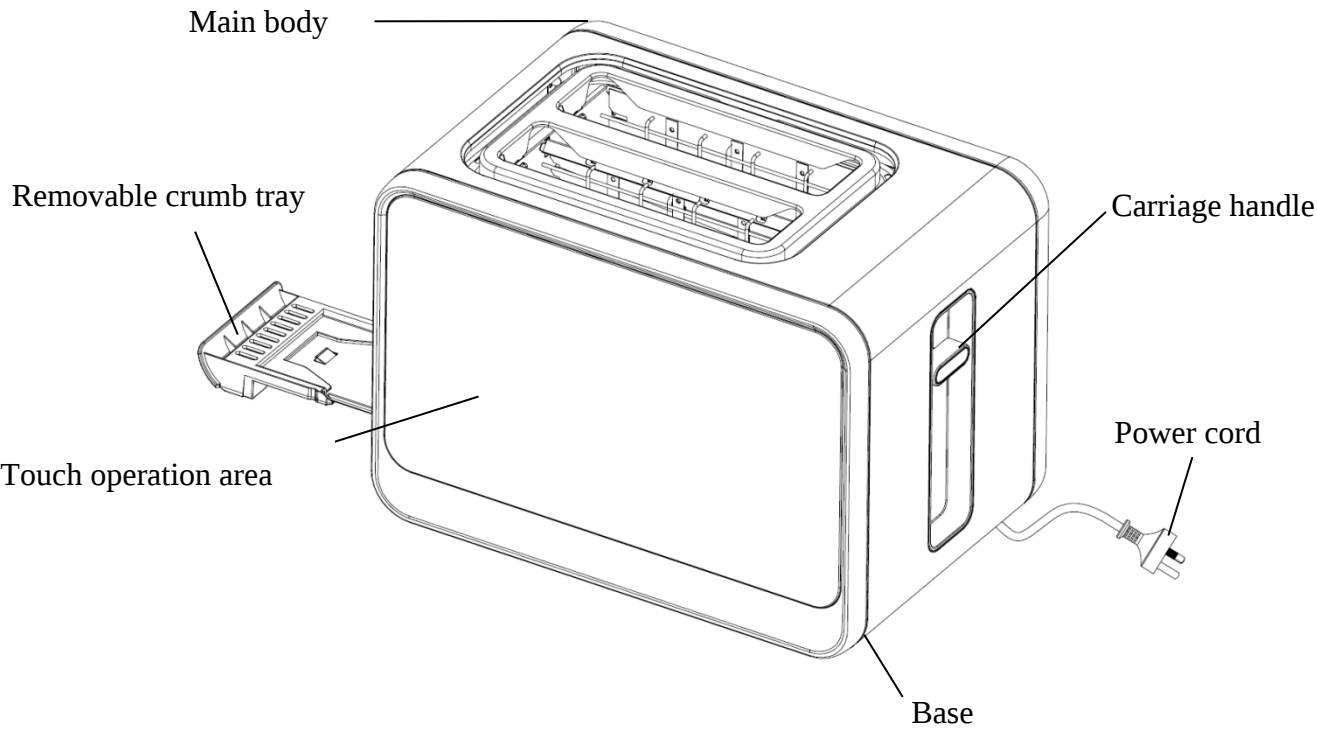

FIRST TIME USE

During manufacture, residue or oil may remain in the toaster or heating element which is likely to emit an odour when used for the first time. This is normal and should disappear gradually after several times of use. When the toaster is used for the first time, it is suggested to operate according to the steps below, except without bread. Then let the toaster cool down and begin toasting the first slice.

OPERATION

1. Put bread slice into the bread slot, it can be inserted two slices at most every time.

Note: Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the outlet. All indicators on Touch operation area will be illuminated.

3. Press your desired color and toasting bread type. There are 6 toasting level, the lowest “1” is for light and the highest “6” is for dark. The bread slice can be toasted to golden color at level 3 or 4. The selected toasting level and bread type will be flashing.

Note: 1). Toasting color for one slice is darker than that for two bread slices at the same level.

2). If toasting continuously, toasting color for the latter bread is darker than that for the anterior bread at the same level.

4. After selecting the desired toasting setting, press carriage handle down vertically until it is positioned in place, and toast will begin at once. You may press the **POWER/CANCEL** button anytime during the toasting process to cancel toasting. Once the bread has been toasted to the preset color, the carriage handle will automatically spring up. You can lift up the carriage handle a little to remove the bread. After carriage handle is pressed down in place, toasting setting can only be adjusted within 10s, then the setting cannot be adjusted. For example, pressing the **DEFROST** button after 10 seconds, after pressing down the carriage handle, will have no effect.

5. If the bread has been taken out from the refrigerator, press your desired color. Press carriage handle down vertically until it is positioned in place, then press **DEFROST** button, the indicator will be illuminated. In this mode, the bread will be toasted to your desired color.

6. If you want to reheat cold toasted bread, press the **REHEAT** button and the corresponding indicator light will flash. In this mode toasting time is fixed and the carriage handle will automatically spring up and at the end of the reheating process. This mode can only be used alone and cannot be combined with other functions.

7. If you want to toast the frozen bagel, press the **Bagel** button and corresponding indicator light will flash, then press your desired color. Once the bagel has been toasted to the preset color, the carriage handle will automatically spring up. You can lift up the carriage handle a little to remove the bagel readily. Note: **Single** function is not applicable for this mode.

8. If you want to toast the frozen waffle, press the **Waffle** button, the corresponding indicator light will flash, press your desired color. Once the waffle has been toasted to the preset color, the carriage handle will automatically spring up. You can lift up the carriage handle a little to remove the waffle.

9. If you want to toast the frozen pastry, press the **Pastry** button, the corresponding indicator light will flash, press your desired color. Once the pastry has been toasted to the preset color, the carriage handle will automatically spring up. You can lift up the carriage handle a little to remove the pastry.

10. If you want to toast the frozen breakfast muffin, press the **Eng.Muffin** button, the corresponding indicator light will flash, press your desired color. Once the breakfast muffin has been toasted to the preset color, the carriage handle will automatically spring up. You can lift up the carriage handle a little to remove the muffin.

11. If you want to toast a single slice of bread, press the **SINGLE** button and the corresponding indicator light will flash, press your desired color and bread type. In this mode, both sides and the middle of heating elements will heat up simultaneously. After a certain period, the middle stops heating and only the sides continue to heat up until the heating time is over. The carriage handle will automatically spring up at the end of the toasting process. This function is applicable in all modes except when selecting **Bagel**.

12. If you want to disable the 'beep' sound, simply press and hold the POWER/CANCEL until you hear a beep sound. To restore or activate the 'beep' sound, press and hold the POWER/CANCEL until you hear a beep sound.

Note: when the toaster is left idle for 3 minutes, the toaster will enter standby mode (all indicator lights will go OFF except POWER/CANCEL button). Press the **POWER/CANCEL** button to turn ON the toaster again.

CAUTION

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, press the **CANCEL** button to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter or jam.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical power outlet first. Make sure not to damage the internal mechanism or the heating element when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.

6. To achieve uniform color, we recommend that you should wait minimum 30s between each toasting cycle so that color control can reset automatically.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug from the appliance from mains power and let the appliance cool down completely.
2. Wipe the outside with soft dry cloth, never use metal polish.
3. To remove any crumbs from the toaster, pull out crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. To clean the interior, turn the toaster upside down over the sink and shake crumbs free.
5. When not use or storage, the power cord may be wound under the bottom of the toaster.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 760-900W

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us