



Retracting Curling Brush
CS-521
User Manual



PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

Please read this instruction manual before using your product and keep it in a safe place for future reference. If you pass the appliance on to anyone else, please include this manual.

INTRODUCTION

- Use this appliance on human hair only. Do not use this appliance on artificial hair or animals.
- **IMPORTANT!** The appliance may have different results depending on the hair type. The appliance is not recommended for damaged or bleached hair. Additionally, some hair colour may react differently when heat is applied to hair. Therefore, we recommend trying it on a hidden area of hair before first use.

SAFETY PRECAUTIONS

- Carefully read all instructions before operation and retain for future reference.
- Do not place near the edge of a bench or table during operation.
- Ensure the surface is dry, level, clean and free of liquid and other substances.
- **Burn hazard. Keep appliances out of reach from young children, particularly during use and when cooling down.**
- Always place the appliance on a heat-resistant, stable flat surface.
- **Never leave the appliance unattended when the appliance is connected to the mains power supply, and when it is in use.** Always ensure the appliance is turned OFF by switching OFF and unplugging the appliance from mains power when not in use.
- Always keep the appliance clean.
- Fully unwind the cord before use.
- To protect against electric shock, do not immerse the power cord, plug or any part of the appliance in water or any other liquid.
- Do not allow the cord to hang over the edge of the table or bench, touch hot surfaces or become knotted.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **IMPORTANT! Children should be supervised to ensure that they do not play with this appliance.**
- If the supply cord is damaged, DO NOT use. For electrical safety, any repairs to the product must be carried out by a qualified electrical person only or the product must be disposed of to avoid hazard.
- This product is intended for household use only. Do not use it outdoors or for commercial industrial purposes.
- NEVER grasp the appliance, power cable or power plug with wet hands.
- Always remove the power cable from the socket by pulling on the plug, do not pull on the cable itself. Do not carry or lift the appliance with the power cord.

- Do not fold or crush the power cable. Ensure that the power cable does not run over sharp edges.
- Please do not attempt to dismantle the appliance. This appliance has no user-serviceable parts inside.
- When the appliance is used in a bathroom, disconnect from the mains power after use. Since the proximity of water presents a hazard even when the appliance is switched OFF.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- For additional protection, the installation of a residual current device (RCD/Safety switch) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. If unsure, check with your electrician.

DANGER OF ELECTRIC SHOCK! Do not insert any foreign objects into the appliance.

- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- For cleaning, please refer to section "CLEANING AND MAINTENANCE".

RISK OF FIRE!

- Do not leave the appliance unattended when in use.
- To avoid a build-up of heat, NEVER cover the appliance. Do not use the appliance under a blanket or at other poorly ventilated locations.
- Avoid the addition of heat from other sources, e.g. from direct sunlight, heating appliances, other devices, etc.
- Do not use an extension cable. In the event of danger, the power plug must be quickly and easily accessible.

ELECTRICAL REQUIREMENTS

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply, which must be 220V-240V AC.

IMPORTANT!

- The plug removed from the mains lead, if severed, must be destroyed as a plug with bare flexible cord is hazardous if engaged into a live socket.
- If the supply cord is damaged, DO NOT use. Any repairs to the product must be carried out by a qualified electrician only or the product must be disposed of.



Danger of suffocation! Keep all packaging material away from children. Dispose of the packaging materials in an appropriate way. Contact your local authorities about collection points or waste separation.



Caution Risk of Burning! The appliance gets very hot!

Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.




Class II Appliance

- The appliance is for household use only.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

PARTS

1. Heating barrel
2. Comb bristle
3. Comb Retractable switch
4. Temperature indicator
5. Temperature set button +
6. Temperature set button -
7. On/Off button
8. Bristle lock/unlock switch
9. Top cap

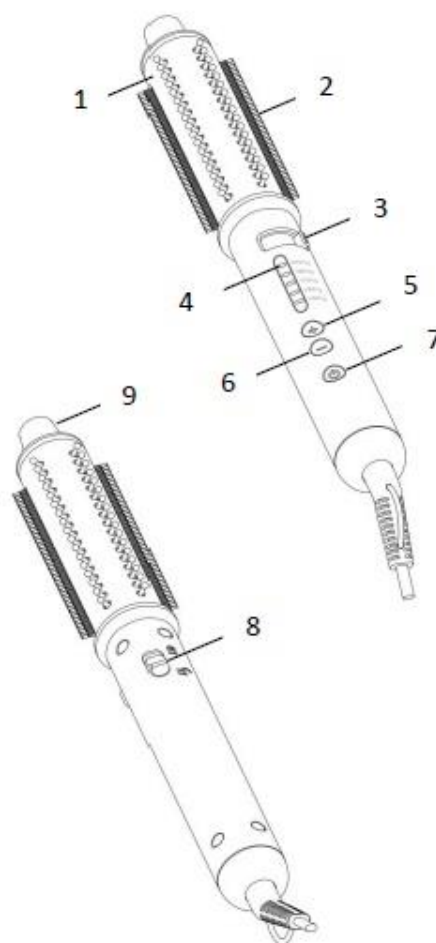

BEFORE FIRST USE

- After unpacking the appliance, check for transport damage. In the event of damaged or missing parts, return the product back to the place of purchase for replacement.
- Do not discard the original box. It can be used for storage and dispatch to avoid transport damage.
- Clean the appliance as described in CLEANING AND MAINTENANCE. For your safety, make particular attention to the IMPORTANT SAFEGUARDS supplied in the user manual.


CAUTION! The attachments get very hot during and immediately after use. Allow the attachment to cool down completely before attempting to remove.

SPECIAL FEATURE

This hair styler embedded with retractable bristles, allows the device transit between styling brush and curler for better styling experience.

Use as Curling brush: Allow the Retractable Switch to stay in default position, the styler will work with brush feature.

Use as Curler: Push forward the Retractable Switch then lock the bristle down.

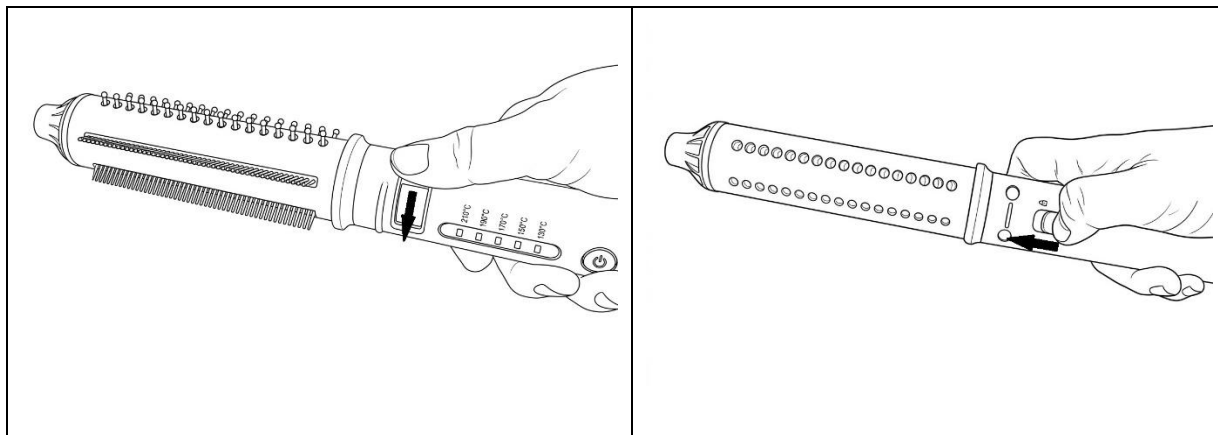

OPERATION

WARNING!

- DO NOT touch the hot heating barrel.
- DO NOT hold the top cap. Only use the handle to hold the appliance.
- DO NOT leave the appliance unattended when in use or connected to a mains power supply.

ATTENTION! The curling barrel cools down slower than it heats up.

IMPORTANT!

- The appliance may provide different results depending on the hair type. Therefore, we recommend doing a trial on a hidden area of your hair before first use.
- Always place the appliance on a heat-resistant surface to avoid heat damage to the bench/table surface.

NOTES:

- Make sure your hair is 80% dry before styling.
- Section the hair prior to styling, style lower layers first.

Using the appliance

- Fully unwind the power cord, place the appliance on a flat, dry, heat-resistant surface.
- Plug the appliance into a mains power supply.
- Press the On/Off button to turn on the appliance, the default temperature 170°C indicator flashes, the appliance is now starting to heat.
- Press the temperature set button to set the desired temperature. The set temperature flashes. Available temperature: 130°C, 150°C, 170°C, 190°C, 210°C.

ATTENTION! The barrels heat up very fast. It takes approx. 3 minutes to reach the max. temperature.

- The temperature indicator will light up when the set temperature is achieved, the appliance is ready, you may start hair styling.
- Take a section no more than 3cm wide, move the comb through the hair towards the ends. When reach the end of the section, rotate the handle so that the strand of hair is rolled up to the roots. Maintain sufficient distance between the scalp and curling barrel.
- Leave the comb in the hair for 10-15 seconds. Push the comb draw back lever to release the hair.
- Repeat this process to complete your styling.
- When you have finished styling, press the On/Off button to turn off the appliance, unplug and allow it to cool down before cleaning or storing.

Notes:

- the appliance will automatically turned off in 60 minutes.
- You can also press and hold the comb draw back lever, push upwards the comb draw back lock. The appliance can be used as a curler without comb.

CLEANING AND MAINTENANCE

Attention! Turn off and unplug the appliance, allow it to cool down before cleaning.

- Do not use any alcohol, acetone, gasoline, abrasive cleaning agents etc. to clean the appliance and attachments. Do not use hard brushes or metal objects for cleaning.
- Risk of burning! Do not clean the appliance while it is still hot.
- Wipe the appliance with a dry cloth.
- Never submerge the appliance in water or let water run over the heating surface of the appliance.

STORAGE

- Store the appliance in a cool, dry location, away from children and pets.
- If the appliance is not used for an extended period, store it preferably in its original packaging.
- After use, do not wrap the cord around the appliance as in time this may cause the cord to fracture and fail. Coil cord loosely by the side of the appliance during storage.

DISPOSAL

Do not dispose of this product with normal household waste collection. If unsure, contact the local council waste management service for proper disposal facilities available for your area.

TECHNICAL DATA

Voltage: 220-240V

Frequency: 50Hz

Power: 140W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us