



Shredder (Frozen Drink Maker)

EP1410-SA

User Manual



PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE


IMPORTANT SAFEGUARDS

When using the electrical appliance, the below basic safety precautions should be followed:

1. Read all instructions.
2. Before using, check and ensure that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not let cord hang over edge of table or counter.
4. Do not place on or near a hot gas or electric burner, or in a heated oven.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. If an extension cord is used it must be suited to the power consumption of the appliance, otherwise overheating of the extension cord and/or plug may occur. There is a potential risk of injuries from tripping over the extension cord. Be careful to avoid dangerous situations.
8. Do not wind the cord around the appliance and do not bend it.
9. Always disconnect the appliance from the supply if it is left unattended and not in use and before assembling, disassembling or cleaning.
10. Switch off the appliance and disconnect from supply before changing accessories or approaching part that move in use.
11. Avoid contacting moving parts when the appliance is working.
12. Before using, it is necessary to check whether there are any foreign objects in the ice-crushing chamber.
13. Only ice can be put into the ice-crushing chamber for processing.
14. Care shall be taken when handling the sharp ice-crushing blade and during cleaning.
15. The use of attachment not recommended or sold by manufacturer may cause fire, electric shock or injury.
16. To protect against risk of electrical shock do not put main body or power cord in water or other liquid.
17. Before using, please ensure that the accessories are securely locked in place.
18. Do not leave the appliance unattended during operation. Do not continuously run the appliance for more than 60 seconds, as which may result in the overheating of motor. The motor must be cooled down at least 30 minutes before being used again.
19. Always operate the appliance with the lid in place.

20. Do not open the lid before the ice-crushing blade stops running completely to avoid hazard.
21. Do not operate the appliance without ice cubes, as this may damage the appliance.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
24. Children should be supervised to ensure that they do not play with the appliance.
25. Do not use the appliance for other than its intended use.
26. This appliance is not designed for commercial use.
27. Misuse may cause potential injury.
28. Do not use outdoors. For household use only.
29. For operating times and crash ice settings, please refer to section "OPERATION".
30. For details on how to clean the surfaces in contact with food, please refer to section "CLEANING AND MAINTENANCE".
31. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
32. Save this instruction.

KNOW YOUR **SHREDDER (FROZEN DRINK MAKER)**

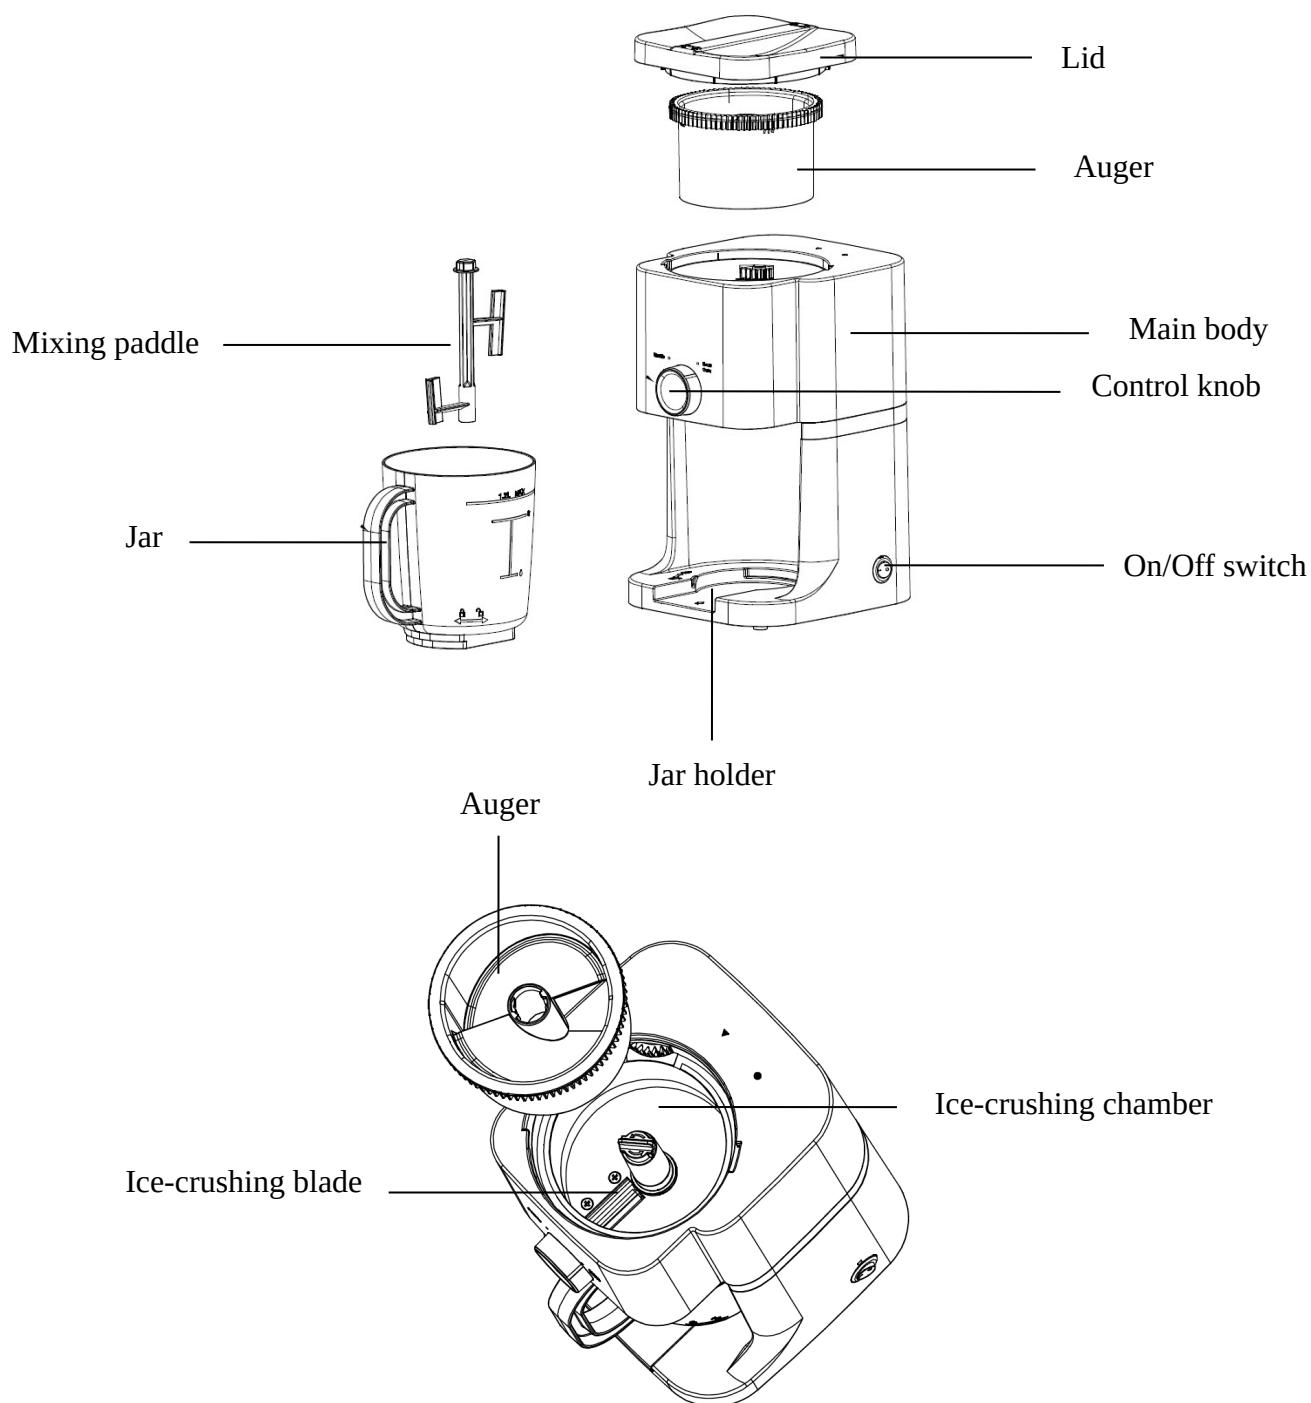

FOR THE INITIAL USE

1. Unpack the appliance and place all parts on a horizontal surface.
 2. Immerse the auger, lid, mixing paddle and jar in warm soapy water, rinse them and dry.
- Never immerse the main body in water for cleaning to prevent the risk of electric shock.

OPERATION

1. Lay the appliance on a flat horizontal surface and make sure it is unplugged and the On/Off switch turns to “O” position before operating.
2. Insert the auger on the shaft in the center of the ice-crushing chamber, and then rotate the shaft anticlockwise to lock the auger tightly (see Fig.1).

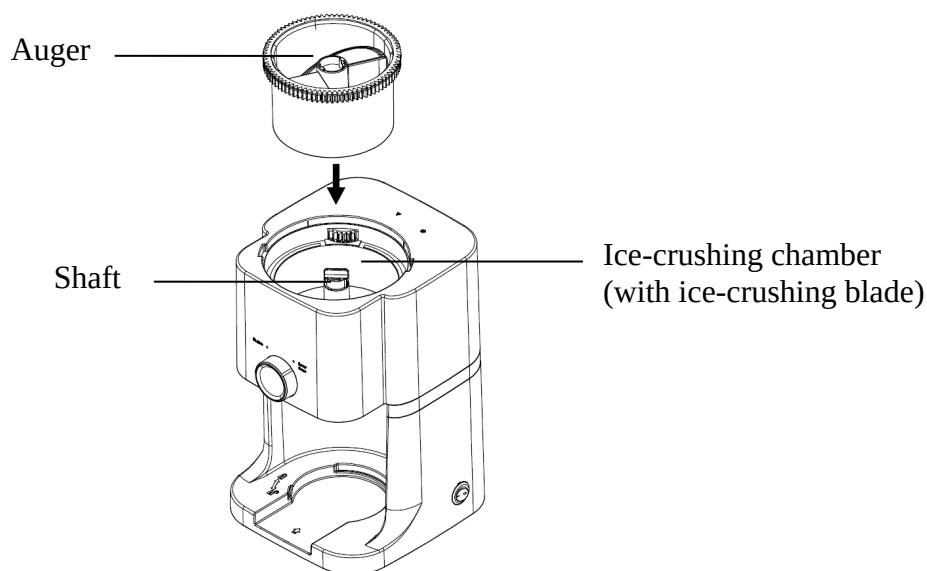


Fig.1

3. Pour fruit juice, syrup or your favorite beverage into the jar without exceeding the liquid  mark on the jar.
 4. Make the the mixing paddle align with the shaft in the center of the jar and then install the mixing paddle on the shaft of the jar correctly. After fitting the auger in shaft correctly, rotate the shaft knob anticlockwise to lock the auger in place. Finally, insert the jar on the jar holder and then rotate the jar anticlockwise to lock the jar well in place (see Fig.2).
- NOTE:** The mixing paddle is used for mixing all the ingredients together. If only need to make crushed ice, it is no need to install the mixing paddle in the jar.

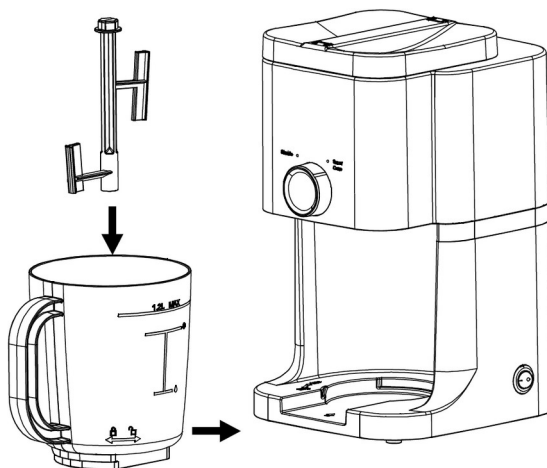


Fig.2

5. Prepare some ice cubes with a size of 20mm*20mm*20mm and then put the ice cubes into the auger at a feeding speed not more than 16 ice cubes (about 150g ice) each time. The amount of ice cubes should not exceed the maximum level indicated on the auger.

NOTE: Prepare ice cubes which should be placed in the room temperature for a little while until they are translucent and wet. Frosty ice cubes are too hard to shave.

6. Turn the control knob to select the desired size of crushed ice. There are two size settings including Slushie and Snow Cone available.

7. Connect the appliance with power source.

8. Make the unlock icon “” on the lid align with the “●” marked on the top of main body and then put the lid in the groove on the top of main body, finally, rotate the lid anticlockwise until the lock icon “” or “” on the lid align with the “▼” marked on the top of main body (see Fig.3).

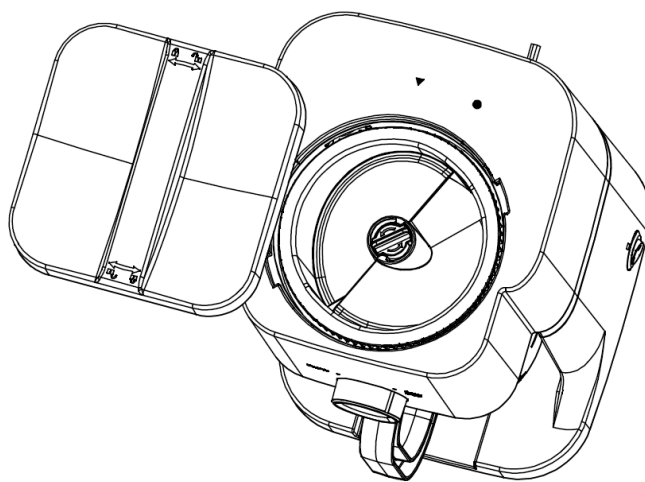


Fig.3

9. Turn the On/Off switch to “I” position and then the appliance starts to work.

NOTE: During the working process of crushing ice, if want to make the appliance stop working, you can turn the On/Off switch to “O” position.

NOTE: During the working process of crushing ice, if the appliance does not produce crushed ice for a long time, make the appliance stop working by turning the On/Off switch to “O” position and remove the crushed ice blocked at the ice-crushing blade with a brush or a cleaning cloth. After cleaning, start the appliance again to continue crushing ice.

CAUTION: Do not run the appliance for more than 60 seconds per cycle. A rest period of at least 30 minutes must be maintained after each cycle before the appliance can be operated again.

10. After finish crushing ice, turn the On/Off switch to “O” position.

NOTE: The crushed ice shall not exceed the MAX mark of the jar.

NOTE: There may be a little crushed ice left in the ice-crushing chamber after use, you can use a brush or a cleaning cloth to clean.

11. Unplug the appliance and then remove the jar from the jar holder.

CAUTION: The appliance must be unplugged before removing the jar.

CLEANING AND MAINTENANCE

NOTE: Before cleaning, make sure the appliance is unplugged and the On/Off switch turns to “O” position.

1. Wash the removable parts including the lid, auger, mixing paddle and jar with clean water.

And all the removable parts can be put into the dishwasher for cleaning.

2. Wipe the outer surface of main body with a damp cloth, do not use abrasive cleansers. Never immerse the main body in water or other liquid for cleaning.

3. If any problem has been encountered during use, never disassemble the main body by yourself, there are no user serviceable parts inside. Contact only the authorized service facility for examination and repair.

WARNING:

(1) The ice-crushing blade is very sharp, handle carefully when cleaning.

(2) Do not use abrasive cleaners. Never immerse the main body in water for cleaning.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 40W

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us