 


anko

ICE MAKER

Instruction Manual

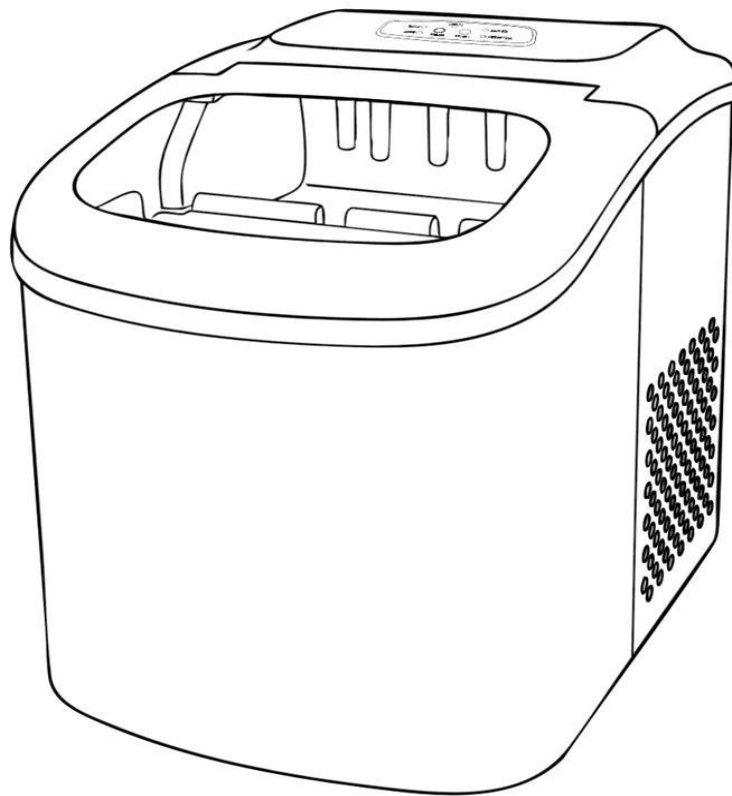

Model No.: AICEM20

To ensure the proper operation of this product, please read this instruction manual carefully before using the product and keep it for future reference.

Important Safeguards



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions on to the next owner of this product.

Explanation of Symbols



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.

READ ALL INSTRUCTIONS

When using an electrical product, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed, including the following:

- **Indoor domestic use only:** This product is intended for domestic use only. Do not use it outdoors, where aerosol (spray) products are being used or where oxygen is being administered. Any commercial or similar use will be classed as a case of misuse and will invalidate your warranty.
- **Intended purpose:** Do not use this product for anything other than its intended purpose, and only use it as described in this manual. Misuse may result in injury.
- **Accessories:** Only use accessories recommended by the manufacturer.
- Always turn the power off at the power outlet socket before you insert or remove the supply cord plug. Remove by grasping the plug – do not pull on the cord.
- Ensure that the wall power outlet socket is easily accessible, so that you can remove the mains plug quickly if necessary.
- Always allow the product to cool down completely before storing away or cleaning. DO NOT wind the power cord around the product.
- Always use the product from a power outlet socket that matches the voltage (A.C. only) marked on the rating plate of the product.
- Do not place this product immediately below or in front of a mains power outlet socket as this may pose a fire hazard.
- Never pull or carry the product by its power cord. Do not allow the power cord to touch hot surfaces or sharp edges.
- Do not position the power cord where it may be pulled by children or tripped over. Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners or the like.

CAUTION! DO NOT use this product near an open window as an ingress of rain or moisture may cause an electric shock.

- Do not use your product with an extension cord unless this cord has been checked and tested by a qualified electrical service person.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instructions concerning the use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Do not allow children to play with the product or the packing materials. Danger of suffocation.
- To protect against the risk of electric shock, do not immerse the cord, plug or product in water or any other liquid.
- Unwind the power cable completely prior to use. Ensure that the power cable is not damaged by sharp edges.
- Do not place the product on or near flammable or hot objects.
- Do not allow the power cord of the product to touch any hot surfaces.

WARNING! In order to avoid overheating, do not cover the product.

CAUTION! DO NOT use this product in conjunction with a programmer, timer or any other device that switches it on automatically, as this poses a fire risk.

- Some products are "sealed" using tamperproof screws to avoid tampering/maintenance by unskilled or unqualified persons and for safety reasons.
- Do not operate any electrical product if the power cord is damaged or after the product has been dropped or damaged in any manner. If damage is suspected, contact Customer Service.
- Do not operate the product with wet hands.
- Do not carry out any modifications to the product or its mains cable. Any repairs to the product must be carried out by a qualified electrical person only or the product must be disposed of.
- Do not use chemical, steel wool or abrasive cleaners to clean the product.

WARNING! The product is to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

- This product is intended to be used in a household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - Farmhouses.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
- If the supply cord is damaged, it must be replaced by a qualified electrical person for electrical safety.
- Do not use this product in the immediate surroundings of a bath, shower or a swimming pool.
- Do not use this product if it has been dropped.
- Do not use if there are visible signs of damage to the product.
- Use this product on a flat, stable and heat-resistant surface.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning the use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be made by children without supervision.

WARNING! Keep ventilation openings, in the product enclosure or in the built-in structure clear of obstructions.

WARNING! DO NOT damage the refrigerant circuit.

WARNING! When positioning the product, ensure the supply cord is not trapped or damaged.

WARNING! DO NOT place multiple socket-outlets or portable power supplies at the rear of the product.

WARNING! Fill with drinkable water only.

CAUTION! Remove all adhesive tape inside the product or protective film from the outside of the product before operation.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this product.
- To avoid water contamination, please follow the below instructions:
 - Clean the water tank if the Ice maker is not used for more than 48 hours.
 - If the Ice maker is left empty for long periods, switch off, defrost, clean, dry and leave the lid open to prevent mould developing within the product.



WARNING! Risk of fire/flammable materials used. Please refer to local regulations regarding the disposal of flammable gas products.

- The climate class enables you to see the ambient temperature range in which the product will be able to maintain the necessary storage temperatures.


Climate Class	Operation Temperature
SN	10 – 32 Degrees Celsius
N	16 – 32 Degrees Celsius
ST	16 – 38 Degrees Celsius
T	16 – 43 Degrees Celsius

WARNING!

- To reduce the risk of electric shock, do not immerse or expose the product, or cord to rain, moisture, or any other liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event where the product is dropped into water, turn off the power at the power outlet and remove the plug immediately.
DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER SUPPLY.
- It is important to note that the product will have to be inspected by a qualified technician before using it again.

SAVE THESE INSTRUCTIONS

 Parts Guide

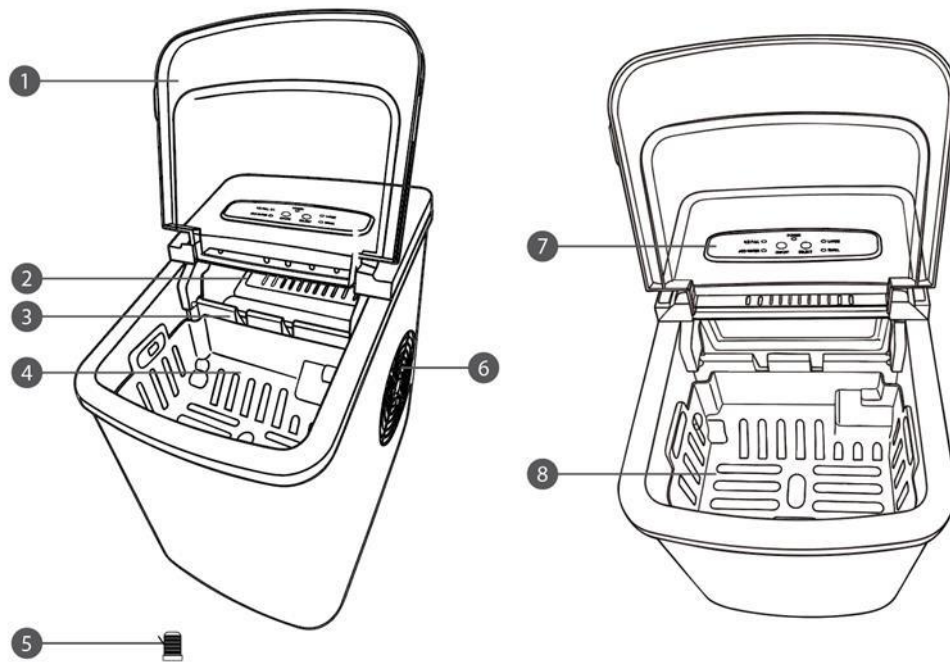


- 1. Lid with viewing window
- 2. Ice pusher
- 3. Ice full sensor
- 4. Ice basket

- 5. Water drain cap (underside of Ice Maker)
- 6. Air outlet
- 7. Control panel
- 8. MAX Water Level (remove the Ice basket to see the MAX mark)

Control Panel

 - A – Ice Full Indicator
- B – ON/OFF Power Button
- C – Power Indicator
- D - Ice Size Selector - S (Small) L (Large)
- E – Large Ice Size Indicator
- F – Water Shortage/Add Water Indicator
- G – Small Ice Size Indicator

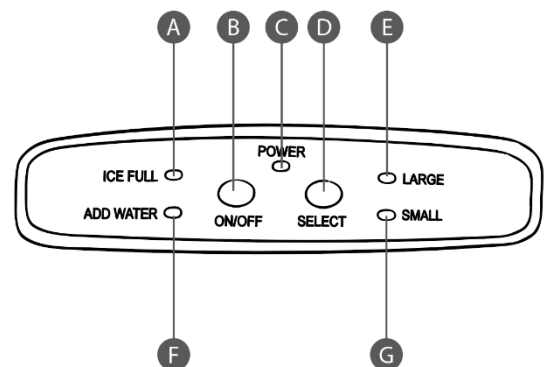

Instructions

GETTING STARTED

Check the product and parts guide.

NOTE!

Risk of damage!

If opening the packaging with a sharp knife or other pointed object, be careful to avoid damaging the products surface.

- Proceed carefully with opening the packaging.
- 1. Remove all packaging from the product. This includes any tape and/or protective covering.
- 2. Check that the delivery is complete (see Parts Guide).
- 3. Unwind the power cord to its full length and inspect the cord and plug for any damage. Do not use the product if these parts are damaged. In the case of damage, contact Customer Service for further assistance.
- 4. Place the product on a level, dry and heat-resistant surface ready to use. Ensure you read all instructions carefully and keep them for future use.
- 5. **IMPORTANT! Once the product is in position, leave it to stand for at least 2 hours prior to first use. This will allow the refrigerant to settle for optimal and safe use.**

It is recommended to clean the Ice Maker before first use to remove any manufacturing residues.

- Remove the ice basket and scoop.
- Clean the interior of the Ice maker with warm soapy water and a soft cloth.
- Never immerse the product in water or other liquids.
- Do not use any aggressive cleaners, brushes with metal or nylon bristles, sharp or metallic cleaning utensils such as knives, hard scrapers and the like as they may damage the Ice maker.
- Over a sink or with a large container to collect the water, unplug the drain cap on the underside of the Ice maker to allow any remaining water to drain from the tank.
- Once the water is drained, replace the drain cap into the Ice maker ensuring that it is firmly in place.
- Dry the interior and exterior of the Ice maker with a clean, soft cloth.
- Wash the ice basket and scoop in warm, soapy water. Ensure to wipe clean and dry thoroughly before returning them to the Ice maker.
- **NOTE! DO NOT** clean the evaporator.

Place the product on a level, dry and heat-resistant surface ready to use. Ensure that there is a 20cm clearing around the product.

The product must be positioned so that the power plug is accessible.

Ensure that you read all instructions carefully and save them for future reference.

WARNING! Only use drinking water in the Ice Maker.

INSTRUCTIONS FOR USE

- Open the lid and remove the ice basket and scoop.
- Ensure that the drain cap is firmly in place on the underside of the base of the product.
- Pour **cold water** into the tank.

WARNING! Water must be below the MAX marking.

- Return the ice basket to the Ice maker.
- Connect the power cord to a power outlet.
- The POWER button illuminator will flash to show that it is in standby mode.
- Press the ON/OFF button on the control panel to turn the Ice maker on. The POWER button indicator will be a steady colour.
- Choose your required Ice size by pressing the "SELECT" button to toggle between LARGE and SMALL to select the ice size. The selected size indicator light will be illuminated.
- The ice making cycle takes approximately 6-13 minutes depending on the ice size selected (shorter for small ice, longer for large ice) and the room temperature. The recommended room temperature when using the Ice maker is 10°C-38°C.
- If there isn't enough water in the tank, the Ice maker will stop and the "ADD WATER" indicator will illuminate. Press the ON/OFF button to turn off the Ice maker. Fill the tank with cold drinking water to the MAX marking (Ensure that the water does not exceed the MAX marking). Wait 3 minutes before starting the Ice maker. Press the ON/OFF button again to turn the Ice maker back on.
- When you have made the required amount of ice, remove the ice from the ice basket. The ICE FULL indicator will also illuminate when the basket is full.

WARNING! DO NOT use the Ice maker in direct sunlight. As this will affect the performance of the Ice maker.

- It is recommended to change the water every 24-48 hours. Do not attempt to make ice with water that has been left in the tank.
- When you have finished using the Ice maker, move the Ice maker so that it is over a sink or place a large container to catch the water under the drain cap and remove the drain cap to allow the water to be released. Ensure to replace the drain cap firmly once the water has drained.
- To stop the Ice maker and turn it off during the ice making process, press and hold the ON/OFF button, the product will turn off, and the water will drain from the top of the product into the water tank. Allow any ice that has formed to drop away from the Ice spindles.

AUTOMATIC SELF-CLEANING

The self-cleaning function takes approximately 30 minutes to complete.

- Remove the ice basket from the Ice maker.
- Fill the water tank with water to the MAX level marking of the water tank (Ensure to not fill the water past the MAX marking).
- Connect the Ice maker to a power outlet and turn the power on. The Ice maker will enter standby mode, and the POWER button will illuminate intermittently/flash.
- Press and hold the ON/OFF button on the control panel to enter the self-cleaning mode.
- The SMALL and LARGE indicator lights will flash in turn during the cleaning process.
- After the cleaning process is complete, the Ice maker will return to the standby mode, and the POWER button will illuminate intermittently.
- When the self-cleaning process is complete, move the Ice maker so that it is over a sink or place a large container to catch the water under the drain cap. Remove the drain cap to allow the water to be released. Ensure to replace the drain cap firmly once the water has drained.

NOTE! Ensure to return the drain cap to the underside of the Ice maker and ensure that it is firmly in place.

Cleaning and Maintenance

CAUTION! Risk of short circuit!

If water or other liquids enter the housing, they can cause a short circuit.

- Do not immerse the product, power cable or mains plug in water or other liquids.
- Do not let water or other liquids penetrate the product.

CAUTION! Risk of damage!

Improper handling of the product can damage the product.

- Do not use any aggressive cleaners, sharp or metal cleaning utensils such as knives, hard scrapers or similar items. These could damage the surfaces.
- Never wash the product in the dishwasher. This would destroy it.

CLEANING THE PRODUCT

NOTE: Ensure that the product is disconnected from the power outlet and cooled down before cleaning.

It is recommended to clean the Ice maker and replace the water every 24-48 hours. Ensure the Ice maker is turned off, unplugged and at room temperature before cleaning.

- Remove the ice basket.
- Clean the interior of the Ice maker with warm soapy water and a soft cloth.
- Never immerse the product in water or other liquids.
- Do not use any aggressive cleaners, brushes with metal or nylon bristles, sharp or metallic cleaning utensils such as knives, hard scrapers and the like as they may damage the Ice maker.
- Over a sink, unplug the drain cap on the underside of the Ice maker and allow any remaining water to drain from the tank.
- Once the water is drained, replace the drain cap into the Ice maker ensuring that it is firmly in place.
- Dry the interior and exterior of the Ice maker with a clean, soft cloth.
- Wash the ice basket and scoop in warm, soapy water. Ensure to wipe clean and dry thoroughly before returning them to the Ice maker.

NOTE! DO NOT clean the evaporator.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
"ADD WATER" Indicator is illuminated.	Water tank does not have enough water.	Stop the Ice maker by pressing the ON/OFF button. Pour water into the tank, ensure to not exceed the MAX marking. Press the ON/OFF button again to restart the Ice Maker
"ICE FULL" Indicator is illuminated.	The Ice basket is full.	Remove the ice from the Ice basket.
Ice is sticking together.	The ice making cycle is too long.	Stop the Ice maker. Select the small size ice and restart the Ice maker.
	Water temperature is too low.	Drain and replace the water. The recommended temperature of the water is 8°C - 32°C.
No ice is being formed.	The room temperature or the water temperature of the inner tank is too high.	The room temperature should be between 10 - 43°C and the water temperature should be between 8°C - 32°C.
	Refrigerant is leaking.	Contact Customer Service.
	Cooling system is blocked.	Contact Customer Service.

Storage

- If the Ice maker is not going to be used for an extended period of time, ensure that the water reservoir is empty and all components are dry before storing.

CAUTION! Mould may develop if all parts are not dry.

- Store in a cool and dry place away from direct sunlight and out of reach of children.

Technical Specifications

Model Number	AICEM20
Power Supply	220-240V~ 50Hz
Electrical Safety Class	I
Climate Class	SN, N, ST, T
Ice-making Rating	0.8A
Ice-harvest Rating	1.0A
Refrigerant	R600a/17g
Vesicant	C5H10
Water Tank Capacity	2.0L

WARRANTY

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148, AU Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148, AU Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us