



Clip-On Fan User Manual



Model No.: YS-CS02

Rev 1

Note: This appliance's specifications and/or components are subject to change without prior notice.

If any accessories should fail during use, please call 1300 105 888 (Australia) or 09 8870 447 (New Zealand) for an immediate replacement. This will save you from returning the product to the store.

If we can assist you in any other way, please feel free to contact us.

1 IMPORTANT INFORMATION.....4

2 OVERVIEW7

3 CHARGING THE FAN8

4 USING THE FAN9

5 MAINTENANCE9

6 TROUBLESHOOTING10

7 SPECIFICATIONS10

8 WARRANTY INFORMATION.....11

1 Important Information



Before using this appliance, read and follow all warnings and instructions in this manual, even if you are familiar with this product.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Ensure children and babies do not play with plastic bags or packaging materials. Dispose of these materials safely.



Safety & Warnings

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Keep the fan and USB cable out of reach of young children.
- Do not disassemble the fan and/or USB cable. There are no user serviceable parts inside.
- Ensure that the fan and/or USB cable does not get wet (water splashes, etc.).
- Do not use your charger, fan or the USB cable with wet hands.
- Do not immerse the fan and/or the USB cable in water or other liquids or use near sinks, baths, or showers.
- Only charge the fan with the USB cable that was supplied with the fan.
- Only charge the fan from a Safety Extra-Low Voltage (SELV) battery charger with an output rating the same as indicated on the fan's rating label.
- This product is designed to be charged using a 5V DC USB power source.
- Do not use a charger with an incorrect voltage rating.
- Use the fan and USB cable only for its intended use. The fan and USB cable are intended for household use only and not for commercial or industrial use.
- Inspect the USB cable and fan for damage prior to every use.
- Do not use the fan if it has been dropped or any part of the fan and/or the USB cable has been damaged.
- If the USB cable is damaged, call our customer service for a replacement.
- The use of accessories not intended for use with the fan may cause injuries to the user or damage to the fan and/or the USB cable.
- Do not place the fan on other appliances, on uneven surfaces or where it could be subject to heat sources (e.g. radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.
- The fan and/or USB cable must not be used outdoors if raining, near water, placed near a hot gas or electrical burner or placed in a heated oven.
- Do not place or leave near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not operate or charge the fan underneath or near flammable or combustible materials (e.g. curtains).
- Always switch off and unplug the charger when finished charging the fan, or during lightning storms or when unused for long periods of time.
- Do not cover the fan or charger when charging.

- Turn off and unplug before cleaning or storing.
- Any type of servicing, apart from ordinary cleaning, must be carried out by a qualified electrical person only. There are no user serviceable parts in this fan and USB cable.
- Cleaning and user maintenance shall not be made by children without supervision.
- If this fan and USB cable is used by a third party, please supply the instruction manual with it.
- Do not misuse the USB cable. Never carry the fan by the USB cable or pull to disconnect it from the socket. Instead, grasp the plug and pull to disconnect.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the fan and/or injury to the user.
- Do not leave the fan running or charging unattended.
- Avoid contacting moving parts. Keep fingers, hair, clothing and other items away from the fan grille during operation to prevent personal injury and/or damage to the fan.
- Never poke anything through the fan grille.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the fan and/or USB cable.
- This product has not been designed for any uses other than those specified in this manual.
- Only for domestic use. Industrial or commercial use invalidates the warranty.



WARNING

Only use the USB cable that was supplied with this fan.

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers, and are known to pose a potential safety risk.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable. Do not open the fan.
- Do not use or store in temperatures above 40°C

Battery Information

This appliance contains batteries that are only replaceable by skilled persons.

This appliance contains batteries that are non-replaceable.

How to deal with leaking batteries

- a. If a battery shows signs of leakage, swelling or unusual odour, stop using the appliance immediately and disconnect it from charging.
- b. When handling a leaking battery, it is recommended to wear protective gloves to avoid direct contact of fluid with skin, eyes or clothing.
- c. If battery fluid comes into contact with skin, rinse immediately with plenty of water. If it gets into eyes, flush continuously with water and seek medical attention promptly.
- d. Do not dispose of leaking batteries in fire, and do not crush, puncture or disassemble them.
- e. Place the leaking battery in a sealed plastic bag and deliver it to an official waste battery collection point for professional disposal.

Battery Specifications

The type reference of the battery: Li-ion 900mAh 3.7V d.c.



At the end of the fan's life, it must be disposed of correctly.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.



This symbol on the product or its packaging indicates:

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on collection, reuse, and recycling programmes.

Read and Save These Instructions

2 Overview



A	Clip
B	360° rotating fan head
C	Airflow outlet
D	Control button (Power / Speed)
E	Indicator light
F	USB-C charging port
G	USB charging cable

3 Charging the Fan

IMPORTANT:

- This fan contains a built-in lithium-ion battery. Charge using only the supplied USB cable.
- Always disconnect the USB cable when charging is complete or when not in use.
- If any abnormality occurs during charging (such as a burning smell, excessive heat, or unusual noise), immediately turn off the USB power source, disconnect the USB cable, and stop using the product. Contact Customer Service for assistance.

Before first use, fully charge the fan.

1. Connect the small end of the USB charging cable to the USB-C charging port on the fan.



2. Connect the other end of the cable to a USB power source (for example, a USB wall charger or a USB port on a computer).
3. The indicator light shows the charging status:
 - **Red light:** Charging
 - **Green light:** Fully charged
4. Once fully charged, unplug the USB cable from both the fan and the USB power source.

Charging time: Up to 2 hours

Input: DC 5V, 1A

Note: The fan can be used while connected to a USB power source.

4 Using the Fan

Turning the Fan On/Off and Adjusting the Speed

- Press the **Control Button** once to turn on the fan. The fan will start operating at **Low** speed.
- When the fan is turned on, press the **Control Button** repeatedly to cycle through the speed settings in the following order:
Low → Medium → High → Off
- To turn off the fan directly from any speed setting, press and hold the **Control Button** for 3 seconds.

Wearing and Adjusting the Fan

- Use the clip to attach the fan securely to a collar or backpack strap for hands-free use.
- Rotate the fan head to direct the airflow where needed.

5 Maintenance

Cleaning

- Ensure that the fan is turned off and not connected to the USB cable.
- Wipe the exterior with a soft, dry cloth.
- Use a soft brush or cotton swab to gently remove dust from the airflow outlet.
- Do not use water, harsh chemicals, or abrasive cleaners.

Storage

- Store the fan in a cool, dry place away from direct sunlight and moisture.
- If not used for an extended period, charge the fan at least once every 3 months to help maintain battery performance.

6 Troubleshooting

Problem	Possible Cause	Solution
Fan won't turn on.	Battery is empty.	Charge the fan using the USB cable.
Fan stops unexpectedly.	Low battery.	Recharge the fan.
Fan not charging.	Faulty or incompatible USB cable or power source.	Use a DC 5V USB power source and the supplied USB cable. Try a different DC 5V USB power source. Incorrect charger voltage can cause charging problems.

7 Specifications

Model	YS-CS02
Rated Power	5W
Rated Input	DC 5V, 1A
Battery Capacity	900mAh Li-ion

8 Warranty Information

12 Month Warranty

Thank you for your purchase.
Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

IMPORTANT! For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).

