




HANDHELD TURBO FAN

Instruction Manual

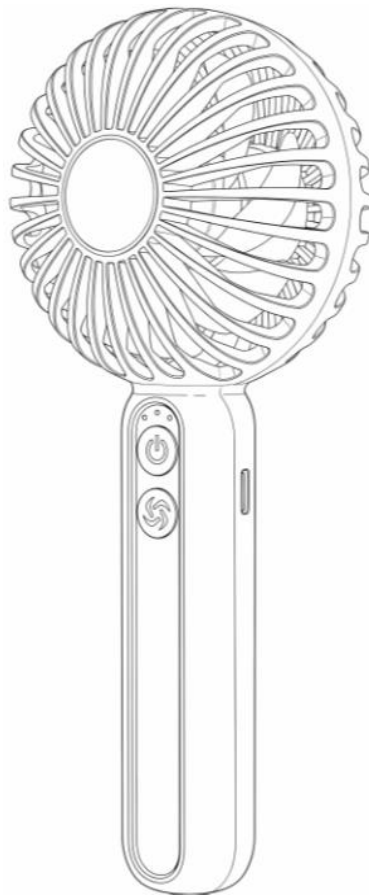

Model No.: APRF812

Rev 01

 
To ensure the proper operation of this device, please read this instruction manual carefully before using the turbo fan and keep them for future reference.

EXPLANATION OF SYMBOLS

The following symbols and signal words are used in this user manual, on the product or on the packaging.



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.

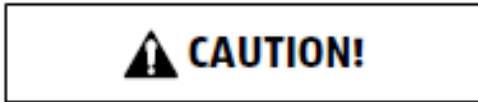

This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.



Fans suitable for Tropical climates.

IMPORTANT SAFEGUARDS



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions on to the next owner of this product.

When using electrical products, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed including the following:

- **Usage restrictions:** This product is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety.
- **Children:** Supervise children to ensure they do not play with the product. Close supervision is necessary when any product is used by or near children. Keep the product and its cord out of reach of children less than 8 years old.



Risk of injury!

If you do not use the product properly there is an increased risk of injury.

- Any type of servicing, apart from ordinary cleaning, must be carried out by a qualified electrical person only. There are no user-serviceable parts in this product.
- Do not immerse the product or USB charging cable in water or other liquids.
- Always switch off and unplug the USB charging cable when you are not using it, when you intend to clean it, or in the event of a malfunction.
- Do not dispose of the battery in a fire or a hot oven or mechanically crush or cut the battery as this can result in an explosion or fire.
- Do not leave the battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- **Do not leave the Product running or charging unattended.**



WARNING! Ensure that the charger (not supplied) and/or USB cable does not get wet (water splashes etc.).

- Do not use your charger or the USB cable with wet hands.
- Do not immerse the USB cable in water or other liquids or use near sinks, baths or showers.
- Only charge the Product with the USB cable that was supplied with the Product.
- Only Charge the Product from an Extra Low Voltage Battery Charger (not supplied) with an output rating the same as indicated on the Product's rating label.

Usage Conditions and Restrictions

- **Domestic use only:** This product is intended for private domestic use only. It is not suitable for commercial, industrial or trade use.
- **Intended purpose:** Do not use the product for anything other than its intended purpose, and only use it as described in this manual. Any other use is not recommended and may cause fire, electric shock, or injury.
- **Keep clear:** Never place anything on top of the product while it is in use.
- **Repair:** The product has no user-serviceable parts contained inside. Do not attempt to repair, disassemble, or modify it yourself.
- **Liability:** Misuse or improper installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damage or injury caused by misuse of the product or noncompliance with the instructions.

NOTICE!


Risk of damage!

Improper handling of the product may result in damage.

- Keep the product and USB charging cable away from open flames and hot surfaces.
- Never insert any objects into the housing.
- Never throw the product into a fire.
- Do not cover the product during use.
- The product contains batteries that are non-replaceable. When the battery is at the end of its life, the product should be properly disposed of.
- The fan guard is not removable.
- Do not press down on the power button with excessive force.

SAVE THESE INSTRUCTIONS

PRODUCT OVERVIEW

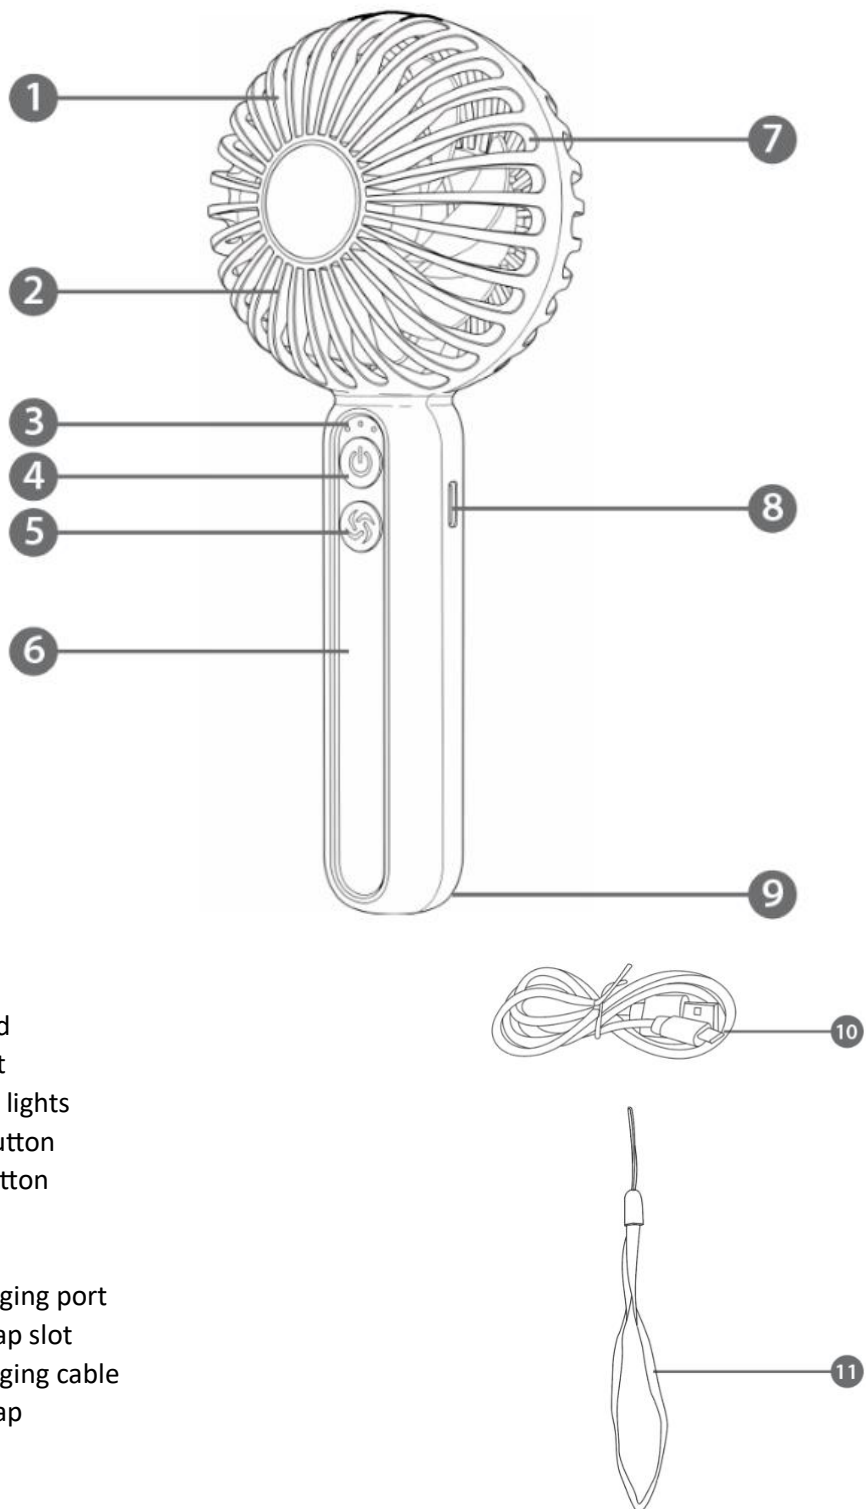

INSTRUCTIONS

USING YOUR FAN FOR THE FIRST TIME

Carefully unpack the Fan and remove any packaging. Check to make sure that all parts are included (see Product Overview) and check whether the product or individual parts are damaged. If this is the case, do not use the product. Return the product back to place purchase for replacement.

Ensure to read all instructions carefully and keep them for future use.

HANDSTRAP

If the hand strap is required, please attach it via the slot on the bottom of the fan. Push the thin end through the hole and then loop the larger end around so that it holds in place.

OPERATION

CHARGING THE FAN

Ensure that you fully charge the product before first use.

1. Insert the smaller end of the USB Charging cable into the input port of the product.
2. Insert the larger end of the USB charging cable into a 5V DC 1A USB charger (not supplied) and switch on.

NOTE: Charging starts automatically. The indicator lights will flash blue during the charging process.

3. Charging is complete when the indicator lights are solid. Disconnect the USB charging cable from the product and the power source.

NOTE: Do not overcharge. Overcharging will affect the service life of your fan. The charging cable should be removed once the charging is complete.

FAN SPEED

The fan has 6 speeds. Each press of the power button will change the speed, and the indicator lights will change.

Press 1	Speed 1	Indicator light 1 flashing
Press 2	Speed 2	Indicator light 1 solid
Press 3	Speed 3	Indicator light 1 solid, Indicator light 2 flashing
Press 4	Speed 4	Indicator light 1 solid, Indicator light 2 solid
Press 5	Speed 5	Indicator light 1 and 2 solid, Indicator light 3 flashing
Press 6	Speed 6	Indicator light 1, 2 and 3 solid

USING THE FAN

Ensure that the Fan is fully charged.

1. Press the Power button to switch on the fan. This will default to Low speed. The fan has 6 speeds.
2. To increase the speed, press the Power button again to switch to a higher speed. Each press of the power button will increase the speed.
3. After reaching the highest speed, pressing the Power button again will turn the fan OFF.

NOTE: You can either cycle through each of the speeds to turn the fan off or press and hold the power button will turn the fan off.

NOTE: The wind speed of the fan can also be changed. By pressing and holding the Turbo button the fan will produce a very strong wind, if you let the button go the fan will return to the previous wind speed. During this setting, the indicator lights will flash. This setting will only work for 2 minutes.

Note: Pressing the power button 2 times quickly will show the battery power level.

CLEANING AND MAINTENANCE

NOTICE!

Improper handling of the product may result in damage.

- Make sure that no water or other liquids penetrate the housing.
- Never immerse the product in water or other liquids.
- Do not use any aggressive cleaners, brushes with metal or nylon bristles, sharp or metallic cleaning utensils such as knives, hard scrapers and the like as they may damage the fan.

Cleaning

1. Unplug the USB charging cable before cleaning.
2. Use a damp cloth to wipe the product. Then let all parts dry completely.

STORAGE

All parts must be completely dry before being stored.

- Always store the product in a cool and dry environment.
- Keep the product out of direct sunlight and near windows.
- Recharge the product every three months to avoid damaging the battery during storage.

TECHNICAL DATA

USB INPUT	DC 5V, 1.0A
BATTERY TYPE	2000mAh Li-ion battery
CHARGING TIME	Approx. 3.5 hours
USAGE TIME	Approx. 1 hours & 40 minutes (At Speed 6)

BATTERY DISPOSAL WARNING



At the end of the product's life, it must be disposed of correctly.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical products or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical products are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us