

# anko

## Heated Foot Massager Instruction Manual



AK-FMV-24

Rev 01

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

# IMPORTANT SAFETY INSTRUCTIONS

## WARNINGS

**WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:**

**READ ALL INSTRUCTIONS BEFORE USING.**

### **DANGER – TO REDUCE THE RISK OF ELECTRIC SHOCK:**

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- **NEVER** use pins or other metallic fasteners with this appliance.
- Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
- Keep dry – Do not operate in a wet or moist condition.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

### **WARNING – TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:**

- An appliance should never be left unattended when plugged in.
- Unplug from outlet when not in use.
- **DO NOT** operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Use this appliance only for its intended use as described in these instructions.
- **DO NOT** use attachments not recommended or provided with the unit.
- **NEVER** operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- **DO NOT** carry this appliance by supply cord or use cord as a handle.

## IMPORTANT SAFETY INSTRUCTIONS

- Keep the cord away from heated surfaces.
- **NEVER** drop or insert any object into any opening.
- **DO NOT** use outdoors.
- **DO NOT** operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Use heated surfaces carefully. May cause serious burns.  
**DO NOT** use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.


## SAVE THESE INSTRUCTIONS

### CAUTION – PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.

- This product is not intended for medical use. It is intended only to provide a relaxing massage.
- Consult your doctor prior to using this product, if:
  - You are pregnant
  - You have a pacemaker
  - You have any concerns regarding your health
- **NOT** recommended for use by diabetics.
- **NEVER** leave the appliance unattended, especially if children are present.
- **DO NOT** use this product for more than 15 minutes at a time. This product will auto shut off at 15 minutes of use.
- Extensive use could lead to the product's excessive heating and shorter life.
- **NEVER** use this product directly on swollen or inflamed areas or skin eruptions.
- **DO NOT** use this product as a substitute for medical attention.
- This product should never be used by any individual suffering from any physical ailment that would limit the user's capacity to operate the controls or who has sensory deficiencies in the lower half of their body.
- This appliance is intended for household use only.

# INSTRUCTIONS FOR USE


## GETTING STARTED

1. Insert the included USB-C cable into the foot warmer & massager.
2. Insert the cable into your power adaptor (not included) and plug into a power outlet.
3. Place feet in the massager.
4. Press the power button  once to start the vibration massager. Press a second time to add heat to the massage. Press a third time to turn the unit off.

### **WARNING:**

An Australian approved USB power adaptor. Must be used to power the unit. The output of the USB power adaptor must not exceed 5Vd.c.2A.

**NOTE:** The Heated Foot Massager will automatically shut off after 15 minutes.

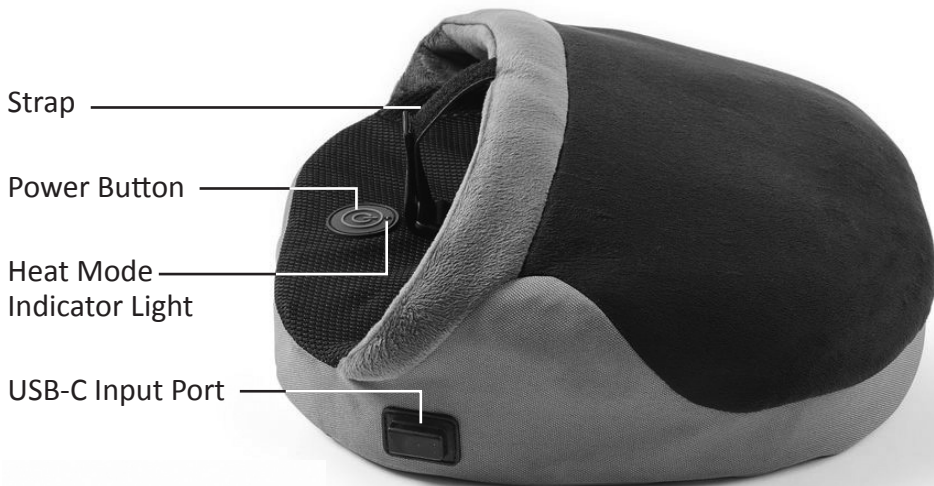

USB type C  
charging cable

# MAINTENANCE

## CLEANING

- Turn off the product and allow to cool before cleaning. Clean only with a soft, slightly damp cloth.
- **NEVER** allow water or any other liquid to come into contact with the appliance.
- **DO NOT** immerse in any liquid to clean.
- **NEVER** use abrasive cleaners, brushes, glass/furniture polish, paint thinner etc to clean.

## CLEANING

- Place the appliance in its box or in a safe, dry, cool place.



## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/1 Middle Road, Chadstone VIC 3148 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre L2/1 Middle Road, Chadstone VIC 3148 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>