


anko

Vacuum Cleaner

User Manual

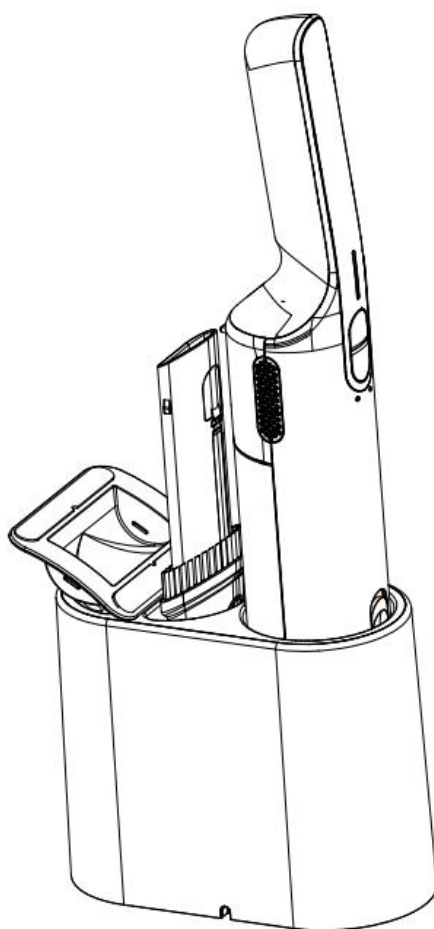

Model no.: V8318C

**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of injury, fire, electric shock, and property damage resulting from

improper use of the appliance, carefully observe the following instructions.

This unit contains electrical connections and moving parts that potentially present risk to the user.

WHEN USING AN ELECTRICAL APPLIANCE, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

Power supply, charging dock, and vacuum contain electrical connections.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
2. Children should be supervised to ensure that they do not play with the appliance.
3. During charging, the appliance and adaptor must be placed in a well-ventilated area.
4. **DO NOT** recharge non-rechargeable batteries.
5. **DO NOT** use to vacuum any liquids.
6. **DO NOT** immerse in water or other liquids.
7. If vacuum is damaged, discontinue use.
8. To avoid fire, explosion, or injury, inspect vacuum and charging dock for any damage before use.
DO NOT use damaged vacuum or charging dock.
9. **DO NOT** use outdoors or on wet surfaces. Use only on dry surfaces.
10. If vacuum cleaner is not working as it should, or has been dropped, damaged, left outdoors, or immersed in water, **DO NOT** use. Return it to anko for examination, repair, or adjustment.
11. **DO NOT** handle charger or vacuum cleaner with wet hands.
12. **DO NOT** leave vacuum cleaner unattended while powered on.
13. Keep vacuum away from heated surfaces.
14. Always turn off vacuum before connecting to charging dock.
15. Use only anko chargers and batteries. Other types of batteries may burst, causing injury and damage.
16. Use charging dock on flat and stable surfaces only.
17. **DO NOT** incinerate appliance, even if it is severely damaged, as lithium-ion battery may explode in a fire. Servicing can only be performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the products is maintained.
18. **DO NOT** carry the charger by the cord or yank to disconnect from an outlet; instead, grasp the plug and pull to disconnect.
19. Keep charger cord away from heated surfaces.
20. Use only as described in this manual.
21. Keep your work area well lit.
22. **DO NOT** put any objects into openings.
23. **DO NOT** use if any opening is blocked; keep free of dust, lint, hair, or anything that may reduce

airflow.

24. This vacuum is not a toy and must not be played with. Children over 8 years old and persons with reduced physical, sensory, or mental capabilities may only use the vacuum with supervision or prior safety instruction and an understanding of the hazards involved. Children may not clean or maintain the vacuum without supervision.
25. **DO NOT** use without dust cup and filter in place.
26. **DO NOT** use if airflow is restricted; if the air paths become blocked, turn off the vacuum cleaner. Clear all obstructions and power on again.
27. Keep nozzle away from hair, face, fingers, uncovered feet, or loose clothing.
28. Only use manufacturer's recommended attachments provided with vacuum only.
29. **DO NOT** charge at temperatures below 50°F (10°C) or above 104°F (40°C). Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
30. Store the appliance indoors. **DO NOT** use or store it below 37.4°F (3°C). Ensure the appliance is at room temperature before operating.

Before turning on the vacuum:

31. Make sure filter is thoroughly dry after routine cleaning.
32. Make sure dust cup and filter are in place after routine maintenance.
33. Make sure accessories are free of blockages and keep openings away from face and body.
34. Use only ANKO image filters and accessories. Using other brands will void warranty.
35. **DO NOT** vacuum up hard or sharp objects such as glass, nails, screws, or coins that could damage the vacuum cleaner.
36. **DO NOT** vacuum up drywall dust, fireplace ash, or embers.
37. **DO NOT** use as an attachment to power tools for dust collection.
38. **DO NOT** vacuum up smoking or burning objects such as hot coals, cigarette butts, or matches.
39. **DO NOT** vacuum up flammable or combustible materials (e.g., lighter fluid, gasoline, or kerosene) or use vacuum in areas where they may be present.
40. **DO NOT** vacuum up toxic solutions (e.g., chlorine bleach, ammonia, or drain cleaner).
41. **DO NOT** use in an enclosed space where vapors are present from paint, paint thinner, moth-proofing substances, Use appliance only with included lithium- ion battery ZL-8318C0222. Using any other battery may create a risk of flammable dust, or other explosive or toxic materials.
42. **DO NOT** immerse vacuum cleaner in water or other liquids.
43. Use extra care when cleaning on stairs.
44. Under abusive conditions, liquid may be ejected from the battery. Avoid contact with liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
45. Store the appliance indoors. To maintain battery life, **DO NOT** use or store battery at temperatures below 37.4°F (3°C) or above 104°F (40°C).
46. **DO NOT** expose battery pack to fire or temperature above 266°F (130°C) as it may cause explosion.
47. There are **NO** serviceable parts. To ensure safety, **DO NOT** modify or attempt to repair the battery pack.

48. DO NOT use a battery pack of appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

49. CAUTION: The product is only to be used with the power adaptor provided with appliance.

50. For cleaning, please refer to "MAINTAINING YOUR VACUUM" section.



WARNING: For the purpose of recharging the battery, only use the detachable supply unit provided with this appliance

Model No.: ZD012X090090AU 100-240V~ 50/60Hz 0.5A Output: 9Vd.c., 900mA

Battery specifications: ZL-8318C0222 7.4V 2200mAh 16.28Wh

Consumers are cautioned against using and/or purchasing counterfeit and/or inferior quality batteries. These batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

Never try to recharge non-rechargeable batteries as they may explode, catch on fire or cause personal injury and/or damage to property.

- May explode if disposed on in fire.
- To prevent injury or burns, do not allow metal objects to contact battery terminals.
- Do not use or store in temperatures above 40°C.
- Only charge the battery between an ambient room temperature of 10°C - 40°C.



The battery pack must be removed from the vacuum before disposal. Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.



This symbol on the product or its packaging indicates:

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling programmes.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the appliance.

This product has not been designed for any uses other than those specified in this manual.


ONLY for domestic use. Industrial or commercial use invalidates the warranty.

Read and Save These Instructions


WHAT'S INCLUDED

- A. Charging and storage dock
- B. Handheld vacuum
- C. 2-IN-1 crevice tool
- D. Upholstery Tool
- E. adaptor


A

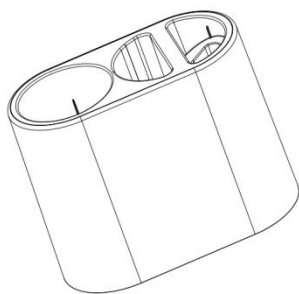


B

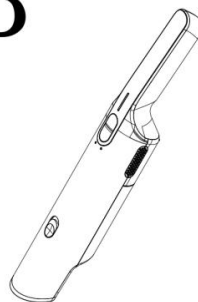


C

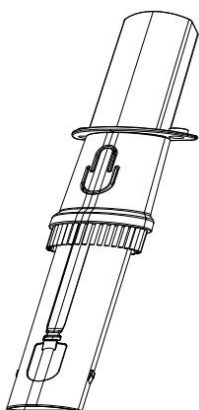

D

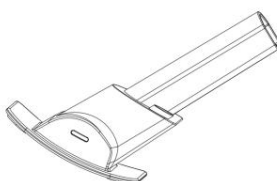


E

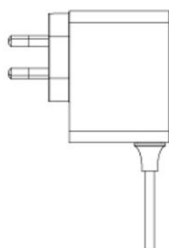


Charging


1. Plug the charger into charging dock. Charge the vacuum by putting it into the charging dock nozzle

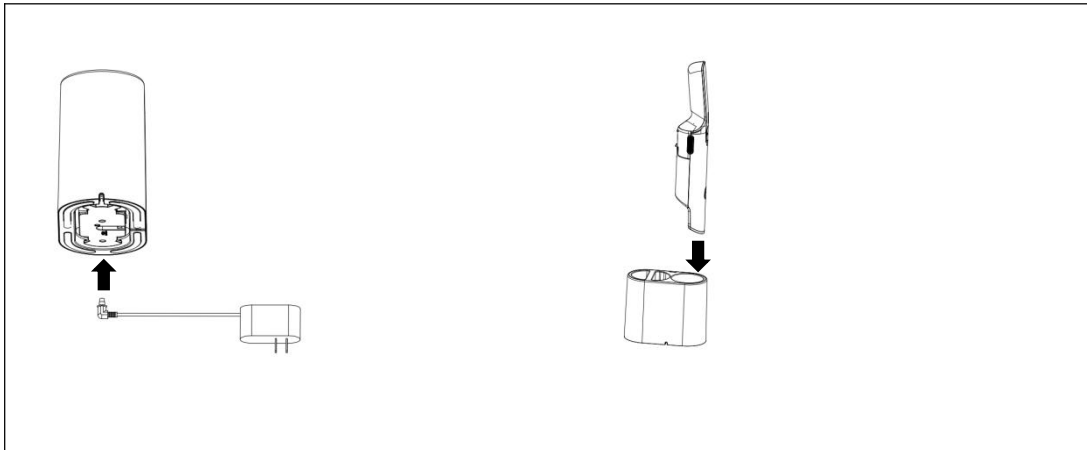

2. Make sure the contacts on the vacuum are aligned with the contacts on the charging dock. When charging is complete and you need to use the unit again, lift it off the charging dock. When the product will not be used in a long time, disconnect the charger from power supply and remove charger from charging dock. Store the main unit and accessories together to avoid damages to product.

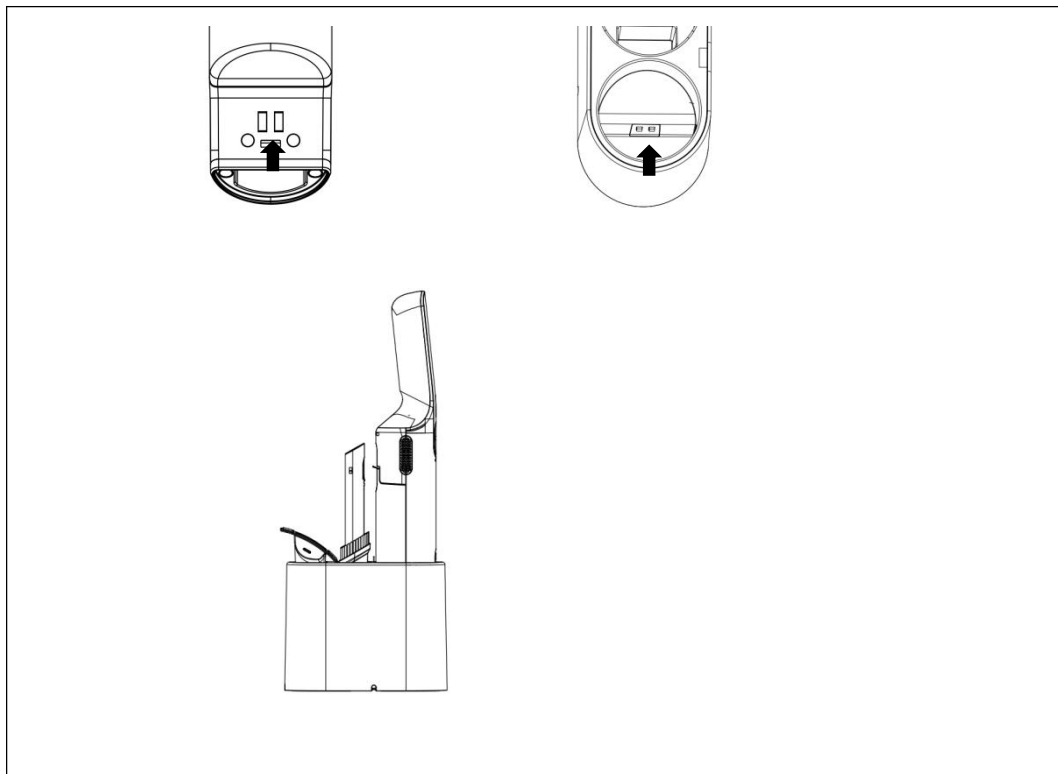

BATTERY LED INDICATOR LIGHTS

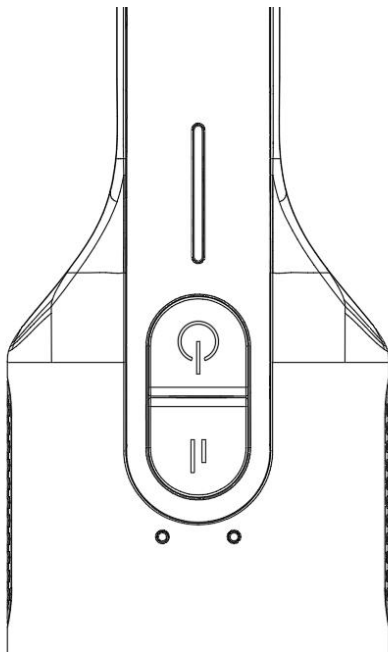

In use



Full charge



66% charge



33% charge

 


Nearly empty

Charging



No Charge



33% charge



66% charge



 
 


Full charge



after fully charge 1min the lights will turn OFF

USING YOUR VACUUM

MODES

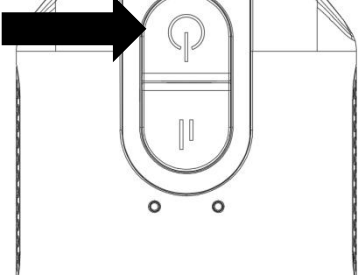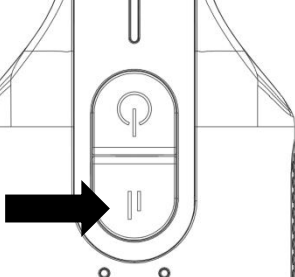		Low speed mode 
Press the On/Off button on the handle to turn ON and go into low speed mode. Press the power button again to turn off the vacuum.	Press switch button to turn to high-speed mode, press again to return to low speed mode	high-speed mode 



USING ACCESSORIES

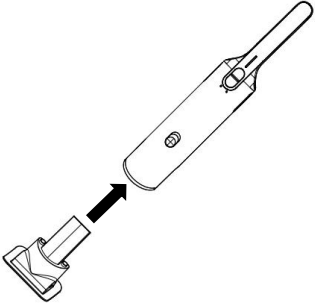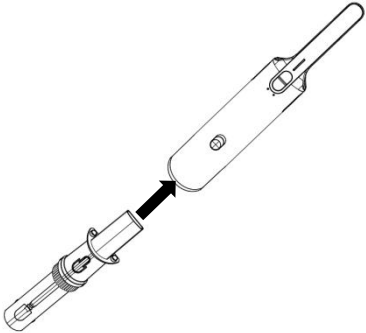	 激活 Wind
---	---



To attach an accessory to the hand vacuum, slide it into the opening in the nozzle. To remove the accessory, slide it off the nozzle.


MAINTAINING YOUR VACUUM

EMPTYING THE DUST CUP

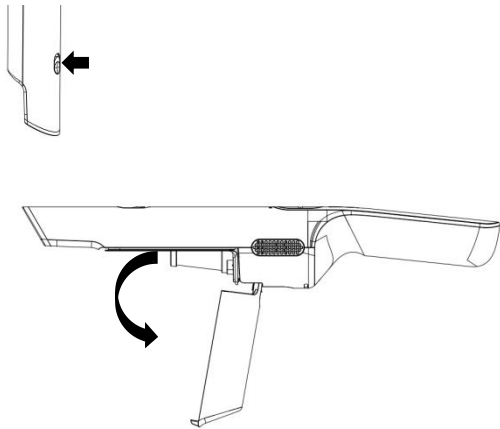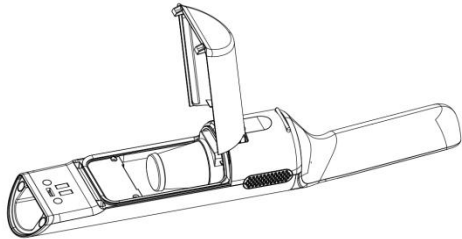
	
1. Turn the vacuum OFF and the hand vacuum positioned over a trash receptacle, slide the Dust Cup release button on top of the vacuum, and the dust cup will drop open. Tap the filter screen lightly to knock off dust and debris.	2. Wipe the screen inside the dust cup lightly with a dry cloth to remove dust and dirt.

CLEANING THE FILTER

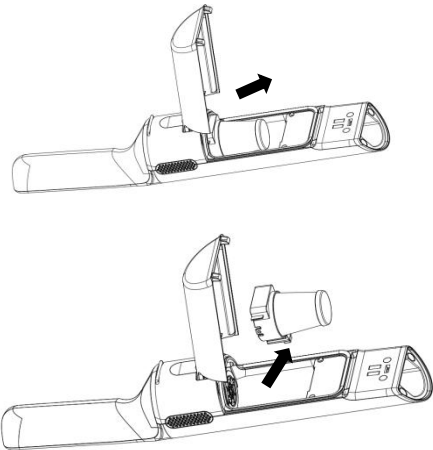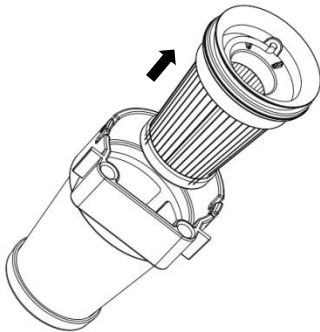
	
3. With the dust cup removed and the power off, pinch both sides of the filter housing and pivot it upward to access the filter.	4. Hold the filter housing over a trash receptacle. Lift the fabric filter by the metal ring to remove it from the housing. Tap lightly to remove any dust and debris, then rinse with water only. Let the filter air-dry until completely dry before reinstalling.

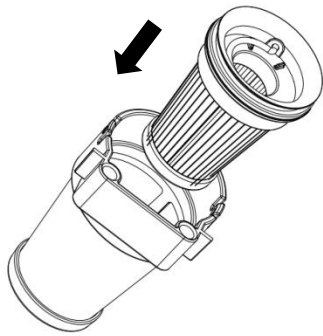

5. After the filter has naturally air-dried completely, press it back into the filter housing.

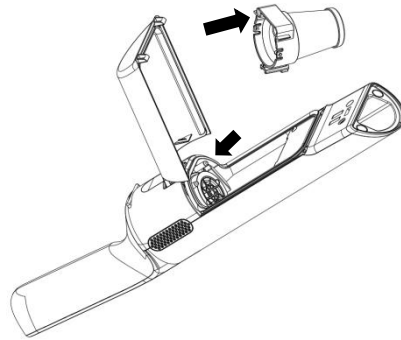

6. Align the filter holes with the cylindrical part inside the dust collection chamber and press to insert.

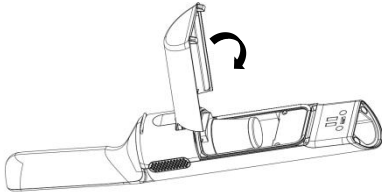

7. After installing the filter, simply snap the dust collection chamber back on.

TROUBLESHOOTING

Power level indicators blinks 5 times in 10-second light ON/OFF intervals then stop	blockages	Cleaning the filter, check all intake openings to the dust cup and remove any debris or blockages.
Battery level indicators blinks 5 times in 0.5-second light ON/OFF intervals then stop	Low voltage start	With the power off, check the nozzle opening for blockages. Remove any obstructions. Allow unit and battery to cool for at least 45 minutes, returning to room temperature. The battery may need to be charged. Charge completely (approximately 2.5 hours) by placing the vacuum on the charging dock.
Battery level indicators blinks 10 times in 0.2-second intervals then stop	Charger over voltage or overcurrent.	Make sure that you are using with E-TEK Electronics Manufactory Ltd ZD012X090090AU charger. Do not use any other model chargers

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us