



**Outdoor Indoor Scrubbing Brush
M9
User Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. This appliance must only be supplied by a certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
2. After charging, when unplugging the plug, please grab by the plug and not from the cord when pulling it out.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Cleaning and user maintenance shall not be done by children without supervision.
6. Stay away from flammable and explosive substances at any time.
7. Keep hair, loose clothing, and all parts of the body away from moving parts.
8. To protect against a fire, electric shock or personal injury, do not immerse the main unit or the USB cable in water or other liquids.
9. Do not touch the USB cable or the appliance with wet hands.
10. Use of accessories not supplied with the product may cause fire, electric shock or personal injury.
11. Do not leave the appliance unattended when powered on.
12. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
13. This appliance must always be used in accordance with the user instructions supplied with the product and must not be used for other purposes.
14. Misuse may cause serious injury.
15. Switch OFF the appliance before changing accessories.
16. Before using the product, please check if the brush is fixed in place.
17. Do not operate without charging port cover in place.
18. Do not use it in front of people to avoid the brush hitting others if it is dropped.
19. The appliance contains non-replaceable batteries. When the battery reaches the end of its service life, the appliance must be disposed of properly
20. Always wear eye protection when using the brush especially when using with irritating substances. Rubber gloves are also recommended.
21. For cleaning, please refer to CLEANING AND STORAGE section.

CAUTION!

22. The product has built-in lithium-ion batteries. Pay attention to the following:
 - a) Only use and store the product in an environment where the temperature is between -5°C and $+35^{\circ}\text{C}$.
 - b) If not used for a long time, recharge every three months to prevent battery damage.
 - c) Charging time may be longer when the room temperature is below 10°C .
 - d) Charge the battery when the battery power goes low, avoid allowing the battery to go flat.
23. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 60°C .
24. This product is for household use only and not designed for commercial use.
25. Do not expose the product to high temperatures (above $+35^{\circ}\text{C}$), strong magnetic fields, near flammable and explosive gasses (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.
26. Battery disposal:



At the end of the appliance's life, it must be disposed of correctly.


This appliance contains a battery that is non-replaceable, and as the battery is non-replaceable, the complete appliance must be recycled as this is where the battery is located.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on collection, reuse, and recycling programmes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

KNOW YOUR OUTDOOR INDOOR SCRUBBING BRUSH

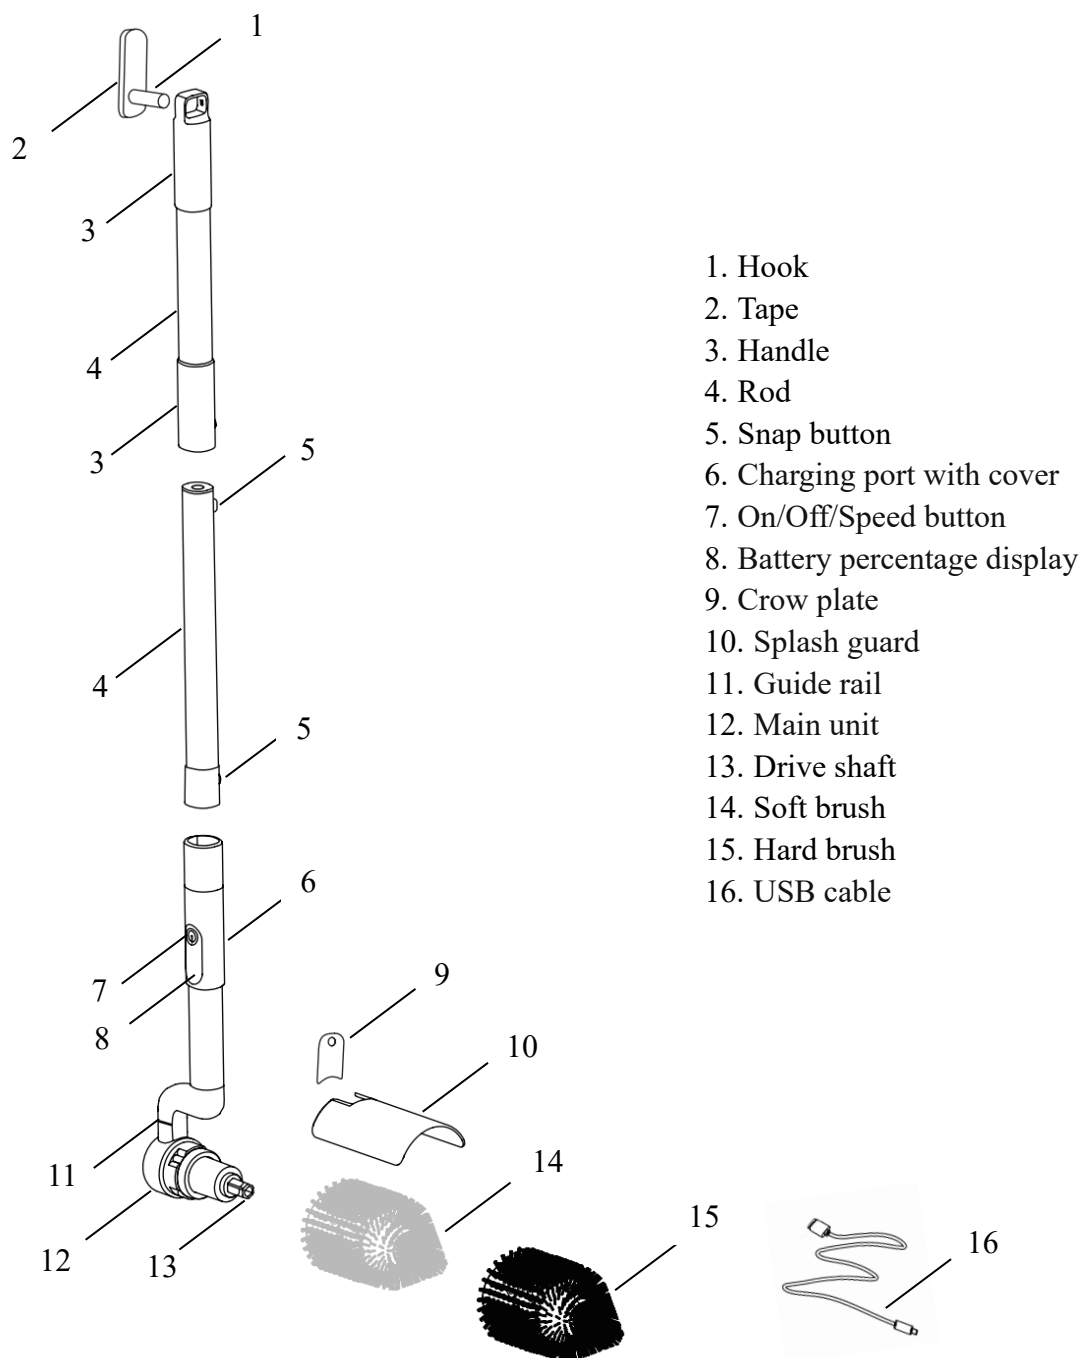

IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to place of purchase for replacement.

When using the appliance for the first time, carefully remove all internal and external packaging and dispose of them responsibly.

BEFORE FIRST USE

- Fully charge the appliance before first use.
- The supplied USB charging cable should be inserted into a standard USB power source rated at **5Vd.c. 2A** specification.

WARNING! Use only the supplied USB charging cable to charge the appliance.

- When charging, the battery percentage displays, speed indicator "H" and "L" flashes in turn. And "100%" displays when fully charged.
- The charging time is approx. 3 hours.
- After being fully charged, the product can work up to approx. 2.5 hours.



USING YOUR OUTDOOR INDOOR SCRUBBING BRUSH

IMPORTANT! To protect the surface you are cleaning from damage, we recommend:

Test on a small, inconspicuous area before use. Avoid staying in the same spot for too long during cleaning to prevent excessive friction.

IMPORTANT! For use on hard floors and surfaces only. Not suitable for polished wood and floating floors, Vinyl floors and carpet. Do not use it on glass and painted surfaces, i.e., painted wood frames, furniture etc.

1. Choose the appropriate brush for the cleaning requirements.
2. Align the drive shaft with the brush and push in place, slide the splash guard along the guide rail until it fits the main unit well.
3. Push the snap button to assemble the handle (110cm), push the top button and push in the handle to get a shorter handle (84cm).
4. Make sure the charging port is properly sealed by the cover. Now the appliance is ready for use.
5. Hold the handle to make the display upside. Press the On/Off/Speed button to turn ON the appliance, the remaining battery percentage will display, the appliance will start working at low speed with "L" displayed on the screen. Press the On/Off/Speed button a second time to set the speed to high speed, "H" should display on the screen. Press the On/Off/Speed button a third time to turn OFF the appliance, the display should switch OFF.

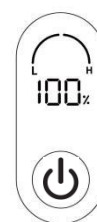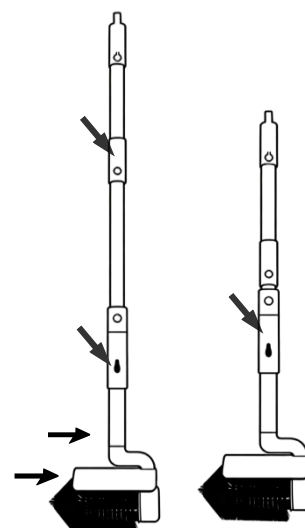

Tips for better performance:

- Make sure the appliance is fully charged before cleaning.
- This appliance can work with different kinds of cleaners, such as spray, foam, gel, liquid, as well as bleach. Frictional cleaners should not be used.



- Power off the appliance before removing it from the cleaning surface to avoid spraying from the rotating brush.
- If excessive force is applied and the motor is restricted from rotating, the appliance will turn OFF automatically to prevent damage to the appliance. Turn ON the appliance again to continue.

CLEANING AND STORAGE

- Clean the product and its accessories after use to maintain and prolong the life of the product.
1. Turn off the appliance and make sure the USB cable is disconnected, charging port cover in place before cleaning.

WARNING!

- Do not immerse the main unit or USB cable in water or any other liquid to clean.
 - Do not use abrasive material to clean the appliance.
 - Do not place any parts in extremely hot water.
2. Take off the splash guard. Use the crow plate to lever off the brush.
 3. The outer enclosure of main unit and handle can be wiped with mild detergent and a soft sponge, dry thoroughly.
 4. Soak the brushes, splash guard, crow plate in soapy water, then rinse, dry thoroughly.
 5. Ensure the product is clean and dry before storage.
 6. Store the appliance in a clean and dry location. The appliance can be hung up with the hook found on the end of the handle.
- This product contains a Li-ion battery. It should be stored in a clean, dry, ventilated room with an ambient temperature range of -5°C to + 35°C and a relative humidity of 25% to 75%.

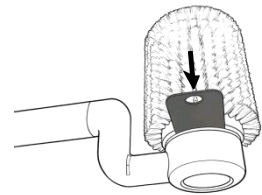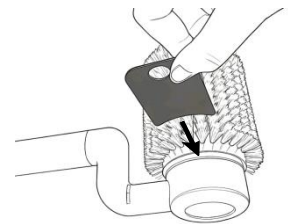

TECHNICAL SPECIFICATION

Input: 5Vd.c. 2A

Battery: Li-ion 7.4V 2000mAh

Ingress Protection: IPX4

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.

Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us