

anko

Rice Cooker

AJL-FB2007

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. Always turn the appliance OFF and disconnect from mains power when not in use, before attempting to move the appliance and before cleaning or storing.
2. Never immerse the main unit and power plug and cord in water or any other liquid, nor rinse them under the tap.
3. Do not spill water or other liquid on the female power connector or power cord to avoid electric shock, or fire caused by short circuit.
4. To prevent electric shock and short-circuit, avoid any liquid from entering the main unit.
5. If the appliance or power plug and cord is damaged, it must be repaired or replaced by a qualified electrician to avoid a hazard, or the product must be disposed of.
6. Regularly inspect the appliance and power cord. DO NOT use an appliance that is damaged in any way. Stop using the appliance that malfunctions during use.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
8. Close supervision is necessary when the appliance is used near children.
9. Children should be supervised to ensure that they do not play with the appliance.
10. Keep the appliance out of reach of children.
11. Do not leave the appliance unattended when in use or when connected to mains power.
12. Use the appliance only on a dry, level, stable and heat-resistant surface only, away from any edges.
13. Do not let the cord touch hot surfaces, become knotted or hang from the edge of bench tops.
14. Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
15. DO NOT cover the air outlet when in use.
16. DO NOT place anything on top of the appliance.

IMPORTANT! Food should not be left in the inner pot with the Keep-Warm function for more than 12 hours.

NOTE: To avoid injury, malfunction or damage, do not tilt or move the unit during operation.

17. Keep the unit clear of walls, curtains, and other heat sensitive materials (leave a minimum clearance of 20cm from the sides and back of the appliance).
18. Do not use the appliance under overhead cabinets or presses. The hot steam may cause damage to glass splashback, cabinets or presses.
19. Do not place unit under shelving, cabinets or flammable materials when in use.

20. Do not operate the appliance without water.
21. Before connecting the appliance to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, DO NOT use the appliance.
22. This appliance must be connected to a three-point power outlet socket connected to Earth. If unsure, check with an electrician.
23. The appliance should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances, the appliance may not operate properly or activate the household circuit breaker/fuse.
24. This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
25. The use of accessories not recommended by the appliance manufacturer may cause serious injury and/or damage to the appliance.
26. This appliance is for household use only, not for commercial use. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
27. This appliance is intended to be used indoors in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments,
 - farmhouses,
 - by clients in hotels, motels and other residential type environments,
 - bed and breakfast type environments.
28. During cooking, hot steam is released through the steam vent. To avoid scalding, keep a safe distance from the steam vent.
29. Be careful of hot steam and air when opening the lid.



CAUTION! There is residual heat on the heating element after use.

CAUTION! Hot surfaces! Do not touch the pot or the inside of the appliance during use or immediately after use, they could get very hot. Only hold by using oven mitts.


30. For cleaning, please refer to CLEANING AND MAINTENANCE section.
31. Always allow the appliance to cool down completely before cleaning.
32. **To prevent risk of severe personal injury and/or property damage, use extreme caution when cooking.**
33. DO NOT use the pot on or under a flame or other direct heat source, including on a stove top, on a grill, or in a toaster oven.

WARNING: Avoid spillage on the connector.

WARNING: Potential injury from misuse.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

PARTS

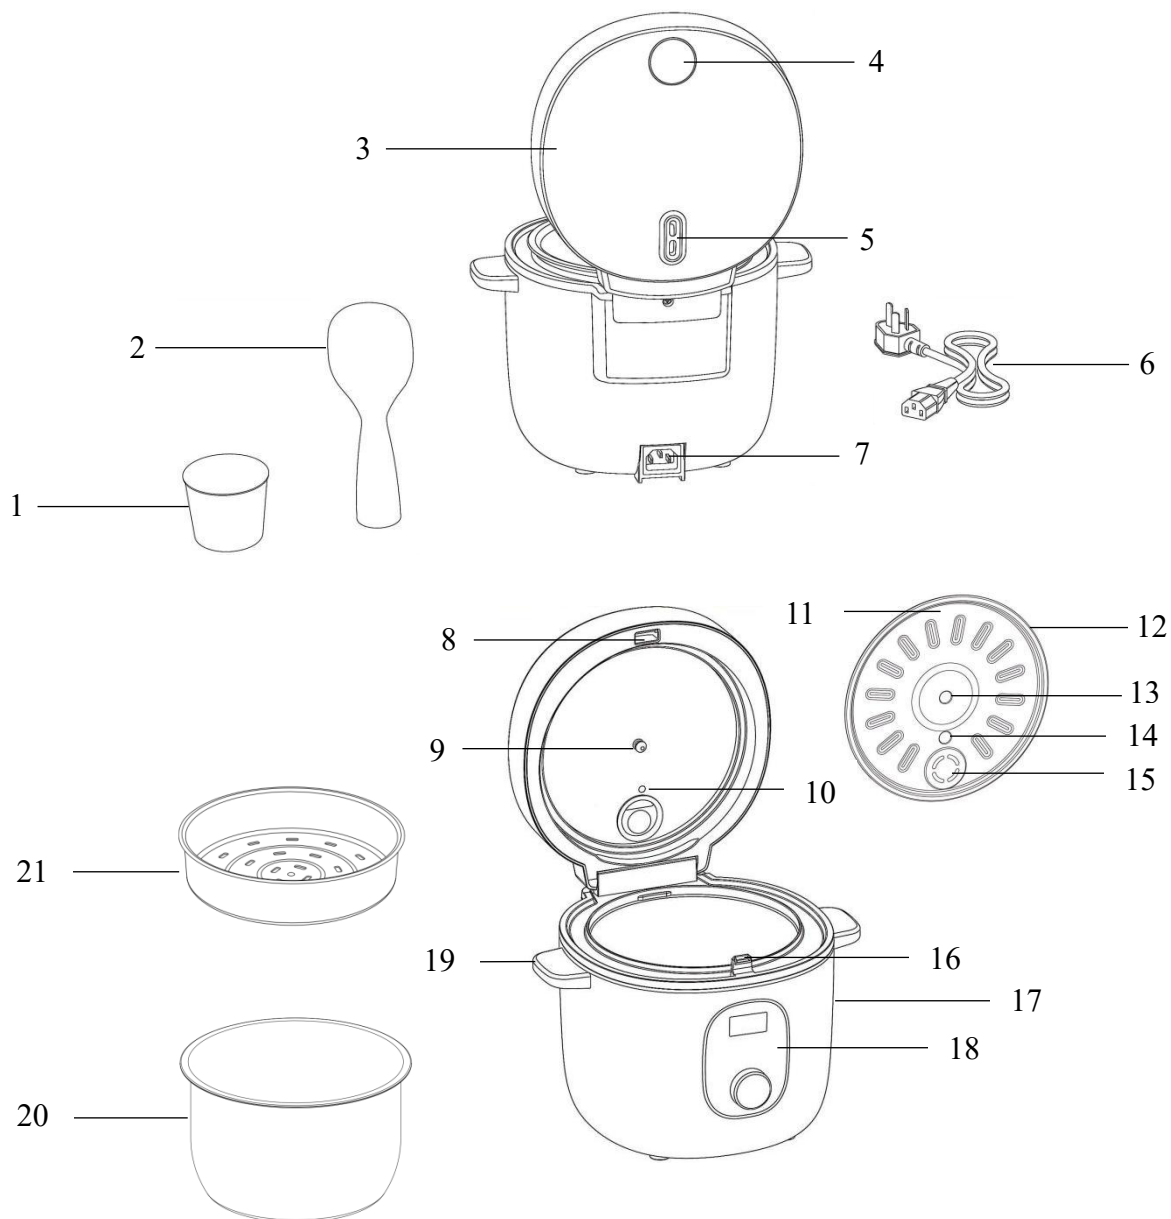


1. Measuring cup (160mL)
2. Spatula
3. Lid
4. Lid release button
5. Steam vent
6. Power plug and cord
7. Socket
8. Latch catch
9. Mounting post
10. Locating pin

11. Inner lid
12. Sealing ring
13. Silicone plug
14. Locating hole
15. Steam vent
16. Latch
17. Main unit
18. Control panel
19. Handle
20. Pot
21. Steam rack

IMPORTANT!

- Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to the respective customer service center.
- When using the appliance for the first time, carefully remove all packaging and dispose of them responsibly.

CONTROL PANEL

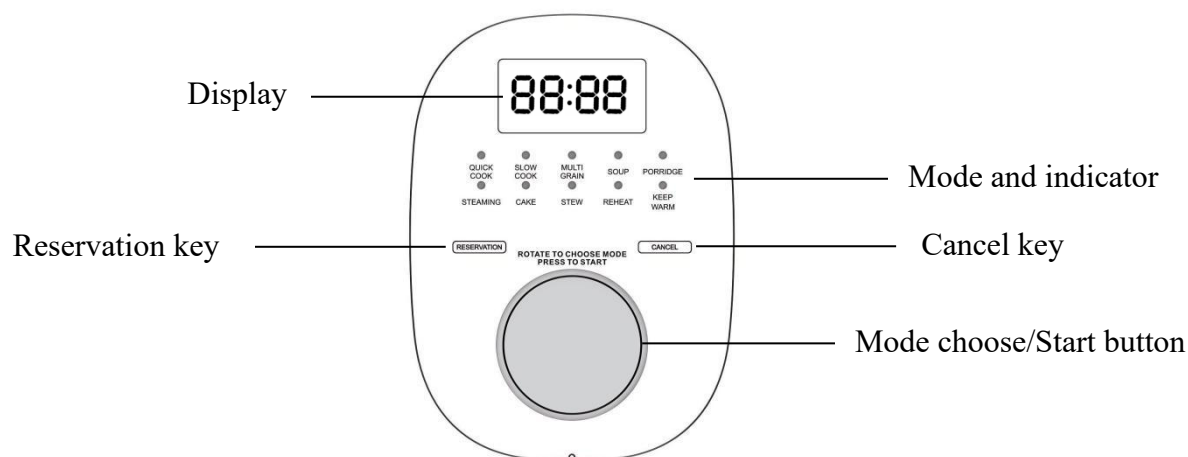

USE YOUR RICE COOKER

Prepare for use

1. Place the appliance on a stable, horizontal, flat and heat-resistant surface.

IMPORTANT! To prevent heat damage, place the appliance on a heat-resistant surface only. Not recommended to use directly on laminated/vinyl bench top. To prevent heat damage to the bench top, placing the appliance on an insulated heat pad is recommended.

2. Clean the appliance according to the instructions in the CLEANING AND MAINTENANCE section. Dry thoroughly.

Notes:

To detach the inner lid, grasp the silicone plug and take off the inner lid. To attach the inner lid, align the locating pin with the locating hole and push the inner lid until attached.

WARNING! Make sure inner lid is properly installed.

Use the appliance

1. Place the ingredients into the pot, wipe the outside of the pot with a dry cloth. put the pot into the appliance and close the lid until you hear a "click".

Refer to the table below for water level and default cooking time in each cooking mode. The scale is for reference only. The water quantity can be increased or decreased according to personal preference.

WARNING! Never exceed the highest water level mark on the pot.

Mode	Volume of rice (cup, approx. 150g/cup) put into the pot 	Add water to reach the level mark in the pot 	Cooking time
Quick cook Slow cook	1 full cup	1	Auto
	2 full cup	2	Auto
	3 full cup	3	Auto
	4 full cup	4	Auto
Grain	1	1.5	Auto
	2	3	Auto
Soup	/	1 (at least)	2.5 hours
Porridge	1/5 cup	1/5	1.5 hours
	2/5 cup	2/5	1.5 hours
	3/5 cup	3/5	1.5 hours
	4/5 cup	4/5	1.5 hours
Steam	/	1 (at least)	1 hour
Cake	/	/	Auto
Stew	/	1 (at least)	2 hours
Reheat	/	1 (at least)	Auto
Keep warm	/	1 (at least)	12 hours

2. Plug the power cord into the socket of the appliance, connect the appliance into a mains power outlet, "----" will display and the appliance is now in standby mode.

3. Touch the "reservation" key to set a reservation time if necessary. The reservation time is available from 30 minutes to 24 hours. 30 minutes will be added by each touch. The appliance will return to standby mode if no other function is selected within 5 seconds.

For optimal cooking results, a reservation time longer than 12 hours is not recommended.

Touch the "cancel" key to cancel the reservation function.

WARNING! Reservation times must not be applied to ingredients that are perishable and require refrigeration to maintain food safety and quality.

4. Rotate the Mode choose/Start button to choose a required mode, press the Mode choose/Start button to start cooking or the appliance will automatically start working in 5 seconds if no other mode is selected. The appliance will start cooking when the reservation time has elapsed.

The display shows the left reservation/cooking time or a flowing ring. The chosen mode indicator will flash during reservation time and light up when cooking. You can return to the standby mode by touching the "cancel" key. No other setting/operation can be done after the appliance starts.

5. When the reservation and cooking time elapsed, the appliance will return to standby mode under steam or cake mode, and switch to keep warm under all the other modes.

6. After using your appliance, remove the power plug from the mains power outlet and allow the appliance to cool down completely.

CAUTION! Beware of escaping steam from the appliance. Danger of scalding!

Notes

- Do not wash rice in the pot. Wash the rice in a separate bowl. Ensure rice has been thoroughly rinsed with cold water before cooking to prevent rice grains from sticking to the pot.
- Always ensure rice is spread evenly across the inside of the pot and not heaped to one side.
- When the rice is ready, stir the rice and leave it in the rice cooker for a few more minutes to get a better taste.
- Place the steam rack inside the pot to steam food.
- Fill the pot with sufficient water (approximately 70 mL per hour of cooking) and ensure the water does not evaporate completely during cooking.
- For best results, lightly grease the pot with vegetable oil or cooking spray before adding the cake batter.
- To cook a cake, grease the pot with a little vegetable oil or spray oil before adding the cake ingredients mixture into the pot.

TROUBLESHOOTING

Problem	Possible cause	Solution
E1 displays	Sensor damaged code	To be repaired by a qualified electrician.
E2 displays	Sensor short circuit code	
E3 displays	Overheating code	Allow the appliance to cool down completely, approx. 30 minutes and restart.

CLEANING AND MAINTENANCE

Clean the appliance after every use.

1. Remove the power plug and cord from the mains power outlet socket and allow the appliance to cool down completely before cleaning.
2. Cleaning:

WARNING! Do not use harsh abrasives, sharp objects, caustic cleaners or oven cleaners when cleaning this appliance.

parts	Cleaning method	Dishwasher safe
• Main unit • power plug and cord	• Wipe with damp cloth. WARNING! Do not immerse the main unit with lid, the power plug and cord in water or any other liquids to clean.	No
• Inner lid • Pot • Spatula • measuring cup	• Fill the pot with hot water and some dish-washing liquid, leave it to soak for about 10 minutes if necessary. • Clean with warm water and dish-washing liquid.	No

3. Make sure all parts are clean and dry thoroughly before storing or using it again.
4. Store the appliance in a safe, cool, dry place.

TECHNICAL SPECIFICATION

Voltage	220-240V~ 50-60Hz
Power	400W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.

Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
------------------------------------	-------------------------------------

Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us
---	---