



Food Steamer

YB-5010

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. Always turn the appliance OFF and remove the plug when not in use, before attempting to move the appliance and before cleaning.
2. Never immerse the main unit and power plug and cord in water or any other liquid. To prevent electric shock and short-circuit, avoid any liquid from entering the appliance.
3. Make sure that your steamer is used at least 50cm away from a gas flame or electric element.
4. Do not cover the appliance whilst in operation. Do not use the appliance in confined spaces.
5. When removing the lid during cooking, open the lid and angle away from your body.
6. If the appliance or power plug and cord is damaged, it must be replaced by a qualified electrician, or the product must be disposed of.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Do not leave the appliance unattended when in use or when connected to mains power.
10. Do not let the cord touch hot surfaces, become knotted or hang from the edge of bench tops.
11. Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
12. Keep the unit clear of walls, curtains, and other heat sensitive materials (leave a minimum clearance of 20cm from the sides and back of the appliance).
13. Never fill water above the Max level mark in the water tank.
14. Do not touch the appliance while it is operating or immediately after use.
15. Do not use the appliance for any other purpose than described in this manual.
16. Before connecting the appliance to mains power, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, DO NOT use the appliance.
17. This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
18. The use of accessories not recommended by the appliance manufacturer may cause serious injury and/or damage to the appliance.
19. This appliance is for household use only, not for commercial use. Do not use in moving vehicles or boats. Do not use outdoors.
20. **Warning:** Potential injury from **misuse**.
21. The heating element surface is subject to **residual heat after use**.

22. This appliance is intended to be used indoors in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments,
 - farmhouses,
 - by clients in hotels, motels and other residential type environments,
 - bed and breakfast type environments.
23. Hot steam is released through the steam outlet during operation. To avoid scalding, keep a safe distance from steam.



CAUTION! Hot surfaces. Do not touch the appliance during use or immediately after use, the appliance gets very hot. Always use oven mitts.

24. For cleaning, please refer to CLEANING AND STORAGE section.


IMPORTANT!

25. Use the appliance only on a dry, level, stable, and heat-resistant surface only, away from any edges.
26. Do not use the appliance under overhead cabinets or presses. The hot steam may cause damage to glass splashback, cabinets or presses.
27. This appliance must be connected to a three-point power outlet socket connected to Earth. If unsure, check with an electrician.
28. Always unplug the power cord from the mains power outlet socket when the appliance is not in use.
29. Always allow the appliance to cool down completely before cleaning.

WARNING! To prevent risk of severe personal injury and/or property damage, use extreme caution when cooking.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR FOOD STEAMER

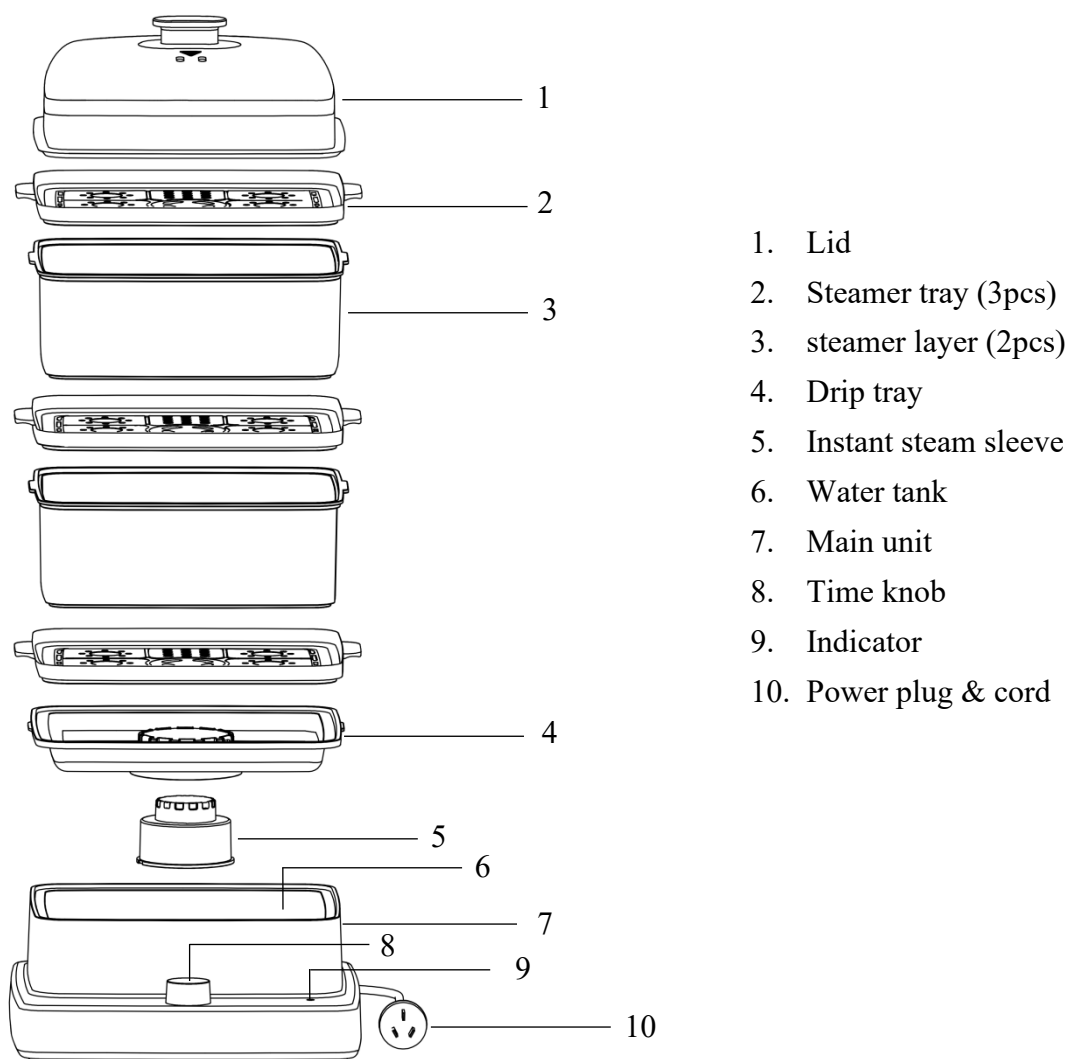

IMPORTANT!

- Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product back to place of purchase for replacement.
- When using the appliance for the first time, carefully remove all packaging and dispose them responsibly.

BEFORE FIRST USE

WARNING!

- Do not immerse the main unit, the power plug and cord in water or any other liquids to clean.
 - Do not use harsh abrasives, sharp objects, caustic cleaners or oven cleaners when cleaning this appliance.
1. Clean the lid, drip tray, instant steam sleeve, steamer trays and layers with warm water and use a non-abrasive sponge with dish-washing liquid.
 2. Clean the inside and outside of the main unit with a slightly dampened cloth and polish it with a soft dry cloth.
 3. Make sure all parts are clean and dry.
 4. Assemble and place the appliance on a stable, horizontal, flat and heat-resistant surface.

The appliance is now ready for use.

HOW TO USE YOUR FOOD STEAMER

1. Place the appliance on a stable, horizontal, flat and heat-resistant surface.
2. Fill the water tank no higher than the "MAX" water level mark, 1350mL. Place the drip tray in place.

NOTE: the consumption of water is approx. 23mL per minute, fill proper amount of water according to the cooking time.


WARNING! Use only clean water in your steamer. Do not use wine, stock or other liquids.

3. Put food on the steamer trays, put on the lid.

Notice:

- If steaming food with sauce or liquid, use a bowl (not supplied) and place the bowl of food on the steamer tray.
 - Put meat, poultry, and seafood in the lower tray, put vegetables, rice and fruits on the upper tray.
4. Connect the supply cord plug into a mains power outlet socket. The indicator will light up in red, and the appliance is now in standby mode.
 5. Turn the time knob to set the required minutes. Once set, the indicator light will turn green and the appliance will begin operation.

NOTE: Refer to the steam guide printed on the control panel for quick reference:

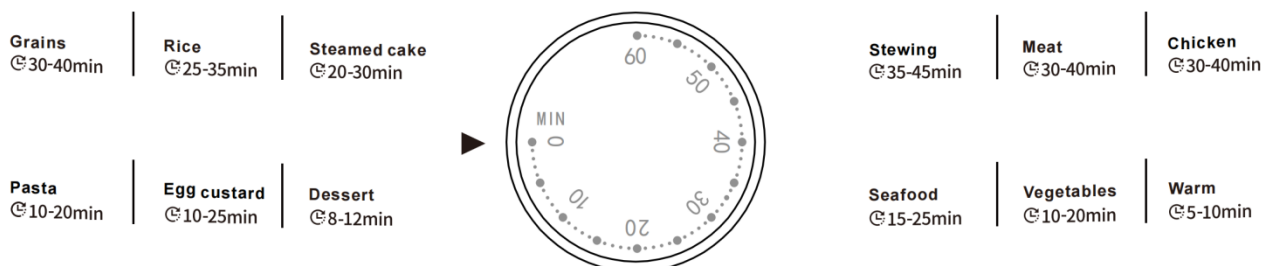

IMPORTANT! Never leave the appliance unattended when in use.

6. A bell will sound when the set time has elapsed and the steamer will stop working automatically. Remove the plug from the power outlet.
7. Remove the lid and the steamer trays to serve the food.

Notice:

- Remove the lid by tilting it away from you to ensure steam is safely released without scalding.
- Hold the lid over the steamer to allow the condensation to drain into the unit before removing completely.

CAUTION!

- Do not touch the appliance during use or immediately after use, the pan gets very hot. To avoid burns use oven mitts during handling.
- Beware of escaping steam from the appliance. Danger of scalding!

Tips:

- The steaming time is different for different sizes, quality and temperature of food.
- The temperature of water used for steam affects the steaming time.
- Foods of uniform size will steam at a similar rate.
- Arrange the food evenly on the steamer tray to get a better experience.
- Remove food immediately after cooking is completed to get the best flavor.

CLEANING AND STORAGE

1. Clean the appliance after every use.
2. Remove the power plug and cord from the mains power outlet socket and allow the appliance to cool down completely before cleaning.

WARNING!

- Do not immerse the main unit, the power plug and cord in water or any other liquids to clean.
 - Do not touch hot surfaces.
 - Do not use harsh abrasives, sharp objects, caustic cleaners or oven cleaners when cleaning this appliance.
3. Clean the lid, drip tray, instant steam sleeve, steamer trays and layers with warm water and use a non-abrasive sponge with dish-washing liquid.
 4. Clean the inside and outside of the main unit with a slightly dampened cloth and polish it with a soft dry cloth.
 5. Make sure all parts are clean and dry before storing or using it again.
 6. Store the appliance in a safe, cool, dry place.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 1000-1200W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us