



**Portable USB Salad Spinner
D001
User Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.



1. This appliance must only be supplied by AS/NZS 61558.1 & AS/NZS 61558.2.16 certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
2. After charging, when unplugging the plug, please grab by the plug when pulling it out. Do not pull from the cable.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Cleaning and user maintenance shall not be done by children without supervision.
6. Stay away from flammable and explosive substances at any time.
7. Keep hair, loose clothing, and all parts of the body away from moving parts.
8. To protect against a fire, electric shock or personal injury, do not immerse the main unit or the USB cable in water or other liquids.
9. Do not touch the USB cable or the appliance with wet hands.
10. Use the appliance only on a dry, level, stable surface only, away from any edges.
11. Use of accessories not supplied with the product may cause fire, electric shock or personal injury.
12. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
13. Do not leave the appliance unattended when in use.
14. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
15. This appliance is for household use only, not for commercial use.
16. This appliance must always be used in accordance with the user instructions supplied with the product and must not be used for other purposes.
17. Misuse may cause serious injury.
18. Turn OFF the appliance and make sure the appliance comes to a complete stop before detaching parts.
19. This appliance contains batteries that are non-replaceable.
20. For charging, please refer to BEFORE FIRST USE section.
21. For operation time, please refer to USING YOUR SALAD SPINNER section.
22. For cleaning, please refer to CLEANING AND STORAGE section.

CAUTION!

23. The product has built-in lithium-ion batteries. Pay attention to the following:
 - a) Only use and store the product in an environment where the temperature is between -5°C and $+35^{\circ}\text{C}$.
 - b) If not used for a long time, recharge every three months to prevent battery damage.
 - c) Charging time may be longer when the room temperature is below 10°C .
 - d) Charge the battery when the battery power goes low, avoid allowing the battery to go flat.
24. DO NOT squeeze, puncture, or short circuit the product or put it into fire.
25. Do not expose the product to high temperatures (above $+35^{\circ}\text{C}$), strong magnetic fields, near flammable and explosive gasses (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR SALAD SPINNER

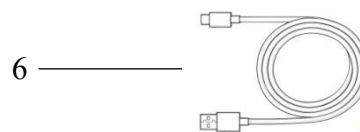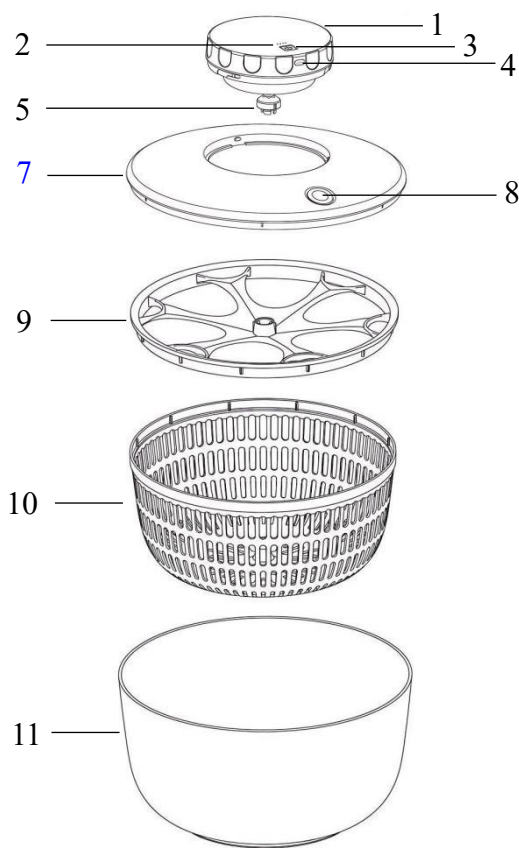

1. Main unit
2. Indicator light
3. On/Off button
4. Charging port
5. Drive shaft
6. USB cable
7. Lid
8. Stop button
9. Spinner lid
10. Basket
11. Bowl

IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to the respective customer service centre.

When using the appliance for the first time, carefully remove all internal and external packaging and dispose of them responsibly.

BEFORE FIRST USE

- Fully charge the appliance before first use.
- The supplied USB charging cable should be inserted into a standard USB power source rated at 5Vd.c. 2A specification.

WARNING! Use only the supplied USB charging cable to charge the appliance.

- One of the indicator lights flashes when charging. 1 indicator light illuminates when 25% charged, 2 indicator lights illuminate when 50% charged, 3 indicator lights illuminate when 75% charged, and all the 4 indicator lights illuminate when fully charged.

Note: The appliance can't be used when charging.

- The charging time is approx. 2.0 hours.
- After being fully charged, the product can work up to approx. 1 hour.

USING YOUR SALAD SPINNER

1. Clean the appliance as stated in CLEANING AND STORAGE section.
2. Align the slot of the drive shaft with the ribs in centre of the spinner lid and push in place, put the basket in the bowl.
3. Distribute maximum 500g of vegetables (for example cut 500g carrots into strips, rinse with water and then put them in the basket) or fruits in the basket evenly. Put the main unit with the spinner lid on the bowl, make sure the main unit with spinner lid fits the bowl and basket well.

WARNING! Do not overfill. Leave at least 1/3 space for spinning.

4. Press the On/Off button to start draining. Hold the cover with bowl firmly during operation.

The indicator light shows the left battery capacity:

4 indicator lights illuminate	75%~100%
3 indicator lights illuminate	50%~75%
2 indicator lights illuminate	25%~50%
1 indicator light illuminates	0~25%

5. The appliance will automatically turn off after 20 seconds. You can also press the On/Off button to turn off the appliance at any time. The basket will keep running for another 10 seconds after the appliance is turned off, press and hold the stop button to stop the basket at once.
6. Remove the main unit with the spinner lid, take out the basket and pour out water in the bowl.

CLEANING AND STORAGE

Clean the appliance after every use.

1. Turn off the appliance and make sure the USB cable is disconnected before cleaning.
2. Detach the main unit with spinner lid until the appliance comes to a complete stop, pull off the spinner lid from the main unit, rotate anticlockwise the detach the main unit from the lid.
3. Cleaning:

WARNING! Do not use harsh abrasives, sharp objects, caustic cleaners or oven cleaners when cleaning this appliance.

Parts	Cleaning method	Dishwasher safe
• Main unit • power plug and cord	• Wipe with damp cloth. WARNING! Do not immerse the main unit with lid, the power plug and cord in water or any other liquids to clean.	No
• Lid • Spinner lid • Basket • Bowl	• Clean with warm water and dish-washing liquid.	No

4. Make sure all parts are clean and dry thoroughly before storing or using it again.
5. This product contains a Li-ion battery. It should be stored in a clean, dry, ventilated room with an ambient temperature range of -5°C to $+35^{\circ}\text{C}$ and a relative humidity of 25% to 75%.

TECHNICAL SPECIFICATION

Input: 5Vd.c. 2A

Battery: Li-ion 3.7V 1500mAh

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us