



**Hanging Garment Steamer**

**MW-830G**

**User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## IMPORTANT SAFE INSTRUCTIONS

When using any electrical product, always follow these basic safety precautions:



### READ ALL INSTRUCTIONS BEFORE USE.


Read this user manual carefully before first use and save it for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer is not responsible, and the guarantee will not apply.
- Before connecting your appliance, check if the mains voltage is the same as the voltage indicated on your appliance and that the power outlet has an earth connection. If unsure, check with an electrician.
- Before each use, ensure that the electric cord or any other parts on the appliance are not damaged.
- Keep the iron and its cord out of reach of children when it is connected to mains power or cooling down.
- Never direct the steam towards people or animals. Never direct steam towards any other electrical or/and electronic appliances.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- If the appliance shows evidence of damage, malfunction, water leaks or other abnormality, DO NOT use.
- Always make sure the appliance is switched off, unplugged and cooled down before cleaning.
- **IMPORTANT! The appliance must not be left unattended while it is connected to mains power and before it has cooled down.**
- Do not unplug the appliance by pulling on the cord or on the appliance.
- Never immerse the main unit, the Sole plate, the cable or cord plug in water. Never wash them under a water tap.
- The sole plate of the appliance can become extremely hot and may cause burns if touched. Do not allow the supply cord to come in contact with the sole plate.
- **CAUTION! For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrical person only to avoid a hazard, or the product must be disposed of.**
- The iron must be used and rested on a flat, stable surface.
- When placing the appliance on its stand, ensure that the surface on which the stand is placed is stable.
- The iron must not be stored until it has cooled.

- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- Care should be taken when using the appliance due to the emission of steam.
- Unplug the appliance during filling and cleaning.
- IMPORTANT! To avoid damage or blockage of the steam iron, do not use any scented water or additives.
- Remove the plug from the mains power outlet socket and allow the appliance to cool down completely before cleaning.
- WARNING! Do not use alcohol, acetone, benzene, scouring cleaning agents etc. to clean the appliance.
- Never use a hard brush or metallic pad to clean the Sole plate and never place the appliance on a rough surface.
- For cleaning, please refer to the "CLEANING AND MAINTENANCE" section.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## KNOW YOUR HANGING GARMENT STEAMER

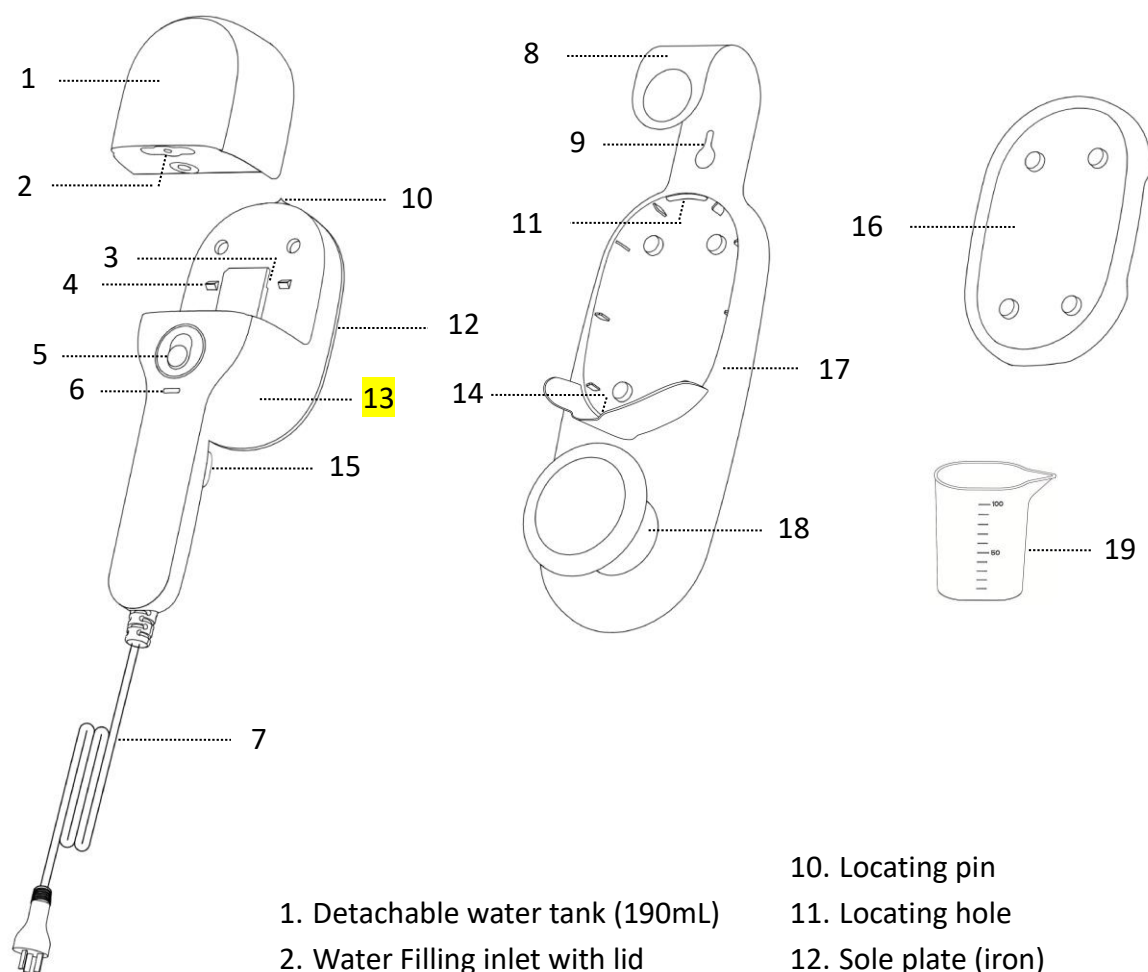

1. Detachable water tank (190mL)
2. Water Filling inlet with lid
3. Water tank guide rail
4. Water tank latch
5. Steam set button
6. Indicator
7. Power plug & cord
8. Hanger hook
9. Hanger hole

10. Locating pin
11. Locating hole
12. Sole plate (iron)
13. Main unit
14. Bracket clip
15. Burst steam trigger
16. Iron stand
17. Hanging holder
18. Cord winder
19. Measuring cup (100mL)


## BEFORE FIRST USE

- Unpack the appliance and check if all parts are there and undamaged. If any parts are missing or damaged, do not use. Return the product to the respective customer service centre for replacement.
- Clean all parts before first use. See "CLEANING AND MAINTENANCE" section.
- Heat up the iron and iron over a piece of damp cloth for several minutes. This will burn-off any manufacturing residue from the iron. Smoke and odour may occur for a short period during this process, which is normal.

## OPERATION

### Station the hanging holder

- You can mount the hanging holder on a horizontal pole by the hanger hook.
- Or hang it on a wall nail via the hanger hole.
- Make sure the hanging holder is at a suitable height and confirm it is securely hung.

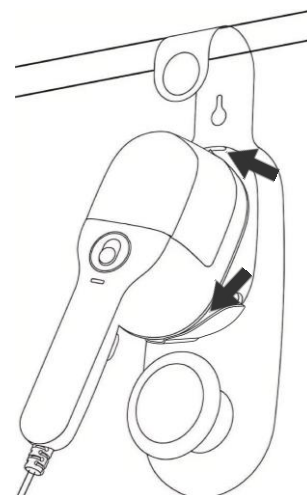


### Hang and take off the steamer

- Hold the handle of the steamer, insert the locating pin into the locating hole of the hanging holder, hold the hanging holder firmly with another hand if there is nothing to lean against, and push the steamer into the holder until the sole plate is locked by the bracket clip of the holder.
- Pull the handle to take off the steamer from the holder.

### Filling the water tank

- Ensure that the iron is cold and not connected to the power supply.
- To detach or attach the water tank, pull or push the water tank along the guide rail on the main unit.
- Open the lid of the water filling inlet and fill the water tank with plain water.
- Put on the lid tightly. Attach the water tank to the main unit. Make sure the water tank fits perfectly into the main unit.

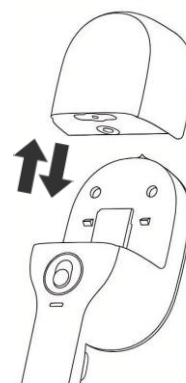

Notice: To avoid calcium deposits, distilled water is recommended to be used for the appliance.

**IMPORTANT!** To avoid damage or blockage of the steam iron, do not use any scented water or additives.

**IMPORTANT:** Always follow the garment's ironing instructions when using the steamer/iron. Failure to do so may cause fabric damage, shrinkage, discoloration, or void the garment's care warranty.

### Use the steamer/iron

**WARNING!** To protect against burns or injury to people, do not iron or steam fabrics while being worn on the body. Do not direct steam towards the body.

Notice:

- Always follow the recommended ironing instructions found on the garment.
- When operating the garment steamer for the first time, you may try the steamer/iron on an old piece of fabric before steaming your garment.
- The temperature of steam can reach 100°C. Ensure that the material is high-temperature resistant before steaming/ironing. Do not leave the sole plate/iron on the same spot for too long to avoid damaging the garment.

1. Make sure the steamer is in the iron stand and the steam set button at position .
2. Connect the plug to a mains power outlet. The indicator flashes, indicating that the appliance is heating up.
3. The steam/iron function is ready when the indicator lights up. Dry iron or use the button to set your desired steam volume. Use burst steam trigger if required.
4. Hold the garment or fabric material with one hand, and the steamer with another hand to steam/iron.
5. When finished using the steamer, push the steam set button to  and disconnect the appliance from mains power supply.
6. Let the iron cool down and empty the water tank to prevent any residue building up in the water tank.

|                                                                                   |                   |
|-----------------------------------------------------------------------------------|-------------------|
|  | No steam          |
|  | Low volume steam  |
|  | High volume steam |
|  | Burst steam       |

## CLEANING AND MAINTENANCE

1. Remove the plug from the mains power outlet socket and allow the appliance to cool down completely before cleaning.

### WARNING!

- Do not use alcohol, acetone, benzene, scouring cleaning agents etc. to clean the appliance.
  - Do not immerse the main unit in water or other liquids.
  - Do not use hard brushes or metallic objects.
2. Clean the plastic parts of the main unit with a damp cloth. Use a mild detergent if necessary.
  3. Remove any deposits on the Sole plate with a damp cloth. To avoid scratching the finishing, never use a metallic pad to clean the Sole plate and never place the iron on a rough surface. To remove synthetic residue from the Sole plate, iron over an old cotton rag.
  4. Clean the water tank, hanging holder and iron stand with water.
  5. Make sure all parts are clean and dry before storing or using them again.
  6. Attach the emptied steamer to the hanging steamer holder in a cool, dry place.

## IRONING TIPS

**IMPORTANT!** Always check whether a label with ironing instructions is attached to the garment. Always follow the ironing instructions attached to the garment.

- Silk and other fabrics that are likely to become shiny should always be ironed on the inner side.
- Velvet and other textures that rapidly become shiny should be ironed in one direction with light pressure applied. Always keep the iron moving at all times.

- Pure wool fabrics (100% wool) may be ironed with the iron set to steam position. Preferably set the steam button to the maximum position and use a dry cloth between the garment and the iron for protection.
- Do not touch plastic buttons on the garment with a hot iron because they may melt.
- Be careful around zippers and similar items to prevent the Sole plate from scratching.

## TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 1200-1400W

## 12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

| Contact for Kmart purchases                                                                                                                                                                                                                                        | Contact for Target purchases                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Kmart Australia Ltd.<br>C/- Customer Service Centre<br>L2/ 1 Middle Road, Chadstone Vic 3148<br>Australia<br>Customer Service: 1800 124 125 (Australia)<br>or 0800 945 995 (New Zealand)<br>or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a> | Target Australia Pty Ltd<br>C/- Customer Service Centre<br>L2/ 1 Middle Road, Chadstone Vic 3148<br>Australia<br>Customer Service: 1300 753 567<br>or via Customer Help at<br><a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a> |