



## Grooming Kit Triple Pack User Manual



Hair Clipper RFC-1674  
Beard Trimmer RFC-1670  
Nose Trimmer MS-011

**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## IMPORTANT SAFETYGUARDS

To ensure proper operation of this appliance, please read this instruction manual completely and carefully before using the appliance and keep it for future reference.

### **WARNING!**

1. Only use the appliance as described in this manual.
2. The Rechargeable clipper/ trimmer contains batteries that are non-replaceable.
3. To protect against the risk of electric shock, DO NOT immerse the appliance, USB cable in water or other liquid.
4. DO NOT store the product near sinks, baths or showers containing water or near running water.
5. Always check the appliance for damage prior to use. If any damage is observed, do not use the appliance.
6. The appliance is intended for indoor use only.
7. Always switch the appliance OFF after use.
8. This appliance has no user serviceable parts. Do not disassemble the Appliance.
9. This appliance is for personal use only, not designed for commercial use.
10. Do not use it outdoors.
11. Do not use the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
12. Before using the appliance, ensure that the trimmer and clipper head are securely fitted and not damaged.
13. Keep the appliances, accessories and USB cable out of reach of young children.
14. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. Only Charge the Appliance with the USB cable supplied with the appliance.
17. Only Charge the Appliance from an Extra Low Voltage Battery Charger (not supplied) with an output rating 5Vd.c. 1A, same as indicated on the appliance's rating label.
18. When charging the appliance, the appliance must be switched off.
19. Use only attachments provided with the product.
20. This product contains sharp blades, please take utmost care during handling and use.
21. Do not replace the batteries with non-rechargeable batteries.
22. To avoid personal injury, do not use the appliance with a damaged trimmer head or blade.
23. The appliance must be used only with attachments provided with the product.



**WARNING: Do not recharge non-rechargeable batteries.**



**WARNING: Before charging the product, please make sure your hands are dry.**



**WARNING: Only use the USB cable supplied with the appliance. Use of other cable may cause electrical failure and/or fire.**

## PERSONAL SAFETY

- Never use the appliance on any part of the body other than trimming the hair.
- **IMPORTANT!** Do not use the appliances if the cutting head is split or broken.
- Never leave the appliance unattended while switched ON.
- Always ensure that the hands are dry before operating or when switching it ON or OFF.



### WARNING

Only use the USB cable that was supplied with this Appliance.

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

Never try to charge non-rechargeable batteries as they may explode or catch on fire or cause personal injury and/or damage to property.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable, Do Not open the appliance.
- Do not use or store in temperatures above 40°C.



At the end of the appliance's life, it must be disposed of correctly.

 
Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling programmes.

**Read and Save These Instructions For Future Reference**

## KNOW YOUR GROOMING KIT


### Hair Clipper

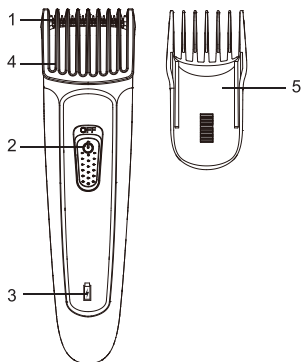

#### Part name:

1. Blade
2. ON/OFF switch
3. Indicator light
4. Short comb
5. Long comb

 
### Beard trimmer

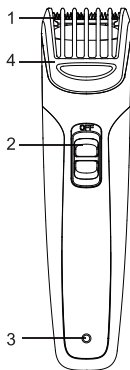


#### Part name:

1. Blade
2. ON/OFF switch
3. Indicator light
4. Comb
 
## Nose Trimmer (Battery operated - 1x AA battery required)

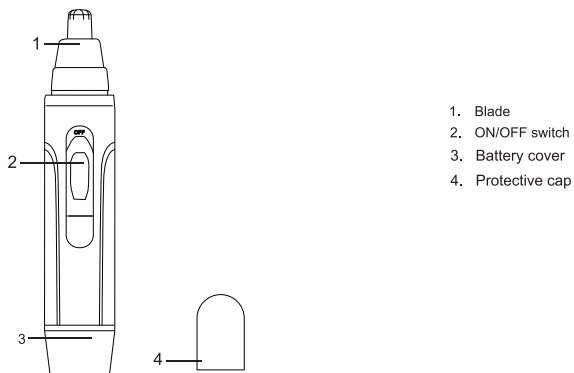

## Other Parts

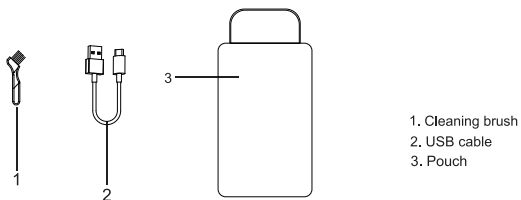 

## CHARGING THE HAIR CUT & TRIMMER

**IMPORTANT:** This Appliance contains a built-in lithium-ion battery which must only be charged using the supplied USB cable.

Always switch off and unplug the USB cable when charging is completed or when not in use. DO NOT allow to charge for more than 2 hours.

Normal charge takes approximately 1.5 hours.

If any abnormality occurs during charging, (such as burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable.

**IMPORTANT:** The Appliance must be fully charged before first use.

- Take the USB Cable and fully unravel it before using it to charge the Appliance.
- Plug the small end of the USB cable directly into the bottom of the appliance.
- Plug the large end of the USB cable into your 5Vd.c. 1A USB charger (not supplied) and switch it ON.
- The Charging Indicator light will illuminate in RED, indicating the battery is charging.
- When full charged, the Charging indicator will light up in GREEN.
- Unplug the USB charging cable from the appliance.

## OPERATION



**WARNING:**

Switch off the device before replacing or changing the attachments



**NOTES:**

The hair to be dressed must be dry.



**NOTES:**

 
 
The cutting length may deviate depending on the cutting angle. Please start with a comb attachment with a longer cutting length and then use shorter cutting lengths step by step during the cutting process.

## Hair Clipper


Two comb attachments are available, they can be adjusted from 1-15mm and 15-30mm

To install or remove the comb attachments:

- Make sure the clipper is turned OFF.
- The comb lock switch at back shall be in UNLOCK position.

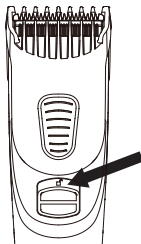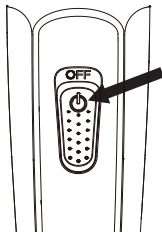

 - Gently slide or clip the comb attachment onto the main body as shown below.
- Once fitted, you can push the comb to adjust the cutting length.
- To detach the comb, gently pull the comb upwards to remove it.

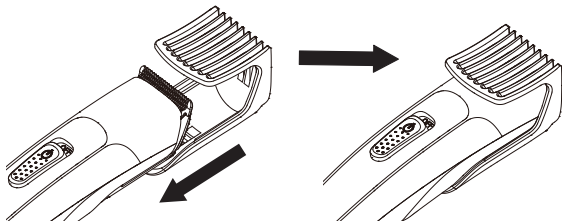

- To avoid the comb from moving, ensure the comb lock switch is in LOCK position before trimming.

#### Using the Hair Clipper:


- Turn ON the clipper.
- Start by cutting hair on the neck or on the sides and cutting towards the center of the head. Then, cut the front section of the hair towards the center of the head.
- Hold the device so the comb attachment rests flat on the head. Move the device evenly through the hair.
- If possible, cut against direction of hair growth.
- To catch all the hair, move the device several times through the same section of the hair.
- Comb the hair repeatedly and well.

## Beard Trimmer

### CAUTION!

**Risk of injury!** Handling the trimmer improperly may result in injury.

 1. Attach the Comb attachment to the main unit, same as hair clipper.
2. Adjust comb attachments with desired length, it can be adjusted from 2-18mm.
3. To avoid the comb from moving, ensure the comb lock switch is in LOCK position before trimming.

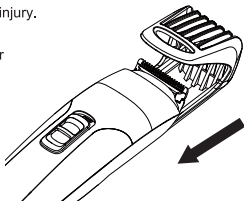

#### Using the Trimmer

- Comb the beard in the direction of growth.
- Cut the beard from the ear to chin downward.
- Use the beard trimmer attachment without the comb attachment will cut the beard very short or to cut the moustache and hairline

## Nose/Ear Trimmer

**WARNING! Do not insert it too deep to avoid injuries.**

Clean the nostril and ear canal after trimming.

 
1. Slowly insert the metal tip into one of your nostrils or ears.
2. Move the device in circles to cut the hair.

### BATTERY INSTALLATION

- Battery cover is locked when the alignment indicator "I" is pointed to "●".
- Rotate the battery cover to align symbol "I",
- Pull to detach the battery cover.

#### Battery installation

- Insert one AA battery, following the instructions in the battery compartment. Close the battery cover, rotate to lock position.

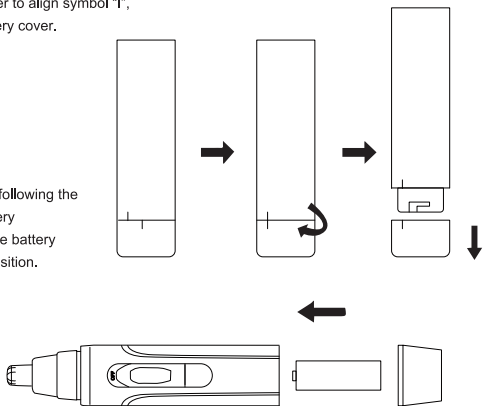


## CLEANING AND MAINTENANCE


Make sure the appliance is disconnected from the USB cord and switched off.

**Caution! Blades are sharp. Please be careful when handling and cleaning!**

 - Remove the accessory.
- Note: the blade of the clipper/trimmer can be disassembled.
- To remove the blade, hold the trimmer and press the blades out with your thumb and support the blades at back to avoid falling.

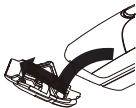

Detach the blade head

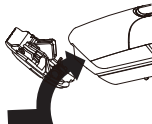 

Install the blade head

- Clean with the cleaning brush supplied, then rinse the blade head and other attachments under a tap in cold water.
- CAUTION! Do Not immerse the main unit in water or other liquid.
- Use a damp cloth to clean the main unit then dry it thoroughly.
- Allow all the parts dry, assemble the blade to the trimmer.
- The cutting blades should be slightly oiled after cleaning.
- Place the protective cap on the clipper head.
- Store the appliance in a cool, dry location.

### Lubrication

The trimmer requires regular lubrication to keep the blades running smoothly and to extend their lifespan.

Use a drop of the sewing machine oil (not supplied) every few months, apply directly onto the blades.

Turn on the appliance for a few seconds, allow the blade to get fully lubricated.

## TECHNICAL INFORMATION

|                 |                              |                              |
|-----------------|------------------------------|------------------------------|
| Model no.       | RFC-1674                     | RFC-1670                     |
| Working time    | Approx. 90 minutes           | Approx. 60 minutes           |
| Charging time   | Approx. 90 minutes           | Approx. 90 minutes           |
| Input           | 5V==1.0A                     | 5V==1.0A                     |
| Battery type    | Li-ion, 600mAh, 3.7V x1 cell | Li-ion, 350mAh, 3.7V x1 cell |
| Water resistant | Non water resist             | Non water resist             |

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

| Contact for Kmart purchases                                                                                                                                                                                                                                          | Contact for Target purchases                                                                                                                                                                                                                                   |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Kmart Australia Ltd.<br>C/- Customer Service Centre<br>L2/1 MIDDLE ROAD, CHADSTONE VIC<br>3148 AUSTRALIA<br>Customer Service: 1800 124 125<br>(Australia) or 0800 945 995<br>(New Zealand) or via<br>Customer Help at <a href="http://kmart.com.au">kmart.com.au</a> | Target Australia Pty Ltd<br>C/- Customer Service Centre<br>L2/ 1 MIDDLE ROAD, CHADSTONE VIC<br>3148 AUSTRALIA<br>Customer Service: 1300 753 567<br>or via Customer Help at<br><a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a> |