




TEPPANYAKI GRILL

Instruction Manual

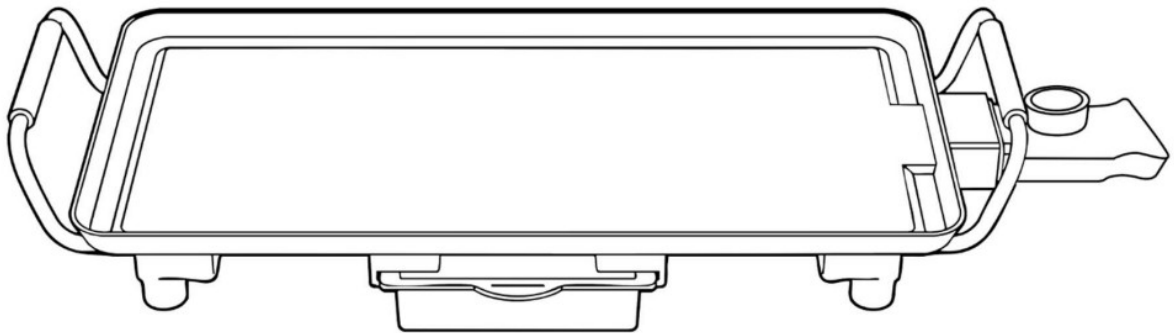

Model No.: ATG505

To ensure the proper operation of this product, please read this instruction manual carefully before using the product and keep it for future reference.

Important Safeguards



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions onto the next owner of this product.

Explanation of Symbols



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.



CAUTION: HOT SURFACE! The surfaces are likely to get hot during use.

READ ALL INSTRUCTIONS

When using an electrical product, to reduce the risk of personal injury or damage to property, basic safety precautions must be followed, including the following:

- **Limited to household use only:** This product is intended for and limited to household use only. Do not use it outdoors, where aerosol (spray) products are being used or where oxygen is being administered.
- **Intended purpose:** Do not use this product for anything other than its intended purpose and only use it as described in this manual.
- **Accessories:** Never use any accessories or parts not included with the product.
- Do not spray water directly on to equipment containing electrical components.
- No naked flame sources, such as candles, should be placed near the product.
- The voltage indicated on the rating plate must correspond to the supply voltage.

WARNING! Do not operate in areas where petrol, paint or other flammable liquids are used or stored.

WARNING! This product heats up whilst in use. To avoid burns, do not let bare skin touch hot surfaces.

- Switch off the product, remove the plug from the wall socket and allow to cool completely before moving.
- Never use this product below wall cupboards or shelving.
- Only use the temperature control probe supplied.

CAUTION! Never use wet hands to touch the mains plug.

- Do not operate with the cord coiled up as a build-up of heat may occur.
- Do not remove the plug from the wall socket until the product has been switched off.
- Always unplug the product when it is not in use.
- Do not allow the cord to come into contact with heated surfaces during operation.
- Do not allow the power cord to hang over the edge of a table or bench top or touch any hot or sharp surfaces.
- Never wrap the cord tightly around the product.
- Do not put any stress on the cord where it enters the product as this could cause it to fray and break.
- Never leave the product unsupervised. To protect children from the dangers posed by electrical products, make sure that the cable is hanging low and that children do not have access to the product.

WARNING! Do not use this product near an open window as rain may cause electric shock.

- Do not use this product outdoors or on a damp floor.
- Do not use the product for any purpose other than its intended use.

WARNING! Always allow at least 20cm of space around the exterior of the product when it is in use. Never use near curtains, under cupboards or near flammable materials.

WARNING! DO NOT immerse the grill in water. It is important to keep the electrical inlet connections out of water. If the inlet connectors do become wet, ensure that they are thoroughly dried and clean before use.

- Do not use this product with a damaged cord or plug, after a malfunction or if it has been dropped or damaged in any manner.
- **NOTE!** This product is to be used by adults. This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- Do not allow children to play with the product or the packing film. Danger of suffocation.
- Never let children use electrical products unsupervised.
- Do not place the product on or near a flammable or hot object.
- Some products are "sealed" using tamperproof screws to avoid tampering/maintenance by unskilled or unqualified persons and also for safety reasons.
- Always disconnect the product from the power outlet and allow it to cool down before cleaning.
- Do not store the product whilst it is still hot.
- Do not use this product in the immediate surroundings of a bath, shower, or swimming pool.
- This product is not intended to be operated by means of an external timer or separate remote-control system.
- Only use the thermostat with model no.: CTW-300M that is provided with this product.
- The thermostat must be removed before the product is cleaned and the product must be dried before using it again.
- For the details of the cleaning process of the cooking surface, please refer to section "Cleaning and Maintenance".
- This product is for household use only; it is not intended for commercial use. Only use the product for domestic purposes in households or similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - Farmhouses.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.

WARNING! DO not cover the product when it is in operation or during storage.

- The product has a non-stick coating. Do not use steel wool or other abrasive scourers to clean the grill.

WARNING! Charcoal or similar combustible fuels must not be used with the product.

- This product is for indoor use only.
- Do not operate the product near curtains, blinds, drapes or in the bathroom.
- To disconnect, grip the plug and pull it from the wall outlet. Never pull by the cord.
- This product is for household use only; it is not intended for commercial use.

CAUTION! Modifications to the product by the user/s may cause damage to property or persons and will be deemed as not in accordance with the instruction manual and no liability for damage will be accepted by the manufacturer.

WARNING! If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.

NOTE! The first time the product is operated a slight odour may develop. This is entirely harmless and will soon dissipate. Ensure there is adequate ventilation when using the product.

CAUTION! HOT SURFACE!

The surfaces are likely to get hot during use. The temperature of the outer surface may be high when the product is working. Please do not touch the outer surface by hand. Use the handles.

WARNING!


- To reduce the risk of electric shock, do not immerse or expose the product, or cord to rain, moisture, or any other liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event where the product is dropped into water, turn off the power at the power outlet and remove the plug immediately.

DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER SUPPLY.

- It is important to note that the product will have to be inspected by a qualified electrician before using it again.

SAVE THESE INSTRUCTIONS

Parts Guide

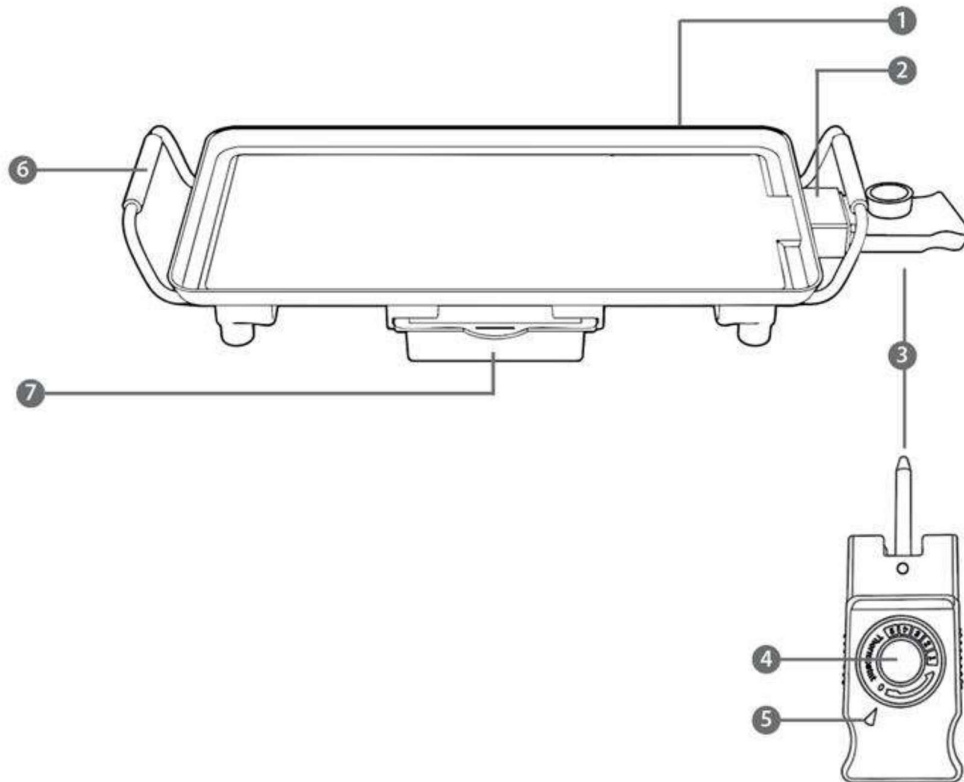

1. Teppanyaki grill
2. Temperature control probe socket
3. Temperature control probe
4. Thermostat dial
5. Indicator light
6. Cool touch handles
7. Drip tray

Instructions

GETTING STARTED

Check the product and parts guide.

NOTE!

Risk of damage!

If opening the packaging with a sharp knife or other pointed object, be careful to avoid damaging the products surface.

- Proceed carefully with opening the packaging.
- 1. Remove all packaging from the product.
- 2. Check that the delivery is complete (see Parts Guide).
- 3. Unwind the power cord to its full length and inspect the cord and plug for any damage. Do not use the product if these parts are damaged. In the case of damage, contact Customer Service for further assistance.
- 4. Place the product on a level, dry and heat-resistant surface ready to use. Ensure you read all instructions carefully and keep them for future use.
- 5. Wipe the non-stick cooking surface with a damp cloth (not wet) prior to first use to remove any dust and residue.
- 6. Slide the drip tray out from the underside of the grill. Wash in warm soapy water and dry thoroughly.
- 7. Return the drip tray to the grill by sliding it into place on the slots on the underside of the grill.

NOTE: Do not use any abrasive cleaners as these may scratch the surface.

WARNING! DO NOT immerse the grill in water. It is important to keep the inlet connectors out of the water. If the inlet connectors do become wet, ensure that they are thoroughly dried and clean before use.

NOTE: When the appliance is used for the first time, a slight odour may develop. This is entirely normal and will soon dissipate. Ensure there is adequate ventilation when using the product.

OPERATION

1. Remove the product from the packaging. Please save the packaging for easy storing.
2. Place the product on a flat, level and heat-resistant surface away from windows, drapes, curtains, blinds, and wet areas.
3. Insert the temperature control probe into the temperature control probe socket, ensure that the thermostat dial facing up and the thermostat set to "0" (OFF) before plugging in.
4. Plug the product into the power outlet socket and turn it on.

5. Set the thermostat dial to the desired temperature setting. The indicator light on the temperature control probe will light up and will switch off once the desired temperature has been reached. The indicator light will switch ON and OFF as the grill maintains the ideal cooking temperature, this also prevents overheating.

NOTE! The grill has a non-stick cooking surface. Only use wooden or heat proof plastic cooking utensils. Metal utensils should not be used as they may damage the non-stick cooking surface.

6. Once the grill has heated to the desired temperature, place food onto the non-stick grill and cook your food.
7. After use, turn the thermostat dial to "0" (OFF) and switch the power off at the power outlet. Unplug the cord from the power outlet by grasping the plug firmly to remove. You should then be able to gently remove the temperature control probe from the temperature control probe socket.
8. **CAUTION!** Only remove the temperature control probe from the grill once it has completely cooled down.
9. Ensure the grill has completely cooled down before moving, cleaning or storing.

Temperature Guide

TEMPERATURE SETTING	TEMPERATURE (APPROX °C)	HEAT GUIDE
1	100°C	LOW
2	130°C	
3	150°C	MEDIUM
4	170°C	
5	200°C	HIGH

NOTE! The temperatures provided should be used as a guide only and may require adjustments to suit the ingredients being cooked and your personal preference.

WARNING! The external surface of the product becomes HOT whilst in use.

CAUTION! Caution should be used when using the product. Always use handles and dials to avoid burns. DO NOT pick up or move the grill while it is in use.

Troubleshooting

PROBLEM	SOLUTION
Grill will not turn on; indicator light is not illuminating.	Check that the power has been turned on at the wall socket. Check that the temperature control probe has been inserted correctly into the temperature control probe socket on the grill.
Grill is not heating up.	Check that the thermostat dial has been set and increase to a higher temperature.

Cleaning and Maintenance

CAUTION! Risk of short circuit!

If water or other liquids enter the housing, they can cause a short circuit.

- Do not immerse the product, power cable or mains plug in water or other liquids.
- Do not let water or other liquids penetrate the product.

CAUTION! Risk of short damage!

Improper handling of the product can damage the product.

- Do not use any aggressive cleaners, sharp or metal cleaning utensils such as knives, hard scrapers or similar items. These could damage the surfaces.
- Never wash the product in the dishwasher. This would destroy the product.

Cleaning the product

NOTE: Ensure that the product is disconnected from the power outlet socket and cooled down before cleaning.

- Before cleaning, switch the thermostat dial to the "0/OFF" position and ensure that the grill is cool.
- Turn the power off at the mains power outlet socket and remove the plug from the wall by grasping the plug, do not pull on the cord.
- Remove the temperature control probe from the grill when the grill is cool. Do not place the temperature control probe in water.

WARNING! DO NOT IMMERSE THE GRILL SOCKET INLET IN WATER OR ANY OTHER LIQUID.

- If the inlet connectors become wet, ensure that they are thoroughly dried before using the grill again.
- Do not use abrasive cleaners or scouring pads to clean the grill as they may damage the non-stick coating. The grill can be washed in warm soapy water to remove food or oil residue. Ensure that the grill is cool before cleaning.
- **CAUTION! DO NOT** allow the temperature control probe socket inlet to become wet.

- The temperature control probe can be wiped over with a damp cloth and wiped dry if required.
- Slide the drip tray from its slots. Clean in warm soapy water and dry thoroughly with a clean cloth.
- Return the drip tray to the grill by sliding it into the slots on the underside of the grill.

WARNING! The product and parts are **NOT** Dishwasher Safe.

Storage

All parts must be completely dry before storing.

- Always store the product in a dry and clean area.
- Protect the product from direct sunlight.
- Store the product so that it is not accessible to children.
- Avoid storing the temperature control probe on the grill as it may scratch the non-stick surface of the grill.

Technical Specifications

Model Number	ATG505
Power Supply	220-240V~ 50-60Hz
Rated Power	1500W

WARRANTY

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/-Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us