


210 mm

148 mm


anko

Windscreen Cleaning Kit Instruction Manual

Keycode: 43-697-731

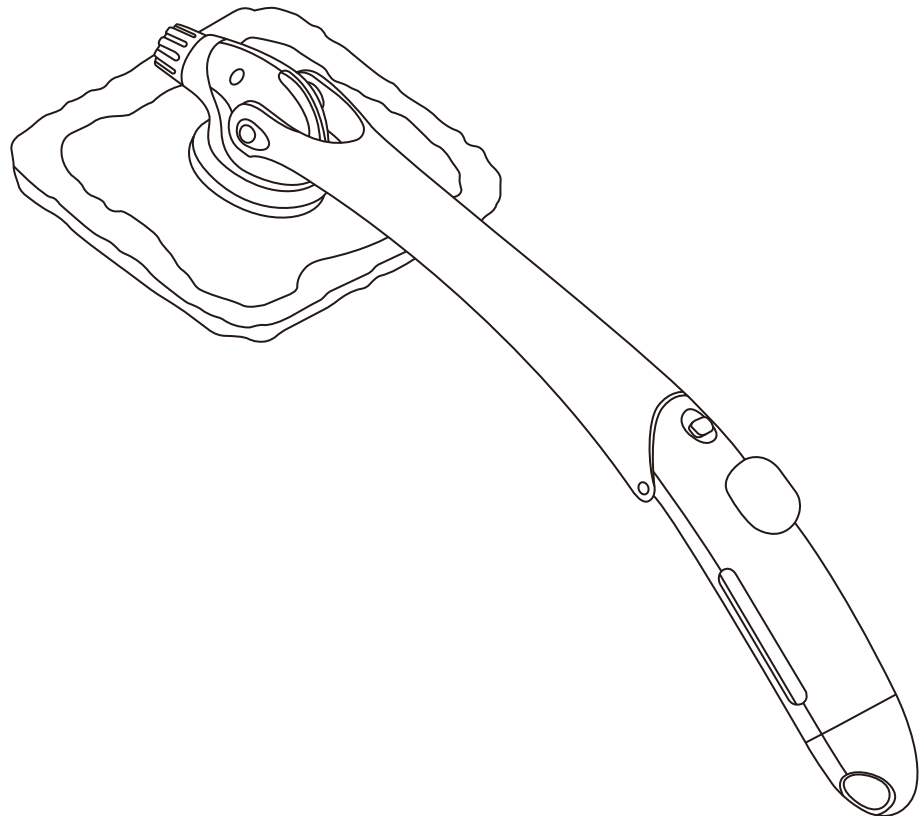

PRODUCT COMPONENTS


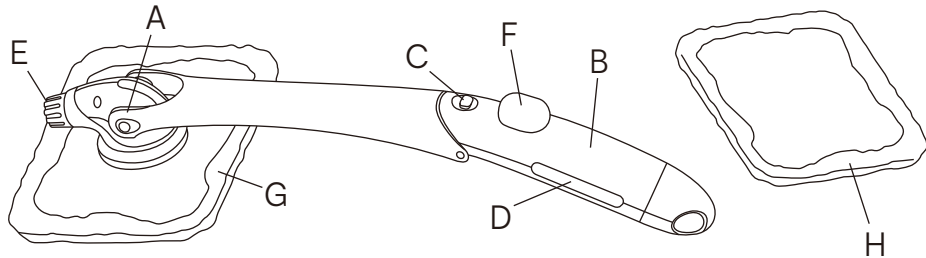


- A. Pivoting Head
B. Water Chamber
C. Water Chamber Folding Button
D. Water Indicator Windows
E. Water Sprayer
F. Microfiber Cleaning Towel
G. Replacement Cleaning Towel
H. Replacement Cleaning Towel

HOW TO ASSEMBLE



1. Lift the water chamber upward until it clicks securely into place. Ensure the water chamber is fully locked before use.
2. Stretch the microfibre cleaning towel evenly over the pivoting head until fully fitted.

NOTE: The microfibre cleaning towel is pre-installed. One replacement towel is included.

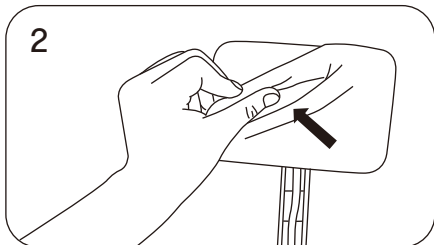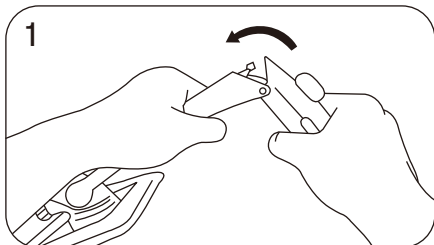



HOW TO FILL WATER CHAMBER

1. Hold the cleaner upright with the water chamber facing upward. Slowly twist the water chamber cap counter-clockwise to open.
2. Fill the chamber with clean water only until the level is visible through the water indicator windows.
3. Replace the cap and twist clockwise until fully closed and secure.

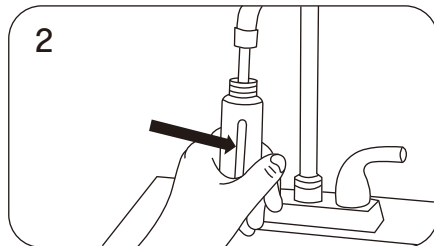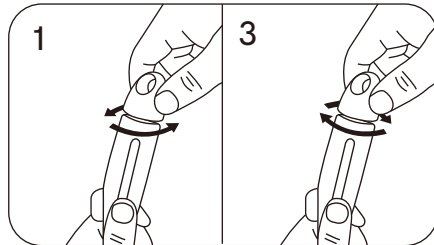

HOW TO USE

1. Hold the cleaner with the spray nozzle facing away from your face and body. Press the water sprayer button 3-4 times to prime the spray.
2. Lightly mist the interior windscreen surface.
3. Rotate the pivoting head so the microfibre towel faces the glass.
4. Using light to moderate pressure only, wipe the surface using a back and forth motion.

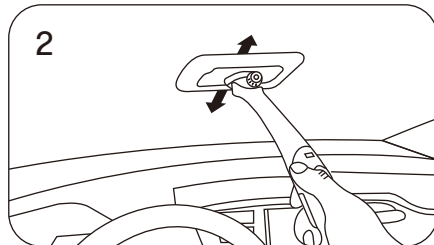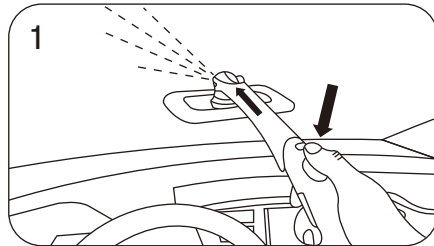

NOTE: Do not apply excessive pressure. Excess force may damage the folding button or water chamber.

WARNING / PRECAUTIONS

KEEP OUT OF REACH OF BABIES AND CHILDREN.
THIS PRODUCT IS NOT A TOY.
DO NOT USE WHILE DRIVING OR OPERATING A VEHICLE.
FOR CLEANING INTERIOR WINDSCREEN ONLY. NOT SUITABLE FOR EXTERIOR OR OUTDOOR USE.
DO NOT SPRAY TOWARD EYES OR FACE.
USE WATER ONLY. DO NOT ADD CHEMICALS, DETERGENTS, OR CLEANING SOLUTIONS TO THE WATER CHAMBER.
DO NOT APPLY EXCESSIVE PRESSURE DURING USE.
DO NOT PLACE THE MICROFIBRE CLEANING TOWEL IN AN AUTOMATIC CLOTHES DRYER.
ENSURE THE WATER CHAMBER CAP IS SECURELY CLOSED BEFORE USE.

CARE & MAINTENANCE

REMOVE THE MICROFIBRE CLEANING TOWEL BEFORE WASHING.
MACHINE WASH ON A GENTLE CYCLE OR HAND WASH USING MILD DETERGENT.
DO NOT BLEACH.
DO NOT TUMBLE DRY. AIR DRY ONLY.
EMPTY ANY REMAINING WATER FROM THE WATER CHAMBER AFTER USE.
ENSURE ALL PARTS ARE CLEAN AND COMPLETELY DRY BEFORE STORAGE.
STORE IN A COOL, DRY PLACE.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567