

8+ YEARS

# REMOTE CONTROL MEGA REX




## PACKAGE CONTENTS

- Mega Rex
- Remote Control
- USB Charger
- Tail
- 3.7V 500mAh Rechargeable Battery

## IMPORTANT SAFETY PRECAUTIONS


- READ ALL INSTRUCTIONS BEFORE USING YOUR MEGA REX.
1. Do not use your mega rex near water. Clean using a soft cloth or paper towel.
  2. Do not place your mega rex on any wet surfaces.
  3. Do not allow children under age eight to play with your mega rex without adult supervision.
  4. Do not expose your mega rex to excessive heat, flames or fire.
  5. Always press all buttons or switches carefully.
  6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
  7. Do not expose your mega rex to temperatures above 40°C. Keep out of direct sunlight.
  8. Do not drop, puncture or expose your mega rex to excessive trauma.
  9. Your mega rex is not intended for commercial use.

## TAIL INSTALLATION METHOD

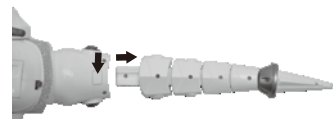


After using the mega rex, you can hold the button at the bottom to remove the tail.

## MEGA REX

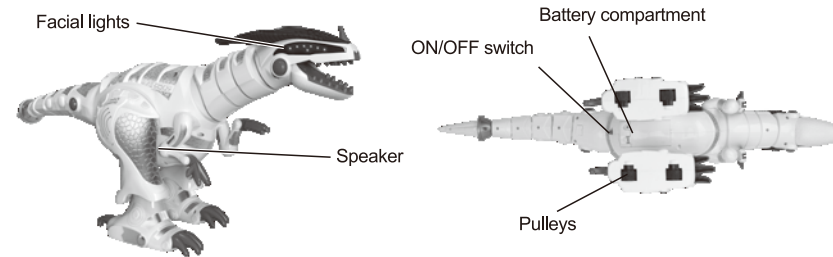


## REMOTE CO

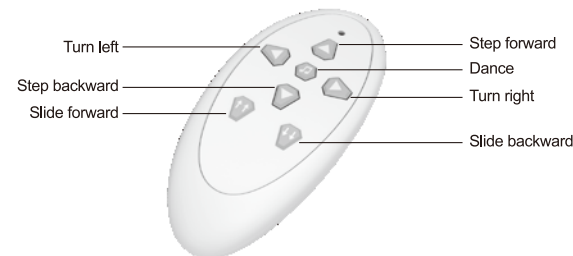

## INSERTING BATTERIES


### Mega rex

1. Unscrew to open battery cover, connect the rechargeable battery with connector. (The battery connector will only fit in one way. Do not force the connectors together).
  2. Replace battery cover.
- Attention: Remove rechargeable battery after you have finished using your product.

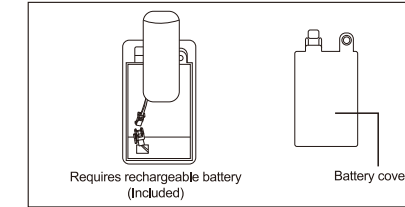


### Remote control

1. Unscrew to open battery cover, insert 2 x 1.5V AAA batteries.
  2. Replace battery cover.
- Attention: Remove batteries after you have finished using your product.

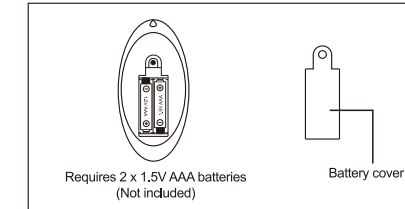

## LITHIUM BATTERY CHARGE INSTRUCTIONS

- Attention: Do not charge battery immediately after each play, let the battery cool down for a while.
1. Turn off mega rex.
  2. Unscrew to open the battery cover and separate the rechargeable battery from the connector.
  3. Connect the USB charging cable with rechargeable battery first. (The battery connector will only fit in one way, do not force the connectors together), then plug the large end of the USB cable into a 5V.D.C. 2A charger (not supplied) or USB port only. The LED light will light up when charging.
  4. The LED light extinguishes after it has finished charging. Disconnect the USB charging cable from the USB port and then disconnect the rechargeable battery with USB charging cable.

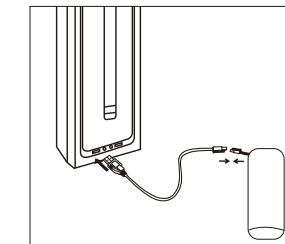

## POWERING ON YOUR MEGA REX

Once you have inserted batteries into your mega rex and remote control, you can go ahead and power on your mega rex.

To do so, slide the ON/OFF switch located on the bottom of the mega rex to the ON position.

When you have finished playing with your mega rex, slide the ON/OFF switch to the OFF position.

NOTE: When your mega rex is running low on power, it will stop. Once the batteries are completely depleted, charge the lithium battery and replace the batteries of the remote control as soon as possible to continue use.

## MOVING YOUR MEGA REX

You can use your remote control to move your mega rex around in different directions.

By pressing the turn left/right button, your mega rex will turn left/right.



Continuing to hold/press the turn left/right button, your mega rex will turn left/right all the time.

By pressing the step forward/backward button once, the mega rex will walk forward/backward for a distance.

Continuing to hold/press the step forward/backward button, the mega rex will walk forward/backward all the time.



By pressing the slide forward/backward button once, the mega rex will slide forward/backward for a distance.

Continuing to hold/press the slide forward/backward button, the mega rex will slide forward/backward all the time.

By pressing the dance button, the mega rex will dance for a while.



**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

**WARNING:** THE BATTERY CHARGER USED WITH THE ELECTRIC TOY SHALL BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, PLUG, ENCLOSURE OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS, AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

**WARNING:** THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

**WARNING:** THE TOY IS ONLY TO BE CONNECTED TO CLASS II EQUIPMENT BEARING THE SYMBOL.

**WARNING: CHOKING HAZARD**  
SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

**CAUTION:** THE PRODUCT HAS A RECHARGEABLE LITHIUM-ION BATTERY. ONLY CHARGE THE PRODUCT BY PLUGGING THE LARGE END OF THE USB CABLE INTO A 5V.D.C. 2A CHARGER (NOT SUPPLIED) OR USB PORT ONLY. ONLY CHARGE THE PRODUCT USING SUPPLIED CHARGING CABLE.

**PRODUCT MAY VARY FROM THE IMAGE SHOWN. PLEASE KEEP PACKAGING FOR FUTURE REFERENCE. READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT. PERFORMANCE TIPS: DO NOT DRIVE THE VEHICLE THROUGH WATER. DO NOT DRIVE THE VEHICLE INTO ANY HARD OBJECT.**